

Splenssy UUZ4451793443574TO

Splenssy 2.8-inch LCD Digital Door Viewer Instruction Manual

Model: UUZ4451793443574TO

1. INTRODUCTION

The Splenssy 2.8-inch LCD Digital Door Viewer provides enhanced security and convenience for your home. This digital peephole camera allows you to clearly see visitors on its internal LCD screen, offering a wider view than traditional peepholes. It features photo-shooting capabilities, night vision, and built-in memory for visitor records, ensuring you are always aware of who is at your door.

2. PRODUCT OVERVIEW & KEY FEATURES

The Splenssy Digital Door Viewer is designed with user-friendly features to enhance your home security.

- **2.8-inch LCD Screen Display:** Provides a clear and easy-to-view display of visitors at your door.
- **Photo Shooting:** Automatically captures images when the doorbell is pressed, or manually take photos by pressing the power key.
- **Night Vision:** Equipped with 2pcs 850nm IR lights for clear visibility in low-light conditions.
- **Built-in Memory:** Stores photos in a continuous loop, eliminating the need for an external memory card.
- **Wide Viewing Angle:** A 90-degree lens offers a broad perspective, ensuring you don't miss any activity at your doorstep.
- **Easy Power Supply:** Operates on 4 AAA batteries (not included) with an easily accessible battery compartment.



Image: The 2.8-inch LCD screen displaying a visitor's face, highlighting the clear view provided by the device.

Wide Viewing Angle

90-degree wide-angle lens

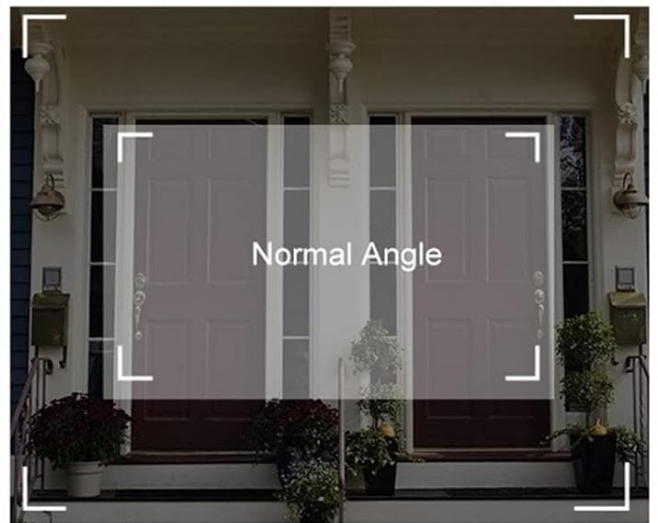 
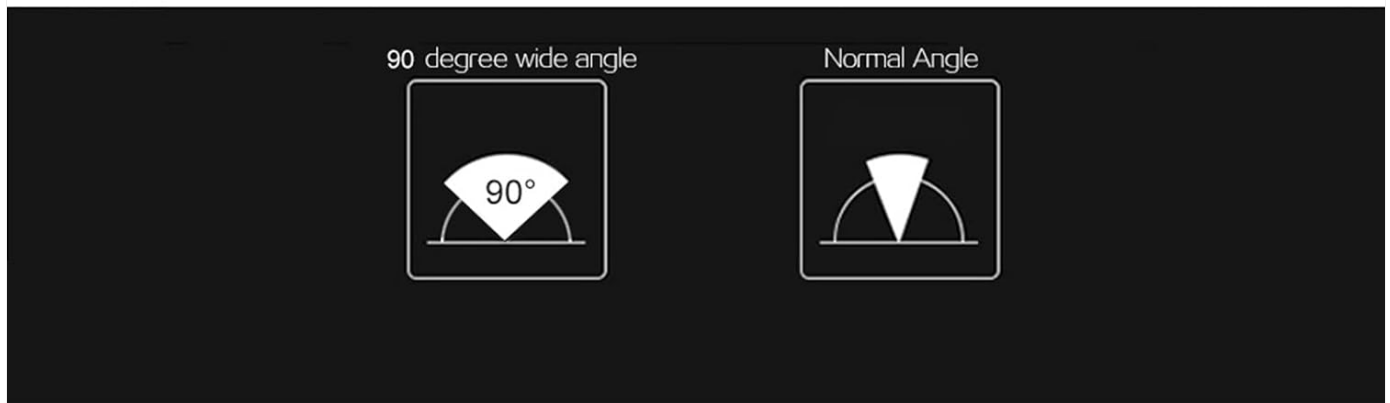 


Image: Diagram illustrating the 90-degree wide viewing angle compared to a normal angle, showing a broader coverage of the door area.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- Indoor Display Unit (with 2.8-inch LCD screen)
- Outdoor Camera Unit (Peephole)
- Mounting Bracket
- Screws (various lengths for different door thicknesses)
- User Manual



Image: An illustration showing the indoor unit, outdoor unit, mounting screws, and user manual included in the package.

4. SPECIFICATIONS

Feature	Detail
Model Number	UUZ4451793443574TO
Screen Size	2.8 inches LCD
Viewing Angle	90 degrees
Night Vision	Yes (2pcs 850nm IR Lights)
Memory	Built-in, cyclic storage
Power Supply	4 x AAA batteries (not included)
Door Thickness Support	35-100mm
Door Hole Diameter Support	14-35mm
Product Dimensions (Indoor Unit)	5 x 2.71 x 0.7 inches
Item Weight	7.8 ounces
Manufacturer	Splenssy

5. INSTALLATION GUIDE

Follow these steps to install your Digital Door Viewer:

- 1. Prepare the Door:** Ensure your door has a peephole hole with a diameter between 14-35mm. The door thickness should be between 35-100mm.
- 2. Install Outdoor Camera:** Insert the outdoor camera unit through the peephole from the outside of the door. Ensure the ribbon cable passes through to the inside.
- 3. Attach Mounting Bracket:** From the inside, slide the mounting bracket over the ribbon cable and align it with the outdoor camera unit. Secure it with the appropriate screws.
- 4. Connect Indoor Unit:** Connect the ribbon cable from the outdoor camera to the connector on the back of the indoor display unit.
- 5. Mount Indoor Unit:** Align the indoor display unit with the mounting bracket and slide it down to secure it.

6. **Insert Batteries:** Open the battery cover on the side of the indoor unit and insert 4 AAA batteries (not included), observing polarity. Close the cover securely.

Easy to install

Support door thickness: 35-100mm

Suitable for door hole diameter 14-35mm

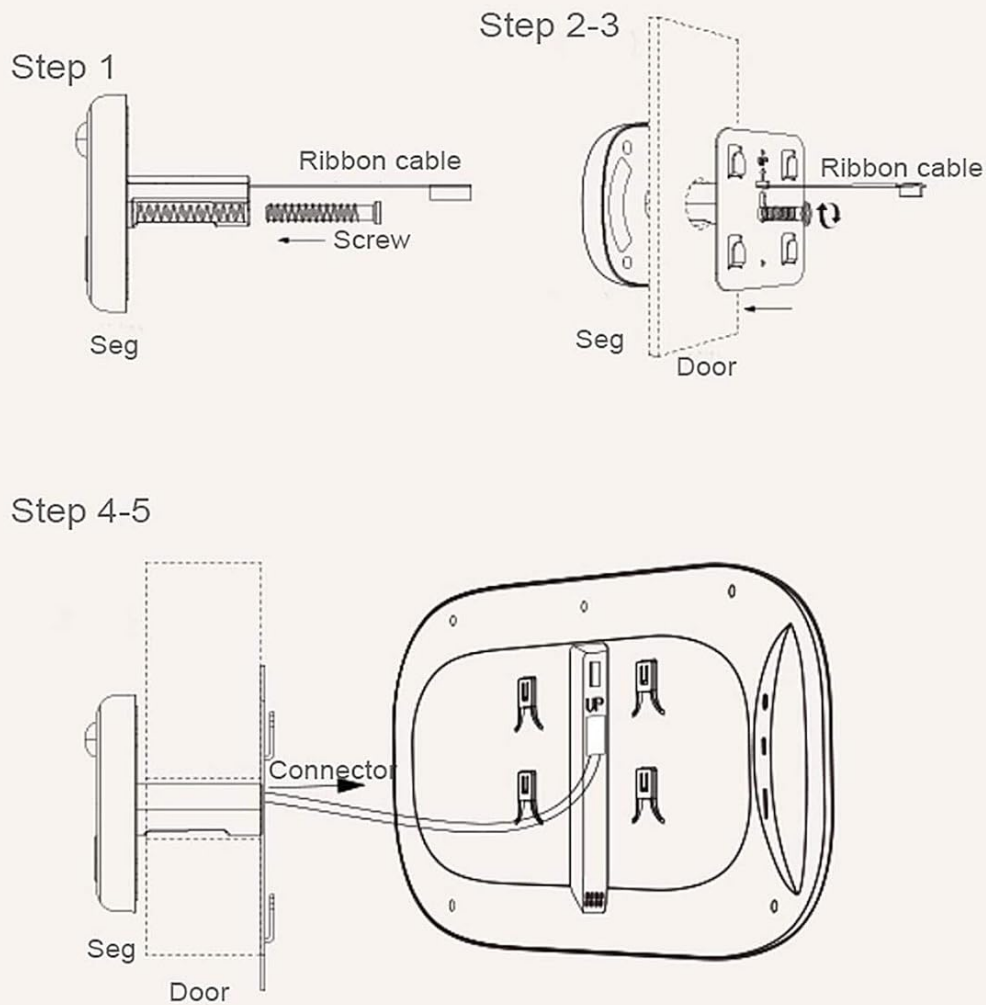 


Image: Step-by-step diagram showing how to install the outdoor camera, mounting bracket, and indoor unit.



Image: View of the back of the indoor unit and the outdoor unit's ribbon cable, illustrating the connection point.

6. OPERATION GUIDE

Learn how to use your Digital Door Viewer effectively:

- **Power On/Off:** Press the power button (typically located on the indoor unit) to turn the device on or off.
- **View Live Feed:** When the device is on, the LCD screen will automatically display the live view from the outdoor camera.
- **Photo Shooting:**
 - When a visitor presses the doorbell button on the outdoor unit, the indoor unit will ring, and the screen will automatically turn on and capture a photo.
 - To manually take a photo, press the designated photo button (or the power key, as per product features) while the screen is active.
- **Review Photos:** Use the control buttons on the indoor unit to navigate through stored photos. Photos are stored in a loop, meaning older photos will be overwritten by new ones when the memory is full.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device:

- **Battery Replacement:** Replace all 4 AAA batteries when the power indicator shows low battery. Always use new batteries of the same type and ensure correct polarity.
- **Cleaning:** Wipe the screen and camera lens with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the surfaces.
- **Environmental Conditions:** Keep the device away from extreme temperatures, direct sunlight, and excessive moisture to prevent damage.

Power Supply Mode

Powered by 4 AAA batteries (not included), just open the battery cover on the side of the indoor host, no need to remove the doorbell. The screen supports power display.



Image: The battery compartment on the side of the indoor unit, showing where to insert 4 AAA batteries.

8. TROUBLESHOOTING

If you encounter issues with your Digital Door Viewer, refer to the following solutions:

- **No Display/Device Not Powering On:**

- Check if the 4 AAA batteries are inserted correctly with the proper polarity.
- Ensure the batteries have sufficient charge; replace them if necessary.
- Verify that the battery cover is securely closed.
- Confirm the ribbon cable connection between the indoor and outdoor units is firm and not damaged.

- **Poor Image Quality/Night Vision Issues:**

- Gently clean the camera lens on the outdoor unit with a soft cloth to remove dust or smudges.

- Ensure there are no physical obstructions blocking the camera's view.
- For night vision, ensure the area directly in front of the camera is not excessively bright, which can interfere with IR activation.

- **Doorbell Not Ringing/Photo Not Taken Automatically:**

- Check the battery level, as low power can affect these functions.
- Ensure the outdoor doorbell button is not stuck or damaged.
- Verify all internal connections are secure.

- **Cannot See Visitors Clearly (Distorted/Blurred Image):**

- Clean the LCD screen on the indoor unit.
- Ensure the outdoor camera lens is clean and free from condensation.
- If the issue persists, ensure the outdoor unit is installed flush and correctly in the peephole.

9. WARRANTY AND SUPPORT

This Splenssy Digital Door Viewer comes with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided by your retailer or the manufacturer's official website. Please retain your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

