

okulaku K12

okulaku K12 10.1-inch Kids Tablet User Manual

Model: K12

INTRODUCTION

Welcome to the okulaku K12 10.1-inch Kids Tablet user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new tablet. Designed for children, the okulaku K12 offers a safe and engaging digital experience with parental control features and pre-installed educational content.

WHAT'S IN THE BOX

Upon opening your okulaku K12 Kids Tablet package, please verify that all the following items are included:

- 1x okulaku K12 Kids Tablet
- 1x Tablet Charger
- 1x Type-C Cable
- 1x User Manual (this document)

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's charging port and the charger to a power outlet. The charging indicator will show the charging status.

2. Powering On/Off

To power on the tablet, press and hold the Power Button located on the side of the device until the screen illuminates. To power off, press and hold the Power Button, then select 'Power Off' from the on-screen options.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your preferred language, connecting to a Wi-Fi network, and setting the date and time.

4. Setting Up Parental Controls (iWawa App)

The okulaku K12 tablet features pre-installed iWawa Kid's software for parental control. This allows you to manage content, screen time, and access to applications. Follow the on-screen instructions within the iWawa app to create profiles for your children and customize their digital environment.



Image: The tablet's parental control interface, allowing customization of content and screen time for children.

OPERATING INSTRUCTIONS

1. Navigating the Interface

The tablet runs on Android 11.0 OS. Use touch gestures to navigate: tap to select, swipe to scroll, and pinch to zoom. The home screen provides access to installed applications and widgets.

2. Connecting to Wi-Fi

1. Go to **Settings**.

2. Select **Network & Internet**.
3. Tap on **Wi-Fi** and turn it on.
4. Select your desired network from the list and enter the password if prompted.

3. Managing Applications

The tablet comes with pre-installed educational apps via iWawa. You can also download additional applications from the Google Play Store. Ensure parental controls are configured to manage app access for children.



Image: The tablet supports various entertainment and educational applications, accessible through the Google Play Store and iWawa.

4. Using the Camera

The tablet is equipped with dual cameras (0.3MP front, 2.0MP rear). Open the Camera app to take photos or record videos. Parental controls can restrict camera access if desired.

5. Expanding Storage

The tablet has 32GB of internal storage. You can expand this by up to 512GB using a microSD card (not included). Insert

the microSD card into the designated slot.

6. Using the Kid-Proof Case

The tablet includes a durable, kid-proof case designed to protect against dust, bumps, and drops. The case also features a stable stand for hands-free viewing.

Kid-Proof Case For Hands Free Movies Watching



Image: The protective case with its integrated stand, demonstrating its versatility for hands-free viewing.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals or abrasive materials.

2. Battery Care

To prolong battery life, avoid fully discharging the tablet frequently. Charge the tablet regularly, and if storing for an extended period, ensure it has at least a 50% charge.

3. Software Updates

Periodically check for system updates in the tablet's settings. Keeping the software updated ensures optimal performance and security.

TROUBLESHOOTING

If you encounter issues with your okulaku K12 tablet, refer to the following common problems and solutions:

Problem	Solution
Tablet does not power on	Ensure the tablet is fully charged. Press and hold the power button for 10-15 seconds to perform a forced restart.
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
Applications are slow or freezing	Close unused applications. Clear app cache in Settings > Apps. Restart the tablet. Ensure sufficient storage space.
Short battery life	Reduce screen brightness. Close background apps. Disable Wi-Fi/Bluetooth when not in use. Check for power-intensive apps.
Screen unresponsive	Perform a forced restart by holding the power button. If the issue persists, contact support.

SPECIFICATIONS

The following table details the technical specifications of the okulaku K12 10.1-inch Kids Tablet:

Feature	Specification
Display Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	Quad-core 1.5 GHz (Allwinner)
RAM	2 GB
Internal Storage	32 GB (expandable up to 512GB via microSD)
Operating System	Android 11
Wireless Type	802.11b/g/n Wi-Fi (2.4 GHz)
Bluetooth Version	4.0
Cameras	0.3 MP Front, 2.0 MP Rear
Battery Life	Up to 6 hours (usage dependent)
Battery Capacity	5000mAh

Feature	Specification
Ports	Type-C, TF Card Slot, Headphone Connector
Dimensions (LxWxH)	10.5 x 7.2 x 0.94 inches
Item Weight	1.65 pounds

WARRANTY INFORMATION

The okulaku K12 Kids Tablet comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included in your product packaging or contact customer support.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact okulaku customer support. Visit the official okulaku website for contact details, FAQs, and additional resources.

Online Resources: [okulaku Official Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

