

Timco BSK-1609

User Manual  
TIMCO BSK-1609 2-IN-1 RECHARGEABLE SHAVER TRIMMER

Model: BSK-1609 | Brand: Timco

Introduction

Thank you for choosing the Timco BSK-1609 2-in-1 Rechargeable Shaver Trimmer. This versatile grooming tool is designed for both precise shaving and effective hair trimming, offering convenience and performance. Please read this manual carefully before using the device to ensure safe and optimal operation. Keep this manual for future reference.

Important Safety Information

- Keep this appliance out of reach of children.
- Always observe the recommended charging times to prevent battery damage.
- **Do not use this device with water or immerse it in water.** This product is designed for dry shaving only.
- Do not disassemble or attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- Ensure the charging cable is not damaged before use.

Package Contents

Your Timco BSK-1609 package includes the following items:

- 1 x Timco BSK-1609 Shaver/Trimmer Unit
- 1 x Shaving Head Attachment (Foil Shaver)
- 1 x Hair Cutting Head Attachment (Trimmer)
- 1 x Adjustable Guide Comb (3mm, 6mm settings)
- 1 x Cleaning Brush
- 1 x USB Charging Cable

Product Overview

Familiarize yourself with the components of your Timco BSK-1609 device.



**Figure 1:** Front view of the Timco BSK-1609 unit. This image shows the main body of the shaver with the foil shaving head attached, highlighting its blue and silver design and the power switch.





**Figure 2:** Side view of the Timco BSK-1609 with the hair cutting head attachment. This view illustrates the trimmer head's design and how it integrates with the main unit.



**Figure 3:** Close-up of the power switch. This image details the sliding power switch mechanism, indicating the 'on' and 'off' positions.



**Figure 4:** Close-up of the foil shaver head. This image provides a detailed view of the independent and floating blades designed for a close shave.

## Setup

### Charging the Device

1. Ensure the device is turned off before charging.
2. Connect the USB charging cable to the charging port on the shaver.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. Allow the device to charge for approximately **8 hours** for a full charge.
5. A fully charged battery provides approximately **55 minutes** of cordless use.

## Operating Instructions

### Attaching/Detaching Heads

- To attach a head: Align the desired head (shaving or trimming) with the main unit and press firmly until it clicks into place.
- To detach a head: Gently pull the head upwards while holding the main unit firmly.

### Using the Shaver Head

1. Ensure the shaving head is securely attached.
2. Slide the power switch to the 'on' position.
3. Hold the shaver at a right angle to your skin and move it gently against the direction of hair growth.
4. The independent and floating blades will adapt to your facial contours for a close shave.

### Using the Hair Cutting Head (Trimmer)

1. Attach the hair cutting head to the main unit.
2. If desired, attach the adjustable guide comb (3mm or 6mm) for uniform hair length.
3. Slide the power switch to the 'on' position.
4. Move the trimmer slowly and steadily against the direction of hair growth.

### Using the Pop-up Sideburn Trimmer

- The device features a detachable pop-up trimmer for precise detailing, such as sideburns or beard lines.
- To activate, slide the pop-up trimmer switch (if applicable, refer to Figure 1 for location).
- Use the trimmer carefully for shaping and edging.

## Maintenance

### Cleaning the Device

1. Always turn off and unplug the device before cleaning.
2. Remove the shaving or trimming head.
3. Use the provided cleaning brush to remove hair clippings from the blades and inside the head.
4. **Important:** Do not rinse the device or its heads under water. This product is not waterproof.
5. Wipe the exterior of the device with a dry, soft cloth.
6. Reattach the head after cleaning.

### Storage

- Store the device in a cool, dry place, away from direct sunlight and moisture.
- Keep it out of reach of children.

## Troubleshooting

| Problem                            | Possible Cause                | Solution                                                   |
|------------------------------------|-------------------------------|------------------------------------------------------------|
| Device does not turn on.           | Battery is depleted.          | Charge the device for 8 hours.                             |
| Poor shaving/trimming performance. | Blades are clogged with hair. | Clean the shaving/trimming head thoroughly with the brush. |

| Problem                     | Possible Cause                                       | Solution                                                |
|-----------------------------|------------------------------------------------------|---------------------------------------------------------|
| Device stops during use.    | Battery is low.                                      | Recharge the device.                                    |
| Device makes unusual noise. | Hair caught in blades or head not properly attached. | Clean the blades. Ensure the head is securely attached. |

### Specifications

- **Model:** BSK-1609
- **Brand:** Timco
- **Power Source:** Rechargeable Battery
- **Charging Time:** Approximately 8 hours
- **Operating Time:** Approximately 55 minutes (on full charge)
- **Blade Material:** Stainless Steel
- **Head Type:** Foil (Shaver), Trimmer
- **Special Features:** 2-in-1 functionality, USB charging, Pop-up sideburn trimmer
- **Weight:** 234 Grams
- **Color:** Blue

### Warranty and Support

This product is backed by a **30-day free return policy** from the date of purchase. For any issues, questions, or support needs beyond this period, please contact your retailer or visit the official Timco website for further assistance.

Please retain your proof of purchase for warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0B192JM9B>

More documents and user manuals: <https://manuals.plus/>