



[Manuals.plus](#) /

› [BARNER HOME](#) /

› BARNER HOME Single Frosted Glass Panel Bi-Fold Door Instruction Manual (Model B0B194DTPD)

## BARNER HOME B0B194DTPD

# BARNER HOME Single Frosted Glass Panel Bi-Fold Door Instruction Manual

Model: B0B194DTPD

## INTRODUCTION

---

Thank you for choosing the BARNER HOME Single Frosted Glass Panel Bi-Fold Door. This manual provides essential information for the safe and correct installation, operation, and maintenance of your new door. This bi-fold door is designed to fit openings up to 30 inches in width and 80 inches in height, offering a space-saving and aesthetically pleasing solution for your home. Please read these instructions thoroughly before beginning installation.



Image: A BARNER HOME single bi-fold door with frosted glass panels, installed in a doorway, partially open to show a closet interior with a washing machine.

## SAFETY INFORMATION

---

Please observe the following safety precautions during installation and use:

- Always wear appropriate safety gear, including gloves and eye protection, during installation.
- Keep fingers and hands clear of moving door panels and hinges to prevent pinching.
- Ensure all hardware is securely fastened according to instructions to prevent the door from falling.
- Handle glass panels with care to avoid breakage and injury.
- Do not allow children to play with or hang on the door.
- If any part is damaged, do not proceed with installation. Contact customer support for replacement parts.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning installation. The package should include:

- Door Panel(s) with Frosted Glass
- Top Track
- Upper Pivot Assembly
- Lower Jamb Pivot Assembly
- Hinges (pre-attached or separate)
- Rollers/Guides
- Door Pull/Knob
- Fasteners and Screws
- Detailed Installation Instructions (paper manual)



Eco-friendly  
materials



Anti-  
cracking



Anti-  
warping



Anti-  
deformation

Image: An illustration detailing the key hardware components of a bi-fold door, including the floor guide, hinges, and rollers, with descriptions of their functions.

# SETUP AND INSTALLATION

Careful measurement and adherence to the provided instructions are crucial for proper installation.

## 1. Measure Your Opening

Before purchasing and installing, accurately measure your door opening. The door panel width for this model is 29 11/16 inches (29.45 inches), and the height is 77 3/4 inches. It is designed to fit openings up to 30 inches wide and 80 inches high.

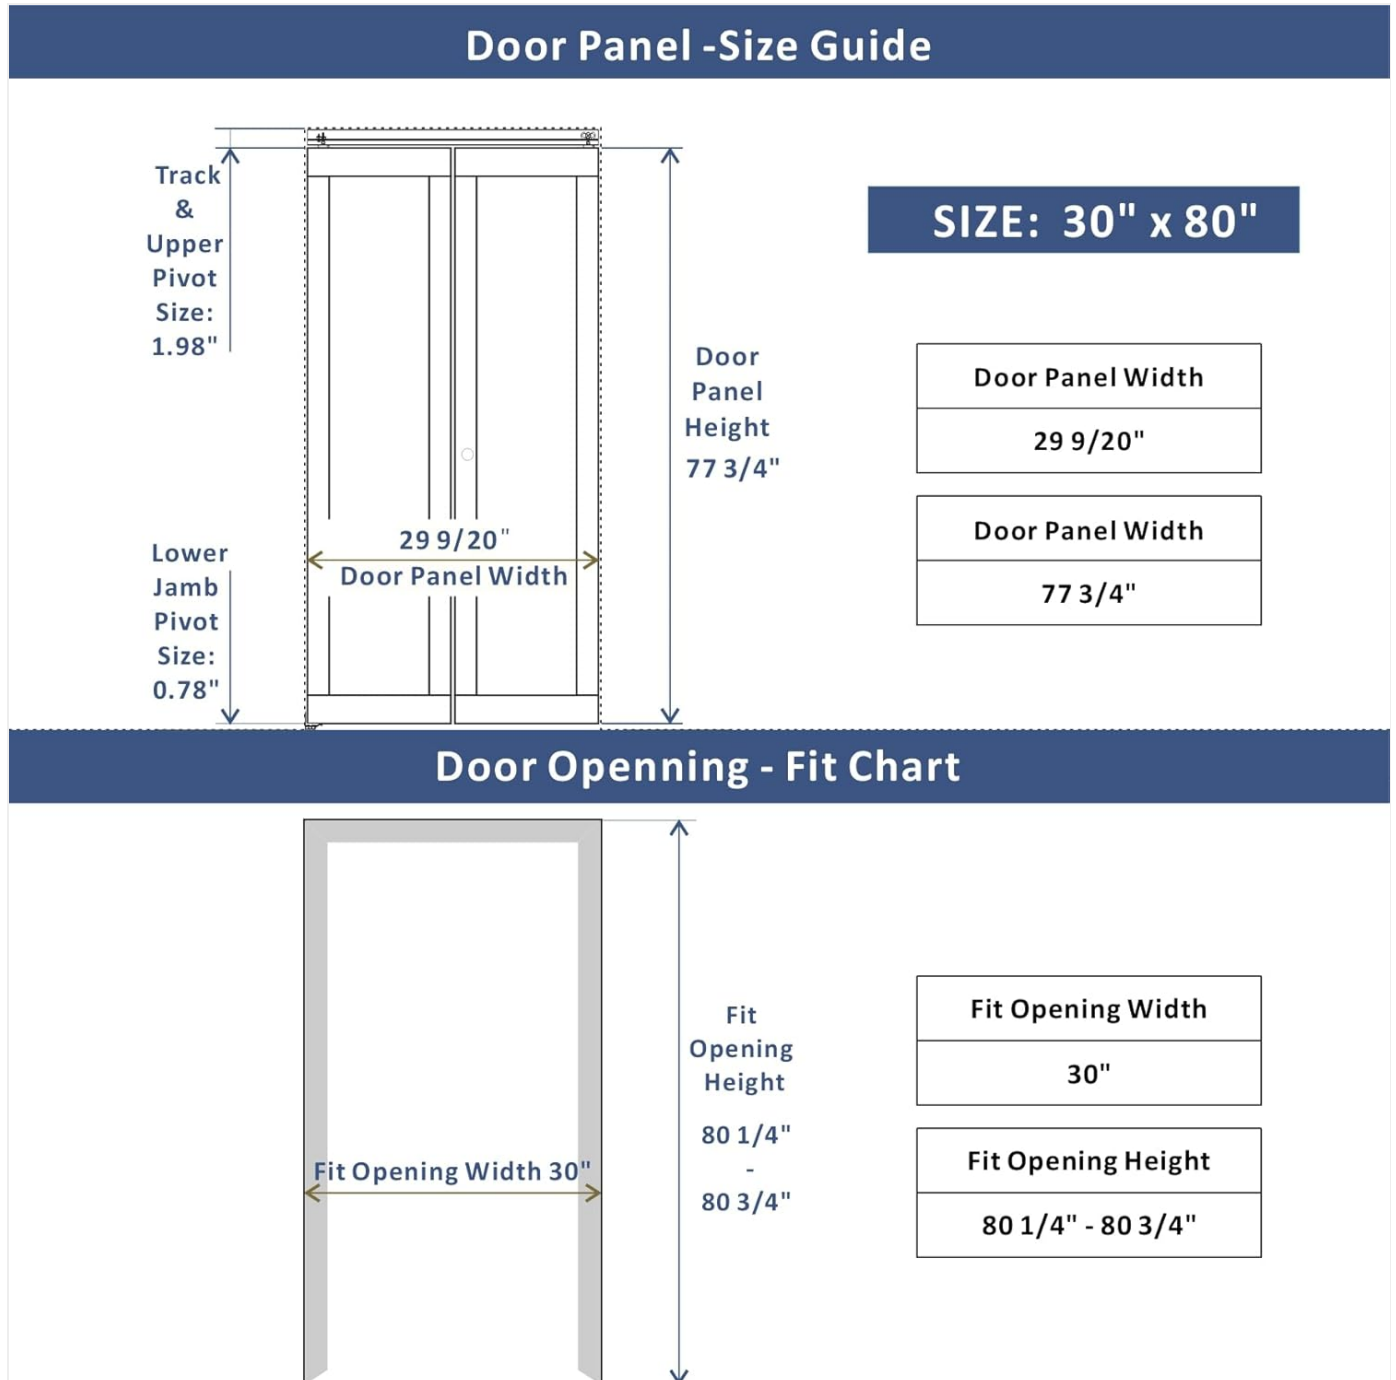


Image: A detailed size guide diagram illustrating the dimensions of the door panel and the required opening size for a 30" x 80" bi-fold door.

## 2. General Installation Steps

Refer to the detailed paper installation instructions included in your package for step-by-step guidance. Key steps typically include:

1. Install the top track securely within the door frame.

2. Attach the upper pivot assembly to the top of the door panel and the lower jamb pivot assembly to the bottom.
3. Insert the door panel into the top track and engage the lower pivot.
4. Install rollers/guides into the top track to ensure smooth movement.
5. Attach the door pull/knob.
6. Adjust the pivots and rollers for proper alignment and smooth operation.

**Important Note:** Some users have reported that the door height may require minor adjustments or aftermarket pivot points for a perfect fit in an 80-inch opening. Proceed slowly and carefully during installation, making small adjustments as needed. If you encounter difficulties, contact BARNER HOME customer support.



Image: A double bi-fold door configuration with frosted glass panels, installed in a wider doorway, showcasing the doors partially open.

## OPERATING YOUR BI-FOLD DOOR

---

Your BARNER HOME bi-fold door is designed for smooth and effortless operation.

- To open the door, gently pull the door pull/knob towards you, allowing the panels to fold inward.
- To close the door, push the door panels back into position until they are fully extended and aligned within the frame.
- Avoid forcing the door if it encounters resistance. Check for obstructions or alignment issues.

## MAINTENANCE

---

Regular maintenance will ensure the longevity and optimal performance of your bi-fold door.

### Cleaning

- **Door Panels (MDF & PVC Covering):** Wipe with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals that could damage the PVC finish.
- **Frosted Glass:** Clean with a standard glass cleaner and a lint-free cloth.
- **Hardware:** Wipe metal components with a dry cloth to remove dust.

### Hardware Check

- Periodically inspect all screws and fasteners to ensure they are tight. Tighten if necessary.
- Check the top track and rollers for any debris that might impede smooth operation. Clean as needed.
- If the door becomes stiff, a small amount of silicone lubricant can be applied to the track and pivot points.

## Frosted Glass Bifold door

Can be used in various areas of a home to enhance the aesthetics.



Bedroom



Study Room



Living room



laundry room

Image: An exploded view diagram showing the construction layers of the door panel, emphasizing its durability and resistance to cracking, warping, and deformation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not close completely or has large gaps.	Incorrect measurements or improper installation/alignment.	Re-check opening measurements. Adjust pivot points and rollers for proper alignment. Ensure the top track is level.
Door sticks or is difficult to open/close.	Debris in track, misaligned rollers, or dry pivot points.	Clean the top track. Inspect rollers for damage. Apply silicone lubricant to the track and pivot points.
Door panels are not stable or wobble.	Loose hardware or damaged hinges.	Tighten all screws and fasteners. Inspect hinges for damage and replace if necessary.

Problem	Possible Cause	Solution
Door is too tall for the opening.	Discrepancy between stated and actual opening height.	This may require purchasing and installing aftermarket bottom pivot points or making adjustments to the door frame. Consult a professional if unsure.

## SPECIFICATIONS

---

Feature	Detail
Brand	BARNER HOME
Model Number	B0B194DTPD
Door Panel Size	29.45" (Width) × 77 3/4" (Height)
Fits Opening Size	Up to 30" (Width) × 80" (Height)
Material	Engineered Wood (MDF) with PVC Covering
Glass Type	Frosted Glass Panel
Item Weight	53.24 Pounds
Product Dimensions	0.83 x 30 x 80 inches (approximate installed dimensions)
Assembly Required	Yes

## SUPPORT AND WARRANTY

---

BARNER HOME is committed to providing quality products and customer satisfaction.

- **Installation Assistance:** If you encounter any installation problems or require further guidance, please contact BARNER HOME customer support directly. Detailed installation instructions are also provided within the product packaging.
- **Damaged or Lost Parts:** In the event of lost or damaged product components, free replacements are available. Please get in touch with our customer service team for assistance.
- **General Inquiries:** For any other questions or concerns regarding your product, our team is available to assist you.

Contact information for BARNER HOME customer support can typically be found on the product packaging or through the retailer where the product was purchased.

