

[Manuals.plus](#) /

› [COLAMY](#) /

› COLAMY Button Tufted Dining Chairs User Manual

## COLAMY A242

# COLAMY Button Tufted Dining Chairs User Manual

Model: A242-Beige-3Sets

## INTRODUCTION

---

Thank you for choosing COLAMY Button Tufted Dining Chairs. This manual provides essential information for the proper assembly, usage, and maintenance of your new dining chairs. Please read these instructions carefully before beginning assembly and retain them for future reference.

## SAFETY INFORMATION

---

For safe use, ensure the chair is placed on a stable, level surface. Do not exceed the maximum weight capacity of 250 lbs. Always assemble the chair according to the instructions provided to ensure stability and prevent injury. Regularly check all connections to ensure they remain tight.

## COMPONENTS LIST

---

Each chair package includes the following components:

- Dining chair body (seat and backrest combined)
- Solid wooden legs (4 per chair)
- Hardware pack (screws, washers, Allen wrench)
- User manual (this document)



Figure 1: Chair components and basic assembly diagram. Ensure all parts are present before starting.

## SETUP AND ASSEMBLY

---

Assembly is required for these dining chairs. It is recommended to have a clear, flat workspace. Please follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Locate the legs and hardware pack, which are typically stored within the seat bottom.
2. **Attach Seat to Back:** Align the seat portion with the backrest. Secure them together using the provided screws. Ensure the screw holes are properly aligned. If fabric is impeding the screw holes, carefully trim it away.
3. **Attach Front Legs:** Attach the front legs to the seat. Pay attention to the orientation of the legs; they should extend outwards to the edge of the chair for proper stability. If a leg seems misaligned, try rotating it 180 degrees.
4. **Attach Rear Legs:** Attach the rear legs to the chair body.
5. **Tighten All Screws:** Once all components are in place, gradually tighten all screws. Do not overtighten.
6. **Check Stability:** After assembly, gently rock the chair to ensure it is stable and all connections are secure.

While assembly is generally straightforward, some users have reported variations in screw hole alignment. Take your time and ensure proper alignment before fully tightening screws. If you are assembling multiple chairs, it may be beneficial to loosely assemble all chairs first to identify any potential alignment issues before fully tightening any screws.



Figure 2: The complete set of six dining chairs after successful assembly.

## OPERATING AND USAGE

---

The COLAMY Button Tufted Dining Chairs are designed for comfortable and stable seating in various indoor settings, including dining rooms, kitchens, and living rooms. Their ergonomic design with a high backrest provides excellent support for extended periods of sitting.

- **Comfortable Seating:** The soft padded cushion seats and high backrest ensure a comfortable experience.
- **Versatile Placement:** Suitable for daily dining, family gatherings, or as accent chairs in other rooms.
- **Floor Protection:** The solid rubberwood legs are equipped with rubber feet to prevent scratching your floors.



Figure 3: Chairs in a dining room setting, showcasing their elegant design.



Figure 4: Detailed view of the tufted button, comfortable sponge seat, and protective footpads.

## MAINTENANCE AND CARE

---

To maintain the appearance and longevity of your COLAMY dining chairs, follow these care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.
- **Stability Check:** Periodically check and tighten all screws and connections to ensure the chair remains stable.

## TROUBLESHOOTING

---

If you encounter any issues during assembly or use, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Difficulty aligning screw holes during assembly.	Fabric obstructing holes; slight manufacturing variations.	Carefully trim any fabric covering the screw holes. Try adjusting the angle of the components slightly while inserting screws. Loosely attach all screws before fully tightening any.
Chair wobbles after assembly.	Screws not fully tightened; uneven leg attachment.	Ensure all screws are tightened securely. Check that legs are attached correctly and fully seated. Adjust footpads if present and adjustable.
Scratches on wooden legs.	Normal wear and tear; handling during assembly.	Minor scratches can often be touched up with a wood repair marker or polish.

## SPECIFICATIONS

---

- **Brand:** COLAMY
- **Model Name:** A242-Beige-3Sets
- **Color:** Beige
- **Product Dimensions:** 17.72"D x 27.17"W x 39.76"H
- **Size:** Set of 6
- **Back Style:** Tufted Back
- **Material:** Fabric (Linen), Solid Rubberwood Legs, Foam Fill
- **Maximum Weight Recommendation:** 250 Pounds
- **Product Care Instructions:** Wipe Clean
- **Included Components:** Dining chair body, user manual



Figure 5: A single dining chair, highlighting its tufted back and sturdy wooden legs.

# Elegant Dining Chair

Brings your decor to life while contours the body for added comfort



## Premium Fabric

Close to nature, breathable



## Solid Wooden Legs

More stable and environmental friendly



Figure 6: The elegant design of the chair, featuring premium fabric and solid wooden legs.

## WARRANTY AND SUPPORT

---

For information regarding product warranty, protection plans, or customer support, please refer to your purchase documentation or contact COLAMY customer service directly. Amazon offers a 30-day return policy for this product.

A detailed User Manual in PDF format is also available for download: [Download PDF User Manual](#)

