

[Manuals.plus](#) /

› [Vorlich](#) /

› Vorlich Universal Magic Remote Control for LG Smart TV User Manual

Vorlich LG-UMRCL

Vorlich Universal Magic Remote Control User Manual

Model: LG-UMRCL

PRODUCT OVERVIEW

The Vorlich Universal Magic Remote Control is designed as a dedicated replacement for LG Smart TVs, offering broad compatibility across various LG TV models. This remote provides essential control functions for your television experience. Please note that this model does not include voice control or mouse pointer functions.



Image: Front and side view of the Vorlich Universal Magic Remote Control, showcasing its ergonomic design and button layout.

SETUP GUIDE

Setting up your Vorlich Universal Magic Remote Control is straightforward and requires no complex programming. Follow these simple steps:

1. **Insert Batteries:** Open the battery compartment on the back of the remote. Insert two (2) AA batteries, ensuring correct polarity (+/-).
2. **Automatic Pairing:** The remote is designed for immediate use with compatible LG Smart TVs. No manual pairing or code entry is typically required. Simply point the remote at your TV and begin using it.

1 Quick & Easy Setup

No programming needed,
insert batteries and enjoy!

2 Effortless Control

Intuitive design for comfortable grip
and seamless TV navigation.

3 Universal Compatibility

Works with various LG TV models,
enhancing your viewing experience.



Image: Visual representation of the remote control highlighting its quick and easy setup, effortless control, and universal compatibility features.

OPERATING INSTRUCTIONS

The Vorlich Universal Magic Remote Control provides intuitive access to your LG Smart TV's functions. Familiarize yourself with the key buttons:

- **Power Button:** Located at the top, used to turn the TV on or off.
- **Number Keypad:** For direct channel input or numerical selections.
- **Volume Control (+/-):** Adjusts the TV's audio volume.
- **Channel Control (Up/Down):** Changes TV channels.
- **Navigation Buttons (Directional Pad & OK):** Used to navigate menus and confirm selections.
- **Home Button:** Accesses the TV's Smart Home dashboard.
- **Back Button:** Returns to the previous screen or menu.
- **Hotkeys (Netflix, Prime Video, Movies):** Direct access buttons for popular streaming services.

- **Guide Button:** Opens the electronic program guide.

Important Note: This remote control model does **NOT** support voice control or mouse pointer (on-screen cursor) functions. All operations are performed via button presses.



Image: Detailed view of the remote control highlighting key functional areas such as the On/Off button, keypad, volume controls, joystick (directional pad), home button, and dedicated hotkeys for streaming services.



Video: An official product video demonstrating the features and usage of the Vorlich LG Magic Remote Control for LG Smart TVs.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning.

- Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
 - **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your Vorlich Universal Magic Remote Control, try the following steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
 - Point the remote directly at the TV.
- **Specific Buttons Not Working:**
 - Clean around the button with a dry cotton swab to remove any debris.
 - If the issue persists for a specific button, it might indicate a hardware fault.
- **No Voice Control or Pointer Function:**
 - As stated in the product description, this remote model does not support voice control or mouse pointer functions. This is normal operation for this specific remote.

If troubleshooting steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.28 x 1.57 x 1.18 inches
Item Weight	3.17 ounces
Item Model Number	LG-UMRCL
Batteries Required	2 AA batteries
Brand	Vorlich
Special Feature	Infrared (IR) Technology
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	LG Smart Televisions
Manufacturer	Vorlich
Country of Origin	USA

WARRANTY AND SUPPORT

Your Vorlich Universal Magic Remote Control comes with a **Rock Solid 365 Day Warranty**. This warranty covers manufacturing defects and ensures peace of mind for a full year from the date of purchase. Registration may be required to activate the warranty.

For any questions, technical assistance, or warranty claims, please contact our Western-based customer support team. Refer to the product packaging or the official Vorlich website for specific contact details. We are committed to providing excellent service and support for your Vorlich product.

© 2024 Vorlich. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question