



[Manuals.plus](#) /

› [Fokimdo](#) /

› Fokimdo Magnetic Wireless Power Bank (Model PN-W27) Instruction Manual

Fokimdo PN-W27

Fokimdo Magnetic Wireless Power Bank (Model PN-W27) Instruction Manual

Model: PN-W27

INTRODUCTION

Thank you for choosing the Fokimdo Magnetic Wireless Power Bank. This ultra-thin 5000mAh portable charger is designed to provide convenient and efficient power to your iPhone 14/13/12 series devices, as well as other compatible devices. Featuring strong magnetic attachment, a versatile foldable stand, and multiple charging options, this power bank is an ideal companion for on-the-go charging and media viewing.

WHAT'S IN THE BOX

- 1 x Fokimdo Magnetic Wireless Power Bank (PN-W27)
- 1 x USB Type-C Cable
- 1 x User Manual



Image: The contents of the product packaging, including the magnetic wireless power bank, a USB Type-C charging cable, and the user manual.

PRODUCT OVERVIEW

The Fokimdo Magnetic Wireless Power Bank (PN-W27) combines advanced charging technology with a user-friendly design. Key features include:

- **Magnetic Wireless Charging:** Equipped with 17 powerful NdFeB magnets for secure attachment and efficient wireless charging for iPhone 14/13/12 series.
- **Ultra-Thin & Portable:** At just 0.5 inches (13mm) thin, it's designed for easy portability and single-handed use.
- **Foldable Stand:** A unique leather stand allows for vertical or horizontal phone placement, doubling as a finger buckle for secure handling.
- **Dual-Port Output/Input:** Features a USB-C port for both input and output, and a Lightning input for charging the power bank.
- **LED Indicators:** Clear LED lights display battery status and wireless charging activity.
- **Premium Build:** Utilizes a safer Lithium-cobalt battery and a flame-retardant ABS+PC outer shell with a rubber skin-feel oil coating for durability and comfort.



Image: A diagram showing the various ports and indicators on the power bank, including the magnetic wireless charging area, USB-C port, Lightning port, power button, and LED battery status lights.

SETUP

Charging the Power Bank

1. Connect the provided USB Type-C cable to the power bank's USB-C input/output port.
2. Plug the other end of the USB Type-C cable into a compatible power adapter (not included) or a USB power source.
3. Alternatively, you can use a Lightning cable to charge the power bank via its dedicated Lightning input port.
4. The LED battery indicator lights will flash, showing the charging progress. All four lights will illuminate steadily when the power bank is fully charged.

It is recommended to fully charge the power bank before its first use.

OPERATING INSTRUCTIONS

1. Magnetic Wireless Charging

1. Ensure your iPhone (14/13/12 series) is MagSafe compatible. For optimal magnetic attachment, use a MagSafe-compatible phone case or no phone case.
2. Press the power button on the side of the power bank once to activate wireless charging. The wireless charging indicator (small LED next to the power button) will light up.

3. Align the power bank with the back of your iPhone. The magnets will snap into place, and your iPhone will begin charging wirelessly.
4. The LED battery indicators on the power bank will show its remaining charge.



Image: The power bank magnetically attaching to an iPhone, initiating wireless charging.

2. Wired Charging (USB-C Output)

1. Connect your device to the power bank's USB-C output port using a compatible USB-C cable.
2. Press the power button once to initiate charging.
3. The LED battery indicators will show the remaining charge.

3. Using the Foldable Stand

1. Gently pull out the integrated leather strap on the back of the power bank.
2. Adjust the strap to form a triangular stand. You can position your phone vertically or horizontally for optimal viewing angles while charging.
3. The strap can also be used as a finger buckle for a more secure grip on your phone while the power bank is attached.

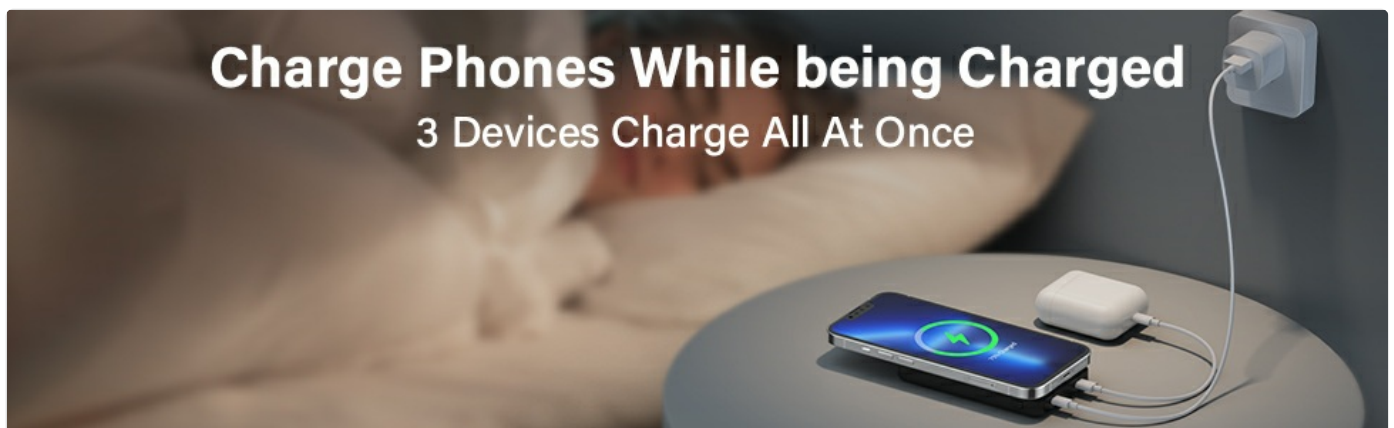


Image: Illustrations showing the power bank's foldable stand supporting a phone in vertical and horizontal orientations, and being used as a finger grip.

4. LED Battery Indicator

The LED lights on the side of the power bank indicate the remaining battery capacity:

- 4 LEDs: 75-100% charge
- 3 LEDs: 50-75% charge
- 2 LEDs: 25-50% charge
- 1 LED: 0-25% charge (recharge power bank soon)

A separate small LED indicates active wireless charging.

MAINTENANCE

- Keep the power bank dry and away from moisture.
- Avoid extreme temperatures (hot or cold) to prolong battery life.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Solution
Power bank not charging	Ensure the charging cable is securely connected to both the power bank and the power source. Try a different cable or power adapter.
Device not charging wirelessly	Press the power button to activate wireless charging. Ensure your phone is MagSafe compatible and properly aligned. Remove any non-MagSafe cases that may interfere with magnetic connection.
Weak magnetic attachment	Ensure your phone case is MagSafe compatible or remove the case. Thick or non-magnetic cases can weaken the magnetic connection.
Slow charging speed	Ensure you are using a compatible power adapter for charging the power bank. For wireless charging, ensure proper alignment and minimal interference from phone cases.
Power bank overheats	Discontinue use immediately. Overheating can indicate a fault. Contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	PN-W27
Battery Capacity	5000mAh
Wireless Output	5W / 7.5W / 10W
USB-C Output	5V/3A
USB-C Input	DC5V/2.4A
Lightning Input	DC5V/2.4A
Product Dimensions	4.28 x 2.6 x 0.7 inches
Item Weight	5.3 ounces

Feature	Detail
Compatible Phone Models	iPhone 14/iPhone 13/iPhone 13 Pro/iPhone 13 Pro Max/iPhone 12/iPhone 12 Pro/iPhone 12 Pro Max
Special Features	Wireless Charging, Slim, LED Indicator Lights, Pocket Size, Lightweight, Fast Charging, Foldable Stand

SAFETY INFORMATION

Please read and follow these safety instructions carefully to prevent electric shock, damage, or other injury:

- Do not disassemble, open, crush, bend, deform, puncture, or shred the power bank.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.
- Do not expose the power bank to fire, high temperature, or direct sunlight.
- Do not place the power bank in a fire or heat it.
- Do not short-circuit the power bank.
- Do not drop or subject the power bank to heavy impacts.
- Keep out of reach of children.
- Use only the provided charging cable and a certified power adapter.

WARRANTY & SUPPORT

Fokimdo offers considerate and prompt pre-sales and after-sales customer services. If you encounter any problems or have questions regarding your product, please feel free to contact us. We aim to respond within 24 hours.

For support, please visit the [Fokimdo Store on Amazon](#) or refer to the contact information provided in your product packaging.

OFFICIAL PRODUCT VIDEOS

Fokimdo Magnetic Wireless Power Bank Overview

Your browser does not support the video tag.

Video: A short overview of the Fokimdo Magnetic Wireless Power Bank, demonstrating its features and magnetic attachment.