

## Gofunly C3

# Gofunly Kids Digital Camera C3 Instruction Manual

Model: C3 | Brand: Gofunly

## INTRODUCTION

Thank you for choosing the Gofunly C3 Kids Digital Camera. This camera is designed to provide children aged 3-12 with a fun and engaging way to explore photography and videography. Featuring a 20MP dual lens, 1080P HD video recording, a 2.0-inch IPS screen, and a durable silicone case, it's perfect for capturing precious moments. Please read this manual carefully to ensure proper use and maintenance of your camera.

## PRODUCT OVERVIEW

### Key Features

- 20MP Dual Lens:** High-resolution front and rear cameras for photos and selfies.
- 1080P HD Video:** Record clear and vibrant videos.
- 2.0-inch IPS Screen:** Bright and clear display for viewing photos and videos.
- 32GB Micro SD Card Included:** Ample storage for thousands of photos and videos.
- Multifunctional:** Supports original photo capture, video recording, playback, time-lapse, 8x zoom, 28 cartoon photo frames, 6 photo filters, and 5 mirror effects.
- Built-in Games:** Includes 3 classic puzzle games (Snake, Tetris, Sokoban) for entertainment.
- Durable Design:** Cute, eco-friendly, soft silicone shockproof case for protection.
- Portable:** Compact and lightweight, with two lanyards for easy carrying.
- Rechargeable Battery:** Built-in 1000mAh lithium battery for extended use.

### What's in the Box

- 1 x Gofunly Kids Digital Camera (Green Dinosaur)
- 1 x 32GB Micro SD Card
- 1 x USB Cable
- 1 x Card Reader
- 2 x Lanyards
- 1 x Reset Pin
- 1 x User Manual



Image: The Gofunly C3 Kids Digital Camera, green dinosaur model, displayed with its accessories: a 32GB memory card and a USB card reader.

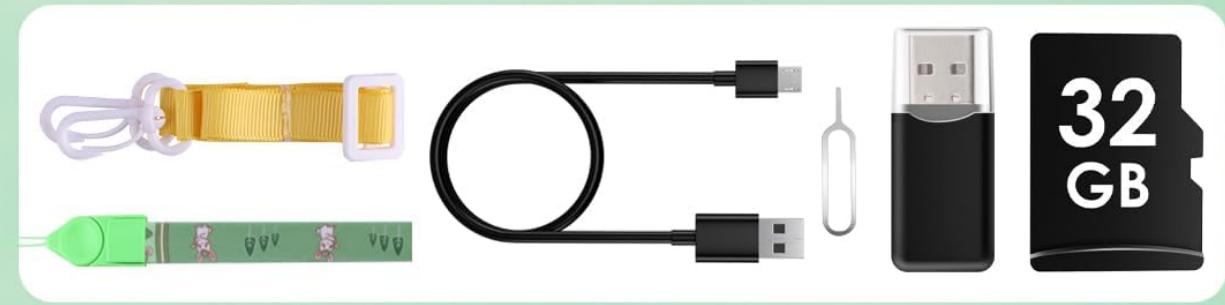


Image: A visual representation of all items included in the camera package: the green dinosaur camera, a 32GB SD card, a USB cable, a card reader, and two lanyards.

## SETUP

### 1. Charging the Camera

Before first use, fully charge the camera battery. Use the included USB cable to connect the camera to a computer's USB

port or a standard USB wall adapter (not included).

- The charging indicator light will illuminate during charging.
- The light will turn off or change color once charging is complete.
- A full charge typically takes 2-3 hours.

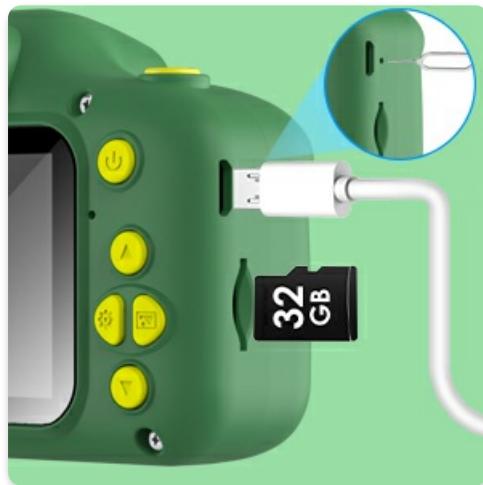


Image: The side of the camera illustrating the USB port for charging and the slot for the 32GB SD card.

## 2. Inserting the Micro SD Card

The camera requires a Micro SD card to save photos and videos. A 32GB card is included in the package.

1. Locate the Micro SD card slot on the side of the camera.
2. Insert the Micro SD card with the gold contacts facing down, gently pushing until it clicks into place.
3. To remove the card, push it in again until it clicks, and it will spring out.

## OPERATING INSTRUCTIONS

---

### Basic Functions

- **Power On/Off:** Press and hold the power button (usually marked with a circle and line) for a few seconds.
- **Take a Photo:** In photo mode, press the shutter button (usually a large button on top or side) to capture an image.
- **Record Video:** Switch to video mode (if applicable, via a mode button), then press the shutter button to start/stop recording.
- **Playback:** Press the playback button (often an arrow icon) to view saved photos and videos. Use the navigation buttons to browse.
- **Menu Navigation:** Use the up/down/left/right buttons to navigate through menus and select options with the OK/shutter button.

### Special Features

- **Selfie Mode:** The camera features a dual lens. Switch to selfie mode (check camera interface for icon) to use the front-facing camera.



Image: A child and an adult smiling while taking a selfie with the green dinosaur camera, highlighting its selfie capability.

- **Time-Lapse:** Set the camera to time-lapse mode (2s/5s/10s options) to capture a series of photos at set intervals, creating a time-lapse video.

1080P HD Video

HDV



Time Lapse 2S/5S/10S



Image: The camera screen showing a time-lapse sequence, alongside examples of photos captured with 2x, 4x, 6x, and 8x digital zoom.

- **8x Digital Zoom:** Use the zoom buttons (often up/down navigation) to digitally zoom in on your subject.



Image: A visual sequence demonstrating the camera's 8x digital zoom, showing how the image becomes progressively closer to the subject.

- **Photo Frames & Filters:** Enhance your photos with 28 cartoon photo frames, 6 photo filters, and 5 mirror effects. Access these options through the camera's menu.

# Funny Head Stickers & Photo Effects



Image: A collage showcasing different photo frames and effects that can be applied to pictures taken with the camera, including various cartoon borders and mirror effects.



Image: A comprehensive display of the camera's creative options, including six distinct photo filters and a wide selection of 28 cartoon frames and fun stickers.

- **Games:** The camera includes 3 classic puzzle games: Snake, Tetris, and Sokoban. Access them through the main menu for entertainment.

# Music & 3 Puzzle Games



Image: The camera screen displaying one of the built-in puzzle games, with icons representing the three classic games: Snake, Tetris, and Sokoban.

## MAINTENANCE

### Cleaning

- Wipe the camera body with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- Clean the lens gently with a microfiber cloth specifically designed for camera lenses.

## Battery Care

- Avoid fully discharging the battery frequently.
- Charge the camera regularly, even if not in use, to maintain battery health.
- Do not expose the camera to extreme temperatures, as this can affect battery life.

## Storage

- Store the camera in a cool, dry place away from direct sunlight.
- When storing for extended periods, ensure the battery is partially charged (around 50%).

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Camera won't turn on.	Battery is dead or low.	Charge the camera for at least 30 minutes.
Cannot take photos/videos.	No SD card inserted or card is full/corrupted.	Insert a Micro SD card. If already inserted, check if it's full and delete some files, or try formatting the card (this will erase all data).
Screen is frozen.	Software glitch.	Use the included reset pin to press the reset button (usually a small hole near the charging port). This will restart the camera without losing data.
Poor image quality.	Dirty lens or low light conditions.	Clean the camera lens with a soft, clean cloth. Ensure adequate lighting when taking photos.
Cannot connect to computer.	Faulty USB cable or driver issue.	Try a different USB cable or USB port on your computer. Ensure the camera is powered on when connecting.

## SPECIFICATIONS

---

Feature	Detail
Model	C3
Display Screen	2.0-inch IPS Screen
Photo Resolution	Up to 20MP
Video Resolution	1080P HD
Battery Capacity	1000mAh Lithium Polymer
Storage	Supports Micro SD Card (32GB included)
Optical Zoom	8x (Digital)
Product Dimensions	4.9 x 8.86 x 7.04 cm (1.93 x 3.49 x 2.77 inches)

Feature	Detail
Weight	105 grams (0.23 lbs)
Material	Eco-friendly Soft Silicone Case



2.0 Inch  
IPS Screen



20MP  
Photo



1080P  
Video



Selfie  
Supported



Multi Frames  
&Filters



Time  
Lapse



8X Zoom



Puzzle  
Games



Music



32GB Card

Image: The camera shown with its physical dimensions and a grid of icons highlighting its main features: 2.0-inch IPS screen, 20MP photo, 1080P video, selfie support, multiple frames and filters, time-lapse, 8x zoom, puzzle games, music playback, and included 32GB card.

## WARRANTY AND SUPPORT

Gofunly provides customer support for its products. If you encounter any issues or have questions regarding your Gofunly C3 Kids Digital Camera, please refer to the contact information provided with your purchase or visit the official Gofunly store on Amazon:

## Gofunly Amazon Store

A satisfactory solution will be offered in accordance with the warranty policy.

© 2024 Gofunly. All rights reserved.

## Related Documents