

[Manuals.plus](#) /

› [LEFXMOPHY](#) /

› LEXMOPHY EM26 Massage Gun Charger Instruction Manual

## LEFXMOPHY EM26

# LEFXMOPHY EM26 Massage Gun Charger Instruction Manual

Model: EM26

## INTRODUCTION

This manual provides essential information for the safe and effective use of your LEXMOPHY EM26 Massage Gun Charger. Please read these instructions carefully before use and retain them for future reference. This charger is designed to provide reliable power for compatible massage guns.

## PRODUCT OVERVIEW

The LEXMOPHY EM26 charger is a 24V power adapter designed for specific massage gun models. It features a robust design with safety certifications to ensure reliable charging.

- **Input Voltage:** 100-240V AC, 50/60Hz, 0.7A
- **Output Voltage:** 24V DC
- **Cable Length:** Approximately 5 feet (1.5 meters)
- **Connector Type:** DC Round Plug
- **Safety Certifications:** UL, CE, FCC, RoHS
- **Protection Features:** Over-voltage, over-load, over-current, short circuit protection



Image 1: The LEFXMOPHY EM26 Massage Gun Charger, showing the main adapter unit and the coiled power cord with the DC round plug connector.



Image 2: The back of the LEFXMOPHY EM26 charger, displaying its electrical specifications and safety certifications (UL, FC, CE).

## COMPATIBILITY

This charger is specifically designed for massage guns that require a 24V power supply with a DC round plug connector. It is compatible with the following models:

- TOLOCO EM26
- TOLOCO TO-M63
- AERLANG EM8, EM9, EM10, EM11, EM12, EM13
- Darkiron EM31
- HARDNEX 2020 Massage Gun

**Important: This charger features a DC round plug connector. It is NOT compatible with massage guns that use a USB-C charging port.**

# Compatible with

## Toloco EM26



DC round plug connector



Not available for USB C connector

Image 3: Visual representation of the charger's compatibility, showing a TOLOCO EM26 massage gun with a DC round plug connector (✓) and explicitly stating incompatibility with USB-C connectors (✗).

## SAFETY INFORMATION

Your LEFXMOPHY EM26 charger is designed with multiple safety features to protect both the charger and your device:

- **Over-voltage Protection:** Prevents damage from excessive voltage input.
- **Over-load Protection:** Safeguards against drawing too much current.
- **Over-current Protection:** Protects against current surges.
- **Short Circuit Protection:** Automatically shuts off power in case of a short circuit.

Always ensure the charger is used in a dry environment and avoid exposing it to liquids or extreme temperatures.

## SETUP

1. **Verify Compatibility:** Before connecting, confirm that your massage gun requires a 24V power input and has a DC round charging port. Refer to your massage gun's manual for specific requirements.

2. **Connect to Massage Gun:** Insert the DC round plug connector of the charger firmly into the charging port of your massage gun.
3. **Connect to Power Outlet:** Plug the charger's wall adapter into a standard 100-240V AC electrical outlet.



Image 4: The LEFXMOPHY EM26 charger with its DC round plug inserted into the charging port of a compatible massage gun, illustrating the connection process.

## OPERATING INSTRUCTIONS (CHARGING)

Once properly connected, the charger will begin supplying power to your massage gun. The charging indicator on your massage gun (if available) will typically illuminate or change color to indicate charging status. Refer to your massage gun's manual for details on its charging indicators.

Charging time will vary depending on the battery capacity of your massage gun and its current charge level. Disconnect the charger once your massage gun is fully charged to prolong battery life.

## MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the surface of the charger. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and moisture when not in use. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the charger cable and plug for any signs of damage, such as fraying, cuts, or bent pins. If damage is observed, discontinue use and replace the charger.

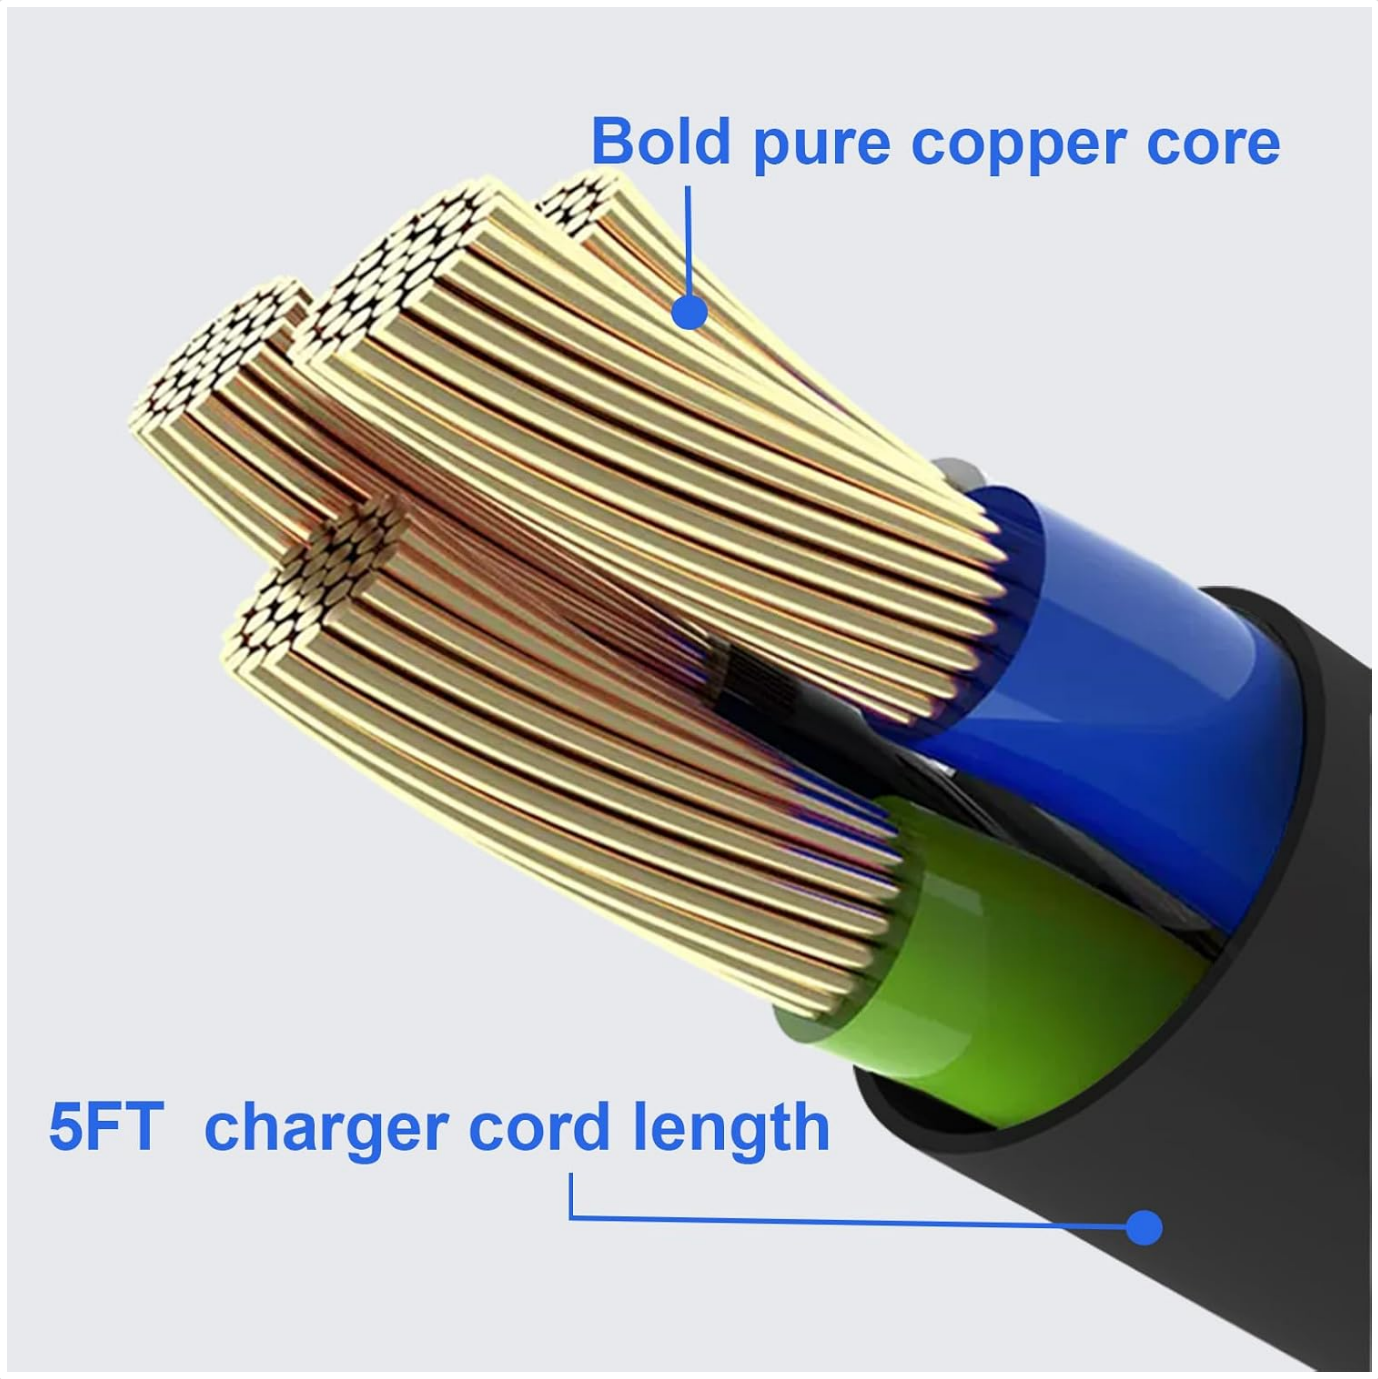


Image 5: An illustration showing the internal structure of the charger cable, highlighting the bold pure copper core for efficient power transmission.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                       | Possible Cause                                                                                                                                    | Solution                                                                                                                                                                                                                                                                            |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Massage gun not charging.     | Charger not properly connected.<br>Power outlet not active.<br>Incompatible massage gun model or charging port type.<br>Damaged charger or cable. | Ensure both ends of the charger are securely plugged in.<br>Test the outlet with another device.<br>Verify your massage gun requires a 24V DC round plug.<br>This charger is not for USB-C ports.<br>Inspect the charger and cable for visible damage. If damaged, discontinue use. |
| Charger feels hot during use. | Normal operation (slight warmth).<br>Poor ventilation.<br>Overload or internal fault.                                                             | A slight warmth is normal.<br>Ensure the charger is in an open area with adequate airflow.<br>If excessively hot or emitting smoke/smell, immediately unplug and discontinue use.                                                                                                   |

## SPECIFICATIONS

| Feature            | Detail                                                                     |
|--------------------|----------------------------------------------------------------------------|
| Product Dimensions | 1.97 x 1.57 x 1.77 inches (main adapter)                                   |
| Item Weight        | 4.6 ounces                                                                 |
| Input Voltage      | 100-240V AC                                                                |
| Output Voltage     | 24V DC                                                                     |
| Amperage           | 0.1 Amps (Input)                                                           |
| Wattage            | 24 watts                                                                   |
| Cable Length       | 5 feet (1.5 meters)                                                        |
| Connector Type     | Barrel Connector (DC Round Plug)                                           |
| Color              | White                                                                      |
| Special Features   | Short Circuit Protection, Over-voltage, Over-load, Over-current Protection |
| Certifications     | UL, CE, FCC, RoHS                                                          |
| Manufacturer       | LEFXMOPHY                                                                  |



Image 6: The LEFXMOPHY EM26 charger with its dimensions labeled (4.7cm width, 7.6cm height for the adapter block, and 5ft cable length).

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your LEFXMOPHY EM26 Massage Gun Charger, please contact the manufacturer directly. Details can typically be found on the product packaging or the official LEFXMOPHY website. Please have your product model (EM26) and purchase information available when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question