

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Outsunny](#) /

> [Outsunny Outdoor Folding Lounge Chair Model 84B-184RD Instruction Manual](#)

Outsunny 84B-184RD

Outsunny Outdoor Folding Lounge Chair Instruction Manual

Model: 84B-184RD

INTRODUCTION

This manual provides instructions for the safe assembly, operation, and maintenance of your Outsunny Outdoor Folding Lounge Chair, Model 84B-184RD. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Always ensure the angle adjuster is securely locked in place before and during use to prevent accidental movement and potential injury.
- Do not exceed the maximum weight capacity of 360 pounds (163 kg).
- Keep fingers clear of folding mechanisms when adjusting or folding the chair to avoid pinching.
- Place the chair on a stable, level surface to prevent tipping.
- Supervise children around the chair to ensure safe use.
- Avoid prolonged exposure to extreme weather conditions to extend product lifespan.

PACKAGE CONTENTS

The Outsunny Outdoor Folding Lounge Chair (Model 84B-184RD) comes fully assembled and includes:

- 1 x Folding Lounge Chair
- 1 x Removable Pillow

SETUP

The lounge chair is designed for immediate use with minimal setup required.

1. **Unfolding the Chair:** Carefully unfold the chair from its compact, tri-fold position. Ensure all legs and support frames are fully extended and locked into place.
2. **Attaching the Pillow:** The included pillow can be adjusted along the backrest for optimal head and neck support. Slide it to your desired position.
3. **Positioning:** Place the chair on a flat, stable surface.



This can be folded into a compact size is easy to carry and store, anyone could easily move it to backyard and patio

LIGHTWEIGHT & FOLDABLE DESIGN

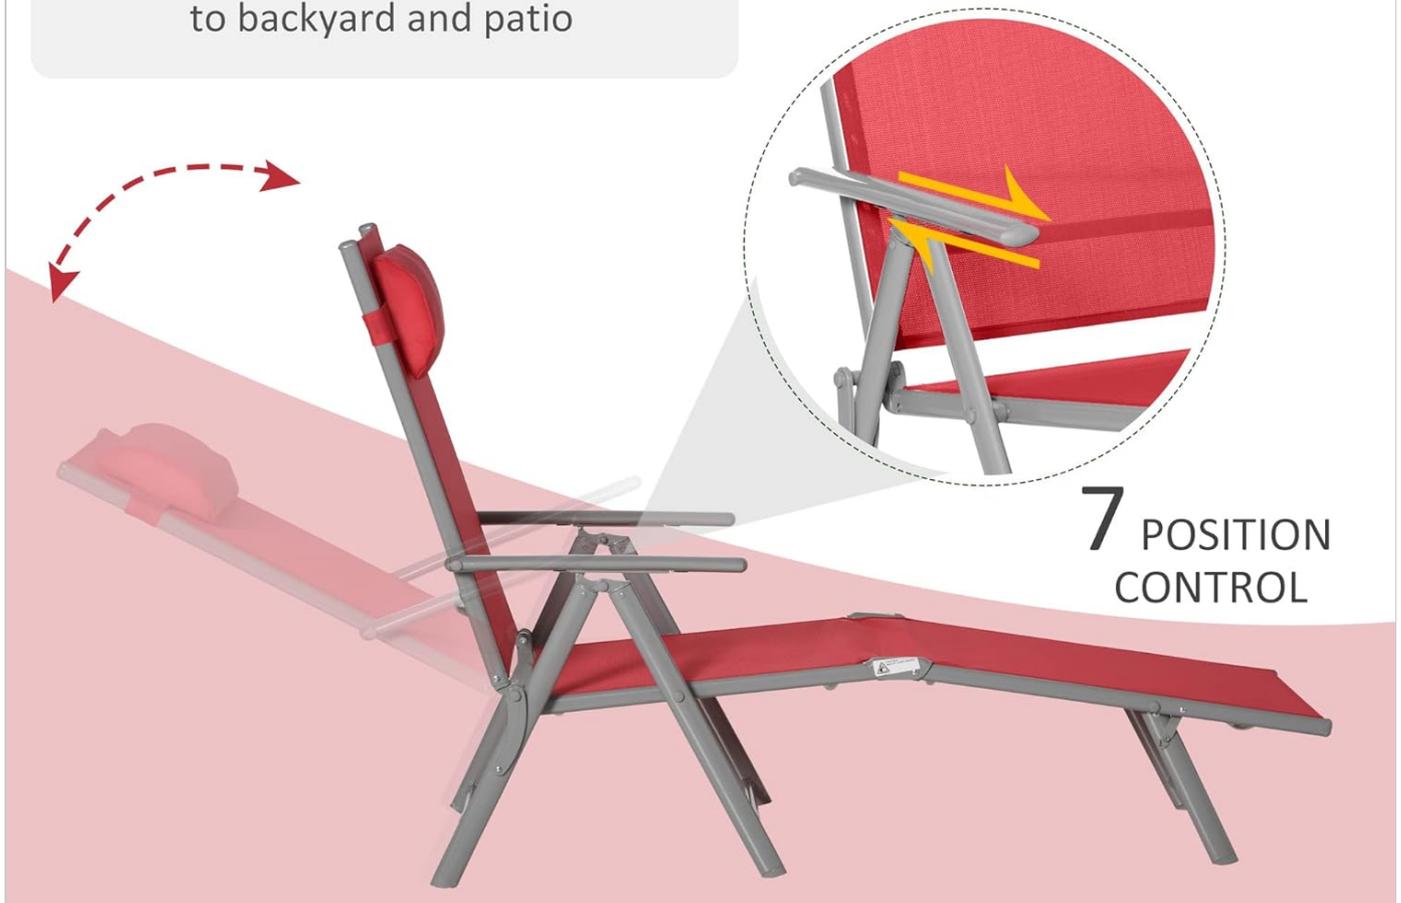


Figure 1: Unfolding and 7-Position Control. This image illustrates the chair unfolded and highlights the mechanism for adjusting the backrest.

OPERATING INSTRUCTIONS

Adjusting the Reclining Position

The Outsunny lounge chair features a 7-level adjustable reclining backrest, allowing you to find your preferred angle for comfort.

1. **To Recline:** While seated, gently lift the armrests slightly and lean back. The backrest mechanism will disengage, allowing you to adjust the angle.
2. **To Lock Position:** Once your desired angle is reached, release the armrests. Ensure the backrest mechanism clicks securely into one of the seven available positions. Verify the lock by gently pushing against the backrest.
3. **To Sit Up:** Gently lift the armrests and lean forward. The backrest will move to a more upright position. Release the armrests to lock.



Figure 2: Backrest Adjustment Mechanism. This image shows the detail of how the backrest can be adjusted and locked into position.

Folding the Chair for Storage/Transport

To fold the chair into its compact tri-fold design:

1. Ensure the backrest is in its most upright position.
2. Carefully fold the leg sections inwards.
3. Fold the backrest down towards the seat. Exercise caution to avoid pinching fingers in the folding joints.
4. Once folded, the chair can be easily carried and stored.



Figure 3: Folded Chair Dimensions. This image displays the chair in its compact folded state, highlighting its reduced size for storage and transport.

MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth. For stubborn stains, use a mild soap solution and rinse thoroughly. Allow to air dry completely before folding or storing.
- **Storage:** When not in use, especially during off-season or inclement weather, store the chair in a dry, protected area to prevent damage from moisture and UV exposure.
- **Inspection:** Periodically check all bolts, screws, and moving parts to ensure they are secure. Tighten if necessary.
- **Fabric Care:** The breathable mesh fabric is water-resistant and quick-drying. Avoid using harsh chemicals or abrasive cleaners that could damage the material.

QUALITY MATERIAL



Figure 4: Quality Material Features. This image details the material properties, emphasizing ease of cleaning and durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline or lock properly.	Mechanism obstructed or not fully engaged.	Ensure armrests are lifted sufficiently to disengage the lock. Check for any debris or obstructions in the reclining mechanism. Ensure the chair is fully unfolded.
Chair feels unstable.	Not placed on a level surface; frame not fully extended; loose connections.	Move the chair to a flat, stable surface. Verify all frame components are fully extended and locked. Check and tighten any loose bolts or screws.
Difficulty folding the chair.	Backrest not in upright position; mechanism stiff.	Ensure the backrest is fully upright. Apply gentle, even pressure when folding. Lubricate moving parts if necessary (use a silicone-based lubricant).

SPECIFICATIONS

Feature	Detail
Model Number	84B-184RD
Brand	Outsunny
Material	Alloy Steel (Frame), Polyester (Fabric), Cotton (Pillow Fill)
Color	Red
Unfolded Dimensions (L x W x H)	70.75" x 25" x 39.5" (approximate)
Folded Dimensions (L x W x H)	25.5" x 8" x 32" (approximate)
Item Weight	20 pounds (9.07 kg)
Maximum Weight Capacity	360 pounds (163 kg)
Reclining Positions	7
Special Features	Adjustable Backrest, Arm Rests, Back Support, Breathable Sling Fabric, Ergonomic, Foldable, Head Support, Reclining, Removable Pillow
Product Care	Wipe Clean



Figure 5: Product Dimensions. This image provides a visual representation of the chair's measurements when open and folded.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Outsunny customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can also visit the official Outsunny store on Amazon for more product information and support resources [Outsunny Amazon Store](#)

