

[Manuals.plus](#) /

› [Boseyway](#) /

› Boseyway XD-WIFI Mini WiFi IP Camera User Manual

Boseyway XD-WIFI

Boseyway XD-WIFI Mini WiFi IP Camera User Manual

Model: XD-WIFI

Brand: Boseyway

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Boseyway XD-WIFI Mini WiFi IP Camera. Please read this manual thoroughly before using the device to ensure proper functionality and safety.



Image: The Boseway XD-WIFI Mini Camera, demonstrating its compact size and remote viewing capability on a smartphone.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Mini Camera (XD-WIFI)
- 1 x User Manual
- 1 x USB Cable
- 1 x Micro SD Card Reader

PRODUCT FEATURES

The Boseway XD-WIFI Mini Camera offers several advanced features for security and monitoring:

- **Ultra-Compact Design:** Smallest WiFi camera, designed for discreet placement indoors or outdoors.
- **Remote Viewing:** Access live video remotely from anywhere via the V380Pro app on iOS or Android devices (requires 2.4GHz Wi-Fi connection).
- **HD Night Vision:** Enhanced night vision with IR LED lamps, providing clear visibility up to 26 feet in low light or total darkness. IR lights are non-visible during recording.
- **Enhanced Motion Detection:** Intelligent motion detection with adjustable sensitivity. Sends alarm notifications with images to your phone upon detection.
- **Continuous Recording:** Supports loop recording, overwriting the oldest files when the memory card is full. Requires continuous power via mobile power supply or USB socket as there is no built-in battery.
- **1080P Video Resolution:** Captures video in 1080p resolution for clear footage.
- **Wide Viewing Angle:** Features a 110-degree wide viewing angle.



Image: Visual representation of the camera's key features including Wi-Fi connectivity, motion detection, loop recording, and TF/SD card support.



110 Wide Viewing Angle

*HD Quality 1080P, Clear Video

*Wide Viewing Angle



Image: The camera shown with an overlay indicating its 110-degree wide viewing angle and 1080P HD video quality.

SETUP GUIDE

1. Initial Preparation

- **Power Connection:** The camera does not have a built-in battery. Connect the camera to a continuous power source using the provided USB cable. This can be a mobile power bank or a USB wall adapter.
- **Micro SD Card (Optional but Recommended):** Insert a Micro SD card (not included) into the camera's designated slot for local storage and loop recording. Ensure the card is formatted correctly (FAT32 recommended).

2. App Installation (V380Pro)

1. Download the **V380Pro** app from your device's app store (iOS App Store or Google Play Store).
2. Install the app on your smartphone or tablet.
3. Register for a new account or log in if you already have one.

3. Wi-Fi Connection

The camera supports 2.4GHz Wi-Fi networks only. Ensure your router is configured for 2.4GHz or has a mixed mode enabled.

1. Power on the camera. It will emit a Wi-Fi signal.
2. Open the V380Pro app.
3. Follow the in-app instructions to add a new device. This typically involves connecting your phone to the camera's direct Wi-Fi hotspot first, then configuring the camera to connect to your home 2.4GHz Wi-Fi network.
4. Once connected, the camera will appear online in your app, allowing for remote viewing.



Image: The XD-WIFI Mini Camera demonstrating its Wi-Fi connectivity and remote monitoring capabilities.

OPERATING INSTRUCTIONS

1. Live View

Once the camera is connected to your Wi-Fi network and online in the V380Pro app, tap on the camera's preview to access the live video feed. You can view real-time footage from anywhere with an internet connection.

2. Motion Detection and Alerts

- Navigate to the camera settings within the V380Pro app.
- Locate the "Motion Detection" or "Alarm Settings" option.
- Enable motion detection and adjust the sensitivity level as needed.
- Ensure push notifications are enabled for the V380Pro app on your phone to receive instant alerts with images when motion is detected.

3. Night Vision

The camera automatically switches to night vision mode in low-light conditions. The integrated IR LEDs provide clear black-and-white video up to 26 feet without emitting visible light.

4. Loop Recording

If a Micro SD card is inserted, the camera will continuously record. When the memory card is full, the oldest video files will be automatically overwritten by new recordings. This ensures uninterrupted recording.

5. Cloud Storage (Optional)

The V380Pro app may offer optional cloud storage services for your recordings. Refer to the app's interface for details on subscription plans and activation.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Firmware Updates:** Periodically check the V380Pro app for any available firmware updates for your camera to ensure optimal performance and security.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on or hold charge.	• The camera requires continuous power. Ensure it is properly connected to a working USB power source (e.g., wall adapter, power bank). • Check the USB cable for damage. Try a different USB cable and power source.
Cannot connect to Wi-Fi or app.	• Ensure your Wi-Fi network is 2.4GHz. The camera does not support 5GHz networks. • Verify the Wi-Fi password is entered correctly in the V380Pro app. • Move the camera closer to the Wi-Fi router to improve signal strength. • Restart the camera and your router. • Reset the camera (refer to the device for a reset button, if available, or app instructions).

Problem	Possible Cause / Solution
No recording or SD card error.	• Ensure a Micro SD card is properly inserted. • Format the Micro SD card to FAT32 using a computer or the app's formatting function. • Check if the SD card is full. Loop recording should overwrite old files, but ensure it's enabled. • Try a different Micro SD card.
Poor video quality or blurry image.	• Clean the camera lens with a soft, dry cloth. • Ensure adequate lighting in the environment, especially for non-night vision footage. • Check your internet connection speed if viewing remotely, as slow speeds can affect streaming quality.

SPECIFICATIONS

Feature	Detail
Model Name	XD-WIFI
Brand	Boseyway
Connectivity Protocol	Wi-Fi (2.4GHz only)
Video Capture Resolution	1080p
Night Vision Range	26 Feet
Item Dimensions (L x W x H)	1 x 0.4 x 1 inches
Item Weight	2.43 ounces
Power Source	External USB Power (No built-in battery)
Indoor/Outdoor Usage	Indoor/Outdoor
Motion Detection	Yes, with AI Human Motion Detection
Loop Recording	Yes
App Compatibility	V380Pro (iOS, Android)
International Protection Rating	IP66



Image: Dimensional comparison of the WIFI Camera (3.1cm x 3.8cm x 1.1cm) and a DV Camera (2.9cm x 2.9cm x 1.1cm), highlighting the compact size.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official Boseway website. Keep your purchase receipt as proof of purchase for warranty claims.

For common issues, please consult the Troubleshooting section of this manual or the FAQ section within the V380Pro application.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question