

[Manuals.plus](#) /

› [VISWIN](#) /

› VISWIN Extra Large H-Frame Easel Instruction Manual

VISWIN OG_ELGE_DHJ3W_AU

VISWIN Extra Large H-Frame Easel Instruction Manual

Model: OG_ELGE_DHJ3W_AU

1. INTRODUCTION

Thank you for choosing the VISWIN Extra Large H-Frame Easel. This easel is designed for professional artists, offering robust support and versatile adjustments for various painting techniques and canvas sizes. Constructed from premium German beech wood, it provides stability and durability for studio use. This manual provides essential information for the safe assembly, operation, and maintenance of your easel.



Image 1.1: The VISWIN Extra Large H-Frame Easel in a studio environment.

2. SAFETY INFORMATION

- Always assemble the easel on a flat, stable surface.
- Ensure all screws and knobs are securely tightened before use to prevent instability.
- Do not exceed the maximum load capacity of 40 kg (88 lbs).
- Exercise caution when adjusting the easel's height or angle, especially with a canvas in place. Ensure hands are clear of moving parts.
- Keep children and pets away from the easel during assembly and adjustment.
- Avoid overtightening wooden components to prevent damage to the beech wood.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. Refer to the included parts list in the packaging. Typically, the package includes:

- Easel main frame components (H-frame base, vertical masts, canvas support trays)
- 4 lockable caster wheels
- Adjustment knobs and hardware
- Assembly tools (if provided)
- Instruction manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately one to two hours. Follow the detailed pictorial instructions provided in your product packaging. The following steps outline the general assembly process:

1. **Attach Caster Wheels:** Secure the four lockable caster wheels to the bottom of the H-frame base using the provided hardware. Ensure they are firmly attached.



H-frame base

More stable structure than A-frame easel



Easy to move with 4 lockable wheels

Image 4.1: Detail of the H-frame base with lockable caster wheels for mobility and stability.

2. **Assemble the Main Frame:** Connect the vertical mast sections to the H-frame base. Ensure all pre-drilled holes align correctly and secure with the designated screws and bolts.
3. **Install Canvas Support Trays:** Attach the lower canvas support tray and the upper canvas clamp to the vertical

masts. These components are adjustable and will be secured with knobs.

4. **Adjustments:** Familiarize yourself with the adjustment knobs for height and angle. Do not fully tighten these until the easel is in its desired position during operation.

For detailed visual guidance, refer to the assembly diagrams included with your easel.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Easel Height and Angle

- **Height Adjustment:** Loosen the knobs on the vertical masts to slide the canvas support trays up or down. The easel can extend from a minimum height of 154.9 cm (61 inches) to a maximum of 299.7 cm (118 inches). The lower tray can be raised from 43.2 cm (17 inches) to 152.4 cm (60 inches) from the floor.
- **Angle Adjustment:** The easel can be adjusted from a vertical position to a flat, horizontal table position by loosening the angle adjustment knobs. This flexibility accommodates various painting styles and mediums.

Adjustable angle from vertical to horizontal



Image 5.1: The easel can be adjusted from vertical to a horizontal table-like position for different artistic needs.

5.2 Placing Canvases

- The easel can hold canvases up to 200.7 cm (79 inches) in height.

- The unique single mast design features three sliders. You can place one large canvas or two smaller canvases simultaneously for reference or comparative work.
- To accommodate extra-large canvases, the middle slider can be detached by unscrewing its nut, allowing for a continuous support surface.



Image 5.2: The easel's detachable slider allows for holding two canvases or one extra-large canvas.

5.3 Moving the Easel

- The easel is equipped with four silent, lockable caster wheels for easy mobility.
- To move the easel, ensure the wheels are unlocked.
- Once in the desired position, engage the locks on all four wheels to secure the easel in place and prevent accidental movement.

6. MAINTENANCE

- **Cleaning:** Wipe the easel with a soft, dry cloth to remove dust. For stubborn marks, use a slightly damp cloth and dry immediately. Avoid harsh chemicals or abrasive cleaners.

- **Wood Care:** As the easel is made of beech wood, avoid prolonged exposure to direct sunlight or extreme humidity, which can cause warping or cracking. Periodically check and tighten all fasteners to maintain stability.
- **Wheel Maintenance:** Keep the caster wheels free of debris to ensure smooth movement.

7. TROUBLESHOOTING

- **Easel feels unstable:** Check that all assembly screws and adjustment knobs are securely tightened. Ensure the easel is on a level surface.
- **Difficulty adjusting height/angle:** Loosen the corresponding adjustment knobs sufficiently. If resistance persists, check for any obstructions or debris in the sliding mechanisms. Do not force adjustments.
- **Wheels not rolling smoothly:** Check for hair or debris caught in the wheel mechanisms. Clean as necessary. Ensure wheel locks are disengaged.

8. SPECIFICATIONS



Image 8.1: Key dimensions and maximum loading capacity of the easel.

Feature	Specification
Brand	VISWIN
Model Number	OG_ELGE_DHJ3W_AU
Material	Beech Wood
Color	Walnut
Product Dimensions (L x W x H)	121.92 x 60.96 x 20.57 cm (48 x 24 x 8.1 inches)
Item Weight	18.6 Kilograms (41 lbs)
Max Canvas Height	Up to 200.7 cm (79 inches)
Max Loading Capacity	40 kg (88 lbs)
Easel Height Range	154.9 cm (61 inches) to 299.7 cm (118 inches)
Lower Tray Height Range	43.2 cm (17 inches) to 152.4 cm (60 inches)
Easel Type	H-Frame
Mobility	4 Lockable Caster Wheels
UPC	765381502955

9. WARRANTY AND SUPPORT

VISWIN is committed to providing quality products and customer satisfaction. This product comes with a lifetime guarantee. If you encounter any issues or have questions regarding your easel, please contact VISWIN customer support. Our team is dedicated to assisting you and ensuring your satisfaction.

For support, please refer to the contact information provided in your product packaging or visit the official VISWIN website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B1DJBCRX>

More documents and user manuals: <https://manuals.plus/>