

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [SHareconn](#) /
- › [SHareconn 9FT Prelit Artificial Christmas Garland User Manual](#)

SHareconn SH-9FT Snow Garland

SHareconn 9FT Prelit Artificial Christmas Garland User Manual

Model: SH-9FT Snow Garland

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your SHareconn 9FT Prelit Artificial Christmas Garland. Designed for both indoor and outdoor use, this garland features color-changing LED lights and a built-in timer to enhance your festive decorations. Please read this manual thoroughly before use to ensure proper functionality and safety.

IMPORTANT SAFETY INFORMATION

Caution: Ensure that the garland is kept away from open flames and is not used near water or wet areas. Do not use damaged batteries or mix different battery types. This product is not a toy and contains small parts that may pose a choking hazard for young children.

PRODUCT FEATURES

- **Ideal Size:** 9 feet long (from tip to tip), suitable for various decorative applications.
- **Pre-Lit Design:** Pre-strung with 50 warm white & multicolor LED lights for immediate use.
- **Updated Battery Case:** Features a round button for switching between warm white and colored light modes.
- **Battery Operated:** Requires 3 C batteries (not included).
- **Versatile Placement:** Ideal for window frames, fireplaces, mantels, railings, stairs, and entryways.
- **Durable Material:** Constructed from Polyvinyl Chloride (PVC) for long-lasting use.

SETUP INSTRUCTIONS

1. Unpacking and Fluffing

Carefully remove the garland from its packaging. The branches may be compressed during shipping. Gently spread out the branches and tips to achieve a full and natural appearance. The garland is designed to be bendable, allowing for customization of its shape.



Image: The garland arranged as a centerpiece on a dining table, showcasing its full appearance after fluffing.

2. Battery Installation

1. Locate the battery box attached to the garland.
2. Open the latch on the battery box.
3. Insert 3 C batteries (not included) into the designated slots, ensuring correct polarity (+/-).
4. Close the battery box securely with the latch.

Battery Box

Perfect for indoor and outdoor use



**4 A Batteries Operated
(Not include batteries)**

Light funtions always follow this sequence

"A" stands for warm white lights, "B" stands for color lights

Image: A detailed view of the battery box, showing the button and light mode options.

3. Placement

Position the garland in your desired location. Its bendable nature allows it to be draped over mantels, wrapped around stair railings, or placed along window frames. Ensure the battery box is discreetly tucked away or secured.



Image: The garland elegantly draped over a fireplace mantel, showcasing its decorative potential.



Image: The garland beautifully wrapped around a stair railing, highlighting its flexibility for various placements.

OPERATING INSTRUCTIONS

1. Turning On/Off and Changing Light Modes

Press the round button on the battery box to cycle through the available light modes. The modes include:

- **'A' Steady On:** Warm white lights remain constantly on.
- **'B' Steady On:** Colored lights remain constantly on.
- **'A' Twinkle/Flash:** Warm white lights twinkle or flash.
- **'B' Twinkle/Flash:** Colored lights twinkle or flash.
- **'A' In Waves:** Warm white lights display a wave effect.
- **'B' In Waves:** Colored lights display a wave effect.
- **'A/B' Chasing/Flash:** Both warm white and colored lights chase or flash.
- **'A/B' Slow Fade:** Both warm white and colored lights slowly fade in and out.

- **Off:** Turns the lights off.

The colored changing lights can stay on all day and night.



Image: The garland displayed on a table with its warm white lights illuminated, creating a cozy ambiance.



Image: The garland on a mantel, illustrating the option to switch between warm white and multi-colored lights.

2. Timer Function

The garland features a built-in timer. Once activated, the lights will remain on for 6 hours and then automatically turn off for 18 hours, repeating the cycle daily. To activate the timer, select your desired light mode, and the timer will begin from that moment.

MAINTENANCE

- **Cleaning:** To clean the garland, gently wipe it with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the garland in its original packaging or a suitable storage container in a cool, dry place, away from direct sunlight. Ensure branches are gently compressed to prevent damage.
- **Battery Care:** Remove batteries if the garland will not be used for an extended period to prevent leakage and damage.

TROUBLESHOOTING

- **Lights Not Turning On:**

- Check if batteries are inserted correctly with proper polarity.
- Replace old or depleted batteries with new ones.
- Ensure the battery box is securely closed.

• **Lights Flickering or Dim:**

- Batteries may be low; replace them.
- Ensure all connections within the battery box are clean and secure.

• **Timer Not Functioning Correctly:**

- Reset the timer by turning the lights off and then back on to your desired mode at the time you wish the cycle to begin.

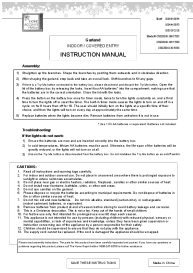



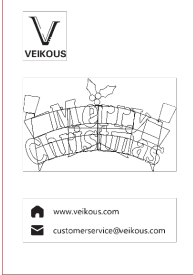

SPECIFICATIONS

Feature	Detail
Brand	SHareconn
Model Number	SH-9FT Snow Garland
Length	9 Feet (108 Inches)
Material	Polyvinyl Chloride (PVC)
Number of Lights	50 LED Lights
Light Colors	Warm White & Multicolor
Power Source	3 C Batteries (not included)
Timer Function	6 hours on / 18 hours off
Item Weight	3.61 pounds (1.64 Kilograms)
Package Dimensions	16.77 x 12.95 x 6.65 inches

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official SHareconn website. Keep your purchase receipt for any warranty claims.

Related Documents - SH-9FT Snow Garland

	<p>Home Accents Holiday Garland Instruction Manual - Assembly, Troubleshooting, and Cautions</p> <p>Comprehensive instruction manual for Home Accents Holiday indoor/covered entry garlands. Includes detailed assembly steps, troubleshooting tips for non-working lights, and important safety cautions. Features SKU and model numbers for various garland types.</p>
	<p>9ft Pre-Lit Slim Fir Artificial Christmas Tree Assembly Instructions The Holiday Aisle</p> <p>Detailed assembly instructions for the 9ft Pre-Lit Slim Fir Artificial Christmas Tree by The Holiday Aisle, featuring 500 strawberry lights, 9 functions, warm white/multi-color lights, and remote control. Includes parts list, assembly steps, disassembly, storage, and safety precautions.</p>
	<p>Holiday Living 9ft Albany Pre-Lit Artificial Christmas Tree User Manual and Safety Guide</p> <p>Comprehensive guide for the Holiday Living 9ft Albany Pre-Lit Artificial Christmas Tree, including setup instructions, safety warnings, troubleshooting, parts list, and warranty information.</p>
	<p>9ft Deluxe Pre-Lit Flocked Pine Artificial Christmas Tree Assembly Instructions</p> <p>Assembly and disassembly instructions for the Glitzhome 9ft Deluxe Pre-Lit Flocked Pine Artificial Christmas Tree with 650 Warm White Lights, including parts list, safety precautions, and storage tips.</p>
	<p>Veikous 5.9FT Merry Christmas Sign Assembly Instructions and Parts List</p> <p>Comprehensive assembly instructions and parts list for the Veikous 5.9FT Merry Christmas Sign. Includes contact details for support, safety warnings, and a detailed breakdown of components.</p>
	<p>Glitzhome 9ft Pre-Lit Pencil Green Pine Artificial Christmas Tree with 480 Warm White Lights - Assembly Instructions</p> <p>Assembly and setup guide for the Glitzhome 9ft Pre-Lit Pencil Green Pine Artificial Christmas Tree (Model 2014600092). Features 480 warm white lights and easy setup.</p>