

[Manuals.plus](#) /

› [VONMÄHLEN](#) /

› VONMÄHLEN High Six 6-in-1 Charging Cable User Manual

VONMÄHLEN High Six (B0B1F3X9KW)

VONMÄHLEN High Six 6-in-1 Charging Cable

Model: High Six (B0B1F3X9KW)

INTRODUCTION

The VONMÄHLEN High Six is a compact and versatile 6-in-1 charging and data cable designed for convenience and portability. It integrates multiple connector types (USB-C, USB-A, Micro-USB, and Lightning) into a single, tangle-free unit, making it suitable for a wide range of mobile phones and devices. Additionally, it features an integrated bottle opener and can be easily attached to a keychain, ensuring you always have a charging solution and a handy tool readily available.



Image: The High Six 6-in-1 Charging Cable in its compact keychain form, showcasing its sleek design and integrated bottle opener.

SETUP

The High Six is designed for immediate use. No complex setup is required. Simply attach it to your existing keychain for convenient access.

- **Attaching to Keychain:** Use the integrated metal ring to attach the High Six to your keys, backpack, or any other desired location.
- **Preparing for Use:** The cable is securely housed within the metal casing. Gently slide the cable out from the casing when needed.

Schlüsselring inklusive



Image: The High Six cable with its integrated keychain ring, ready to be attached to a set of keys.

OPERATING INSTRUCTIONS

Using as a Charging and Data Cable

The High Six offers multiple connector combinations to charge and transfer data between various devices. It supports fast charging up to 60 watts and data transfer rates of 480 megabits per second.

- **USB-A to USB-C:** Connect the USB-A end to a power adapter or computer and the USB-C end to your device.
- **USB-A to Lightning/Micro-USB:** Connect the USB-A end to a power adapter or computer. Attach the Lightning or Micro-USB adapter to the USB-C end, then connect to your device.
- **USB-C to USB-C:** Connect one USB-C end to a power adapter or computer and the other USB-C end to your device.
- **USB-C to Lightning/Micro-USB:** Connect the USB-C end to a power adapter or computer. Attach the Lightning or Micro-USB adapter to the other USB-C end, then connect to your device.

Universell für alle Geräte


6in1



Image: A detailed diagram illustrating the various connector types available on the High Six cable: USB-C, USB-A, and the convertible Lightning/Micro-USB adapter.



Image: The High Six cable in use, connecting a smartphone to a laptop, demonstrating its fast charging capability.

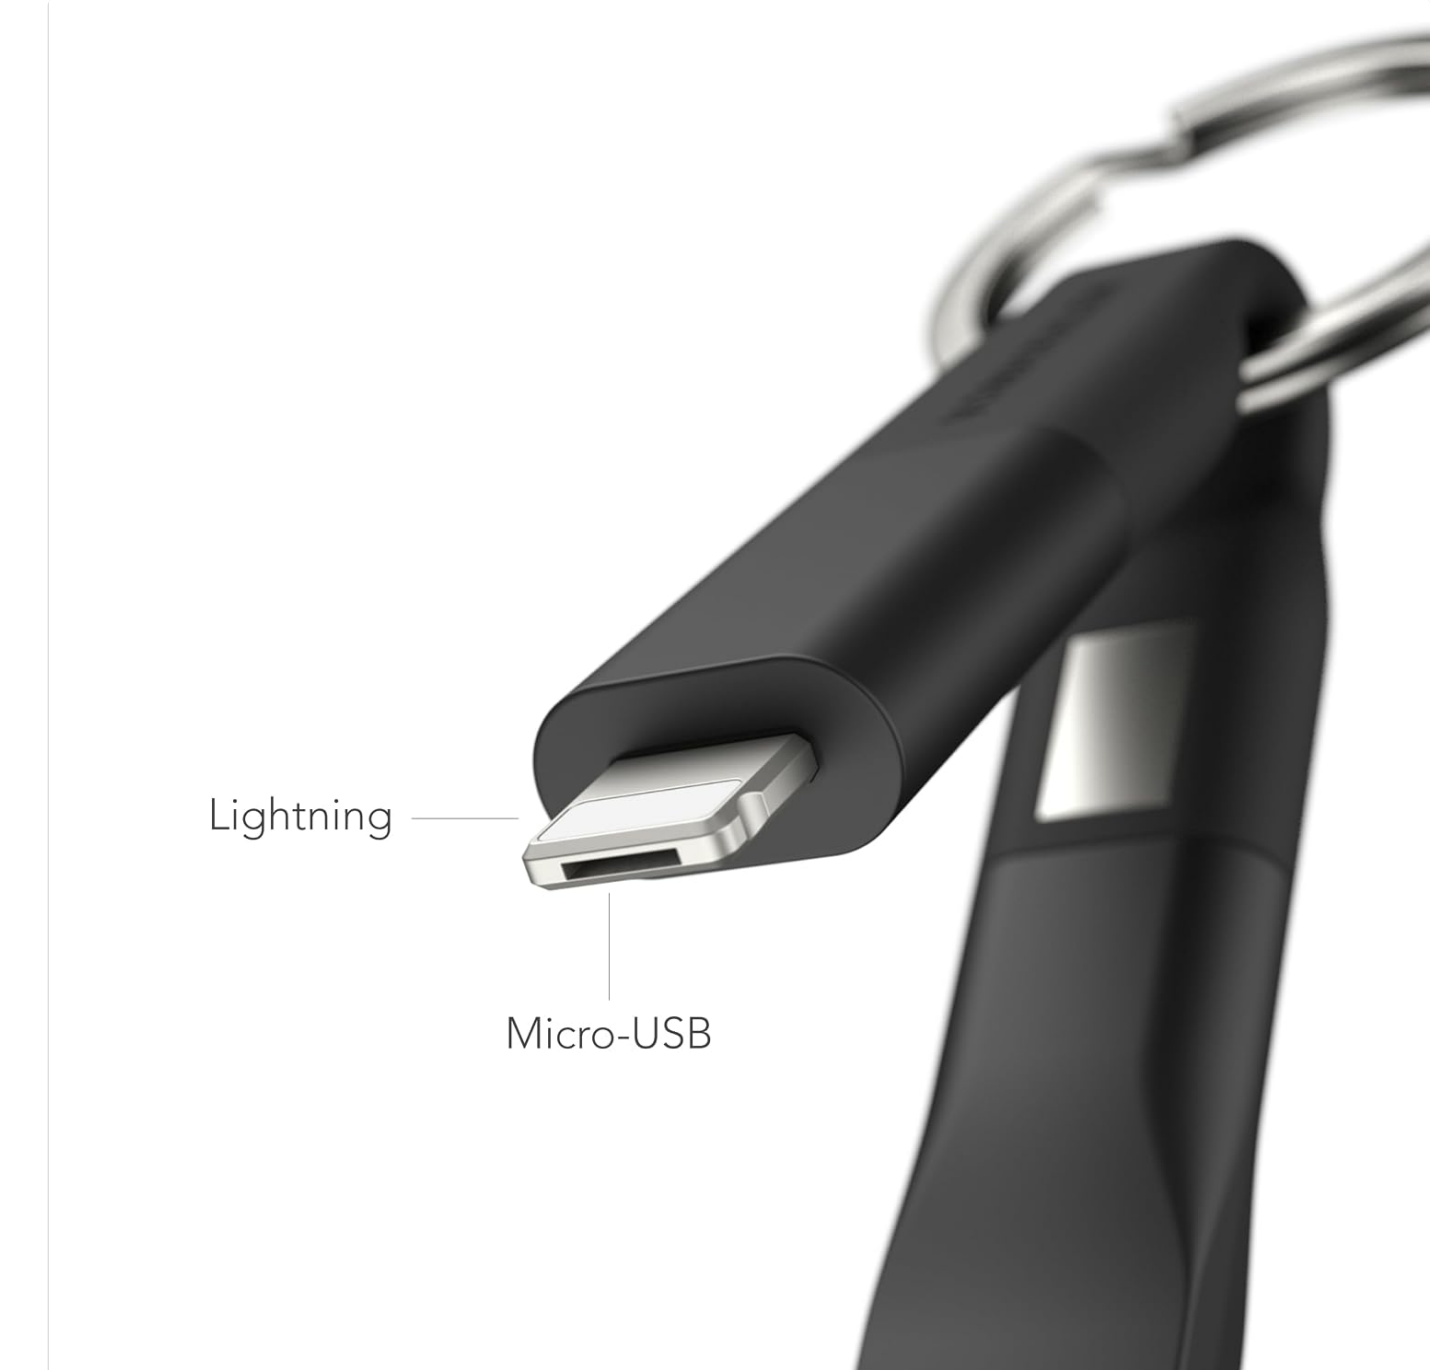

Lightning

Micro-USB

Image: A close-up view of the convertible Lightning and Micro-USB connector, highlighting its dual functionality.

Using the Bottle Opener

The integrated bottle opener is located on the metal casing of the High Six. To use it:

1. Hold the High Six firmly by its metal casing.
2. Position the bottle opener notch under the cap of a bottle.
3. Apply upward pressure to remove the bottle cap.



Image: A hand demonstrating the use of the High Six as a bottle opener, showing its practical application.

Integrierter Flaschenöffner



Image: A close-up shot of the High Six bottle opener successfully removing a bottle cap.

MAINTENANCE

To ensure the longevity and optimal performance of your VONMÄHLEN High Six, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the cable and casing with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, ensure the cable is fully retracted into its casing to protect the connectors and prevent tangling.
- **Handling:** Avoid excessive force when connecting or disconnecting the cable. Do not bend the connectors at sharp angles.
- **Environmental Conditions:** Keep the device away from extreme temperatures, direct sunlight, and moisture.

TROUBLESHOOTING

If you encounter issues with your High Six, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging.	Incorrect connector used, faulty power source, dirty connectors.	Ensure the correct adapter (Lightning/Micro-USB) is securely attached. Try a different power adapter or USB port. Clean connectors gently with a dry cotton swab.
Slow charging.	Low power output from source, device drawing more power than supplied.	Use a power adapter with higher wattage (e.g., 60W compatible). Ensure your device supports fast charging.
Data transfer not working.	Incorrect connection, driver issues on computer, device settings.	Ensure both ends of the cable are fully inserted. Check your computer's device manager for driver issues. Verify device settings allow data transfer.
Cable not retracting/extending smoothly.	Debris in mechanism, internal tangle.	Do not force the cable. Gently try to extend and retract. If resistance persists, avoid further use to prevent damage.

SPECIFICATIONS

Feature	Detail
Product Name	High Six 6-in-1 Charging Cable
Brand	VONMÄHLEN
Model Number (ASIN)	B0B1F3X9KW
Connector Types	USB-C, USB-A, Micro-USB, Lightning (via adapter)
Cable Type	USB-Type-C-Micro-USB (6-in-1 configuration)
Connector Gender	Male-to-Male
Compatible Devices	Charging Adapters, Smartphones, Tablets, and other mobile devices with compatible ports
Max Wattage	60.0 watts
Data Transfer Rate	480.0 megabits per second
Special Features	Tangle Free, Integrated Bottle Opener, Keychain Design, MFI Specification Met
Item Shape	Round (cable), Rectangular (casing)
Indoor/Outdoor Usage	Outdoor (designed for portability)
Package Dimensions	6.89 x 3.11 x 0.87 inches
Item Weight	2.89 ounces
Manufacturer	VONMÄHLEN

WARRANTY AND SUPPORT

VONMÄHLEN products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the official VONMÄHLEN website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

VONMÄHLEN Official Website: www.vonmaehlen.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B1F3X9KW>

More documents and user manuals: <https://manuals.plus/>