

[Manuals.plus](#) /

› [Portronics](#) /

› Portronics Ruffpad 10X LCD Writing Pad User Manual

Portronics Ruffpad 10X

Portronics Ruffpad 10X LCD Writing Pad User Manual

Model: Ruffpad 10X (POR-1532)

INTRODUCTION

The Portronics Ruffpad 10X is a re-writable LCD writing pad designed for various uses, including note-taking, drawing, and sketching. It offers a paperless solution, contributing to environmental conservation. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

PRODUCT FEATURES

- **Single Tap Erase:** Clear the screen instantly with a single press of the erase button.
- **Smart Lock Enhanced Design:** Prevent accidental erasure by activating the smart lock button.
- **CR2016 Cell Powered:** Operates on a CR2016 coin cell battery, providing approximately one year of use without recharging.
- **Save Your Doodles:** Utilize the Ruffpad app (available on iOS and Android) to save and share your creations from the pad to your smartphone.
- **Spacious Writing Area:** Features a 10-inch (25.4cm) writing area for ample creative space.
- **Safe Electronic Writing:** Designed with a reflective display for safe and comfortable writing.
- **Environment Friendly:** A recyclable and e-waste compatible device that reduces paper consumption.

SETUP

1. **Unboxing:** Carefully remove the Ruffpad 10X and its accessories from the packaging.
2. **Stylus:** Locate the included stylus. It is typically stored in a slot on the side or top of the writing pad.
3. **Battery Check:** The device comes with a pre-installed CR2016 coin cell battery. If the erase function does not work, ensure the battery is correctly seated or replace it if necessary.

OPERATING INSTRUCTIONS

Writing and Drawing

Use the provided stylus to write or draw directly on the LCD screen. The pressure-sensitive surface allows for varying line thickness.

Safe Electronic Writing

No more circuit failure worries, with reflective display writing!



Image: Writing on the Ruffpad 10X using the stylus.

Erasing Content

To clear the screen, press the erase button located at the bottom center of the pad. All content will be removed instantly.

Long Battery Life

Durable, but equally effective, that's 10X more benefits!


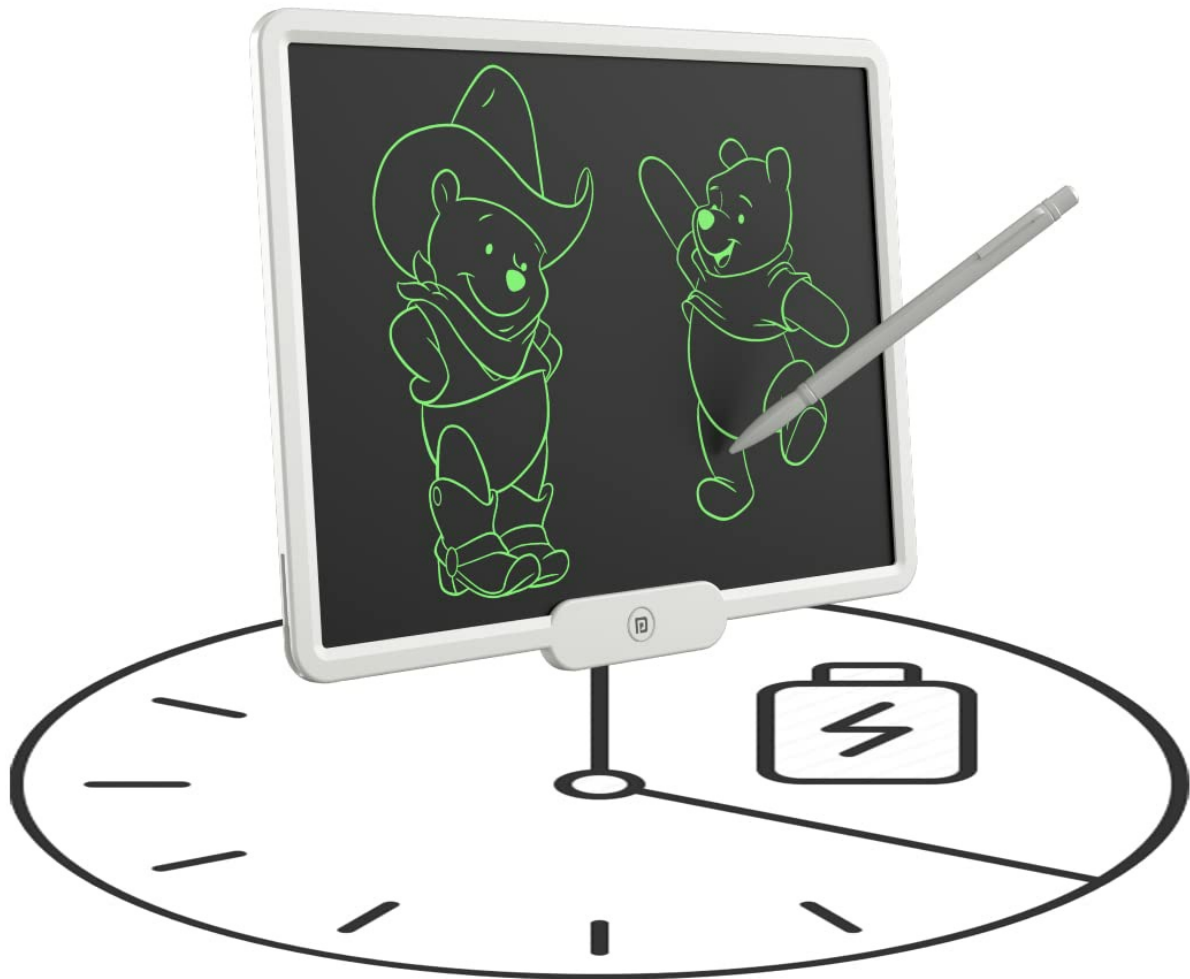


Image: Pressing the erase button to clear the screen.

Using the Smart Lock

To prevent accidental erasure of your notes or drawings, slide the smart lock switch (usually on the back or side of the device) to the locked position. This will disable the erase button. Slide it back to unlock when you wish to erase.

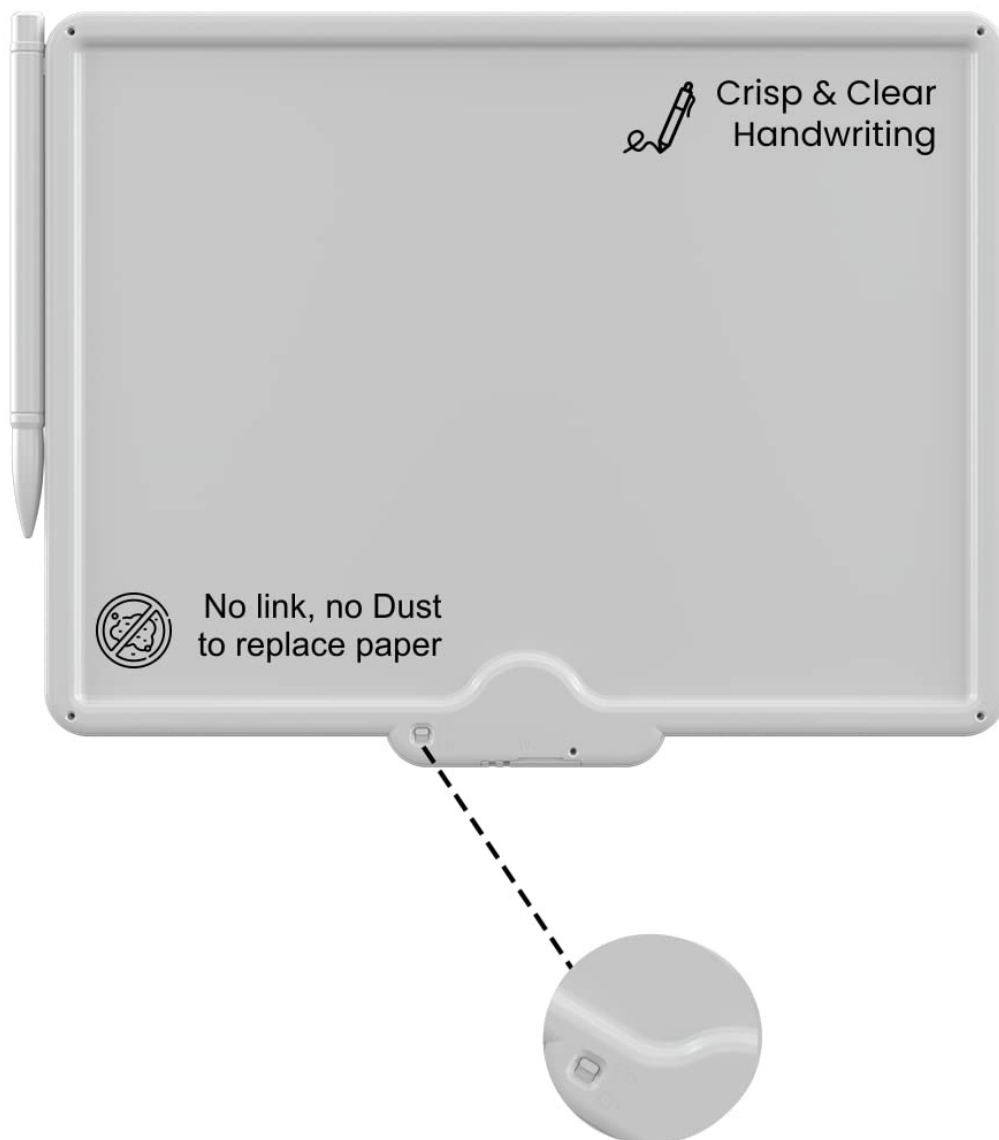

Smart Lock Enhanced

Save your thoughts, save time with smart lock enabled!

Image: The smart lock switch on the Ruffpad 10X.

Using the Ruffpad App

Download the official Ruffpad app from your smartphone's app store (iOS or Android). The app allows you to capture, save, and share the content displayed on your Ruffpad 10X screen. Follow the in-app instructions for scanning and managing your creations.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** The Ruffpad 10X uses a CR2016 coin cell battery. When the erase function becomes weak or stops working, it's time to replace the battery. Locate the battery compartment on the device, open it, and replace the old battery with a new CR2016 cell, ensuring correct polarity.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the screen.

TROUBLESHOOTING

Problem	Possible Solution
Screen does not erase.	◦ Check if the smart lock switch is in the unlocked position. ◦ Replace the CR2016 battery.
Writing is faint or inconsistent.	◦ Ensure you are using the provided stylus or a similar non-abrasive tool. ◦ The display brightness is reflective and depends on ambient light. Use in well-lit conditions for better visibility.
Stylus is lost or damaged.	Contact Portronics customer support for a replacement stylus. Avoid using sharp objects on the screen.

SPECIFICATIONS

Brand	Portronics
Model Name	Ruffpad 10X
Model Number	POR-1532
Display Type	LCD
Screen Size	10 Inches (25.4 cm)
Active Surface Area	645.16 square centimeters
Power Source	CR2016 Coin Cell Battery
Item Weight	390 Grams
Item Dimensions (L x W)	18L x 23W Centimeters
Special Feature	Unique LCD Writing and Erasing Functionality, Safe and Environment Friendly
Compatible Devices	Smartphone, Tablet (for app connectivity)
Country of Origin	China

WARRANTY INFORMATION

The Portronics Ruffpad 10X comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt for warranty claims. The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

SUPPORT

For technical assistance, warranty claims, or product inquiries, please contact Portronics customer support.

Manufacturer Contact Information:

Portronics Digital Pvt Ltd
B-76, 1st & 2nd Floor, Wazirpur Industrial Area,
New Delhi-110052, India

Please refer to the official Portronics website for the most up-to-date contact details and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B1F4PGQF>

More documents and user manuals: <https://manuals.plus/>