

GoWISE USA GW22980

GoWISE USA 5.5 Quart Air Fryer with 180° Viewing Window Instruction Manual

Model: GW22980

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your GoWISE USA 5.5 Quart Air Fryer with 180° Viewing Window. Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool before handling parts.
- Do not place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance.
- Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Use only accessories recommended by the manufacturer.

PRODUCT OVERVIEW

Familiarize yourself with the components of your GoWISE USA Air Fryer.



Image: Top-down view of the GoWISE USA 5.5 Quart Air Fryer, showcasing the digital control panel and the transparent viewing window.



Image: Angled view of the GoWISE USA 5.5 Quart Air Fryer, highlighting its compact design and the handle for the cooking basket.

Main Components:

- **Main Unit:** Houses the heating element and fan.

- **Digital Control Panel:** Touchscreen interface for settings and functions.
- **180° Viewing Window:** Transparent section to monitor cooking progress.
- **Cooking Basket:** Nonstick coated basket for holding food.
- **Crisper Tray:** Removable tray inserted into the basket for air circulation.
- **Handle:** For safely pulling out the cooking basket.



Image: A hand demonstrating the removal of the crisper tray from the air fryer's cooking basket, showing the nonstick surface.

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels.
2. Remove the cooking basket and crisper tray from the main unit.

Cleaning Before First Use:

1. Wash the cooking basket and crisper tray with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.

Placement:

- Place the air fryer on a stable, horizontal, and heat-resistant surface.
- Ensure adequate ventilation around the appliance.

OPERATING INSTRUCTIONS

Control Panel Overview:



Image: Close-up view of the GoWISE USA Air Fryer's digital touch control panel, displaying temperature and time settings along with various cooking function icons.

The large control panel features a one-touch menu screen with 8 cooking functions and additional controls.

Basic Operation:

1. Place the crisper tray into the cooking basket.
2. Place ingredients into the cooking basket. Do not overfill.
3. Slide the cooking basket back into the air fryer.
4. Plug the power cord into a grounded wall outlet.
5. Press the Power button to turn on the appliance.
6. Select a preset function or manually set the temperature and time using the up/down arrows.
7. Press the Start/Pause button to begin cooking.



Image: The air fryer's cooking basket, filled with french fries, pulled out from the main unit, demonstrating its capacity.

Preset Cooking Functions:

The air fryer includes 8 one-touch cooking functions:

- Air Fry
- Roast
- Broil
- Bake
- Grill
- Keep Warm
- Preheat
- Dehydrate

Using the 180° Viewing Window and Interior Light:

The large 180° viewing window allows you to monitor your food without opening the basket. The interior light can be activated to enhance visibility.



Image: The GoWISE USA Air Fryer in operation, with food visibly cooking inside through the transparent viewing window, illuminated by the interior light.



Image: Front view of the air fryer, showing the digital display and the cooking process visible through the viewing window.

Mute and Shake/Flip Alarm Functions:

- **Mute Function:** Turn off button press sounds for quiet operation.

- **Alarm Function:** Set an alarm to remind you to shake or flip ingredients for even cooking.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your air fryer.

Cleaning the Cooking Basket and Crisper Tray:

- The cooking basket and crisper tray are nonstick coated and should be hand washed.
- After each use, clean the basket and tray with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket and tray in hot water with dish soap for approximately 10 minutes.
- Do not use metal utensils or abrasive cleaning materials, as these can damage the nonstick coating.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth.
- Clean the interior with a damp cloth and mild detergent if necessary.
- Never immerse the main unit in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your air fryer, consult the following common problems and solutions.

Common Issues:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded outlet. Check if the power button has been pressed.
- **Food is not cooked evenly:** Ensure the basket is not overfilled. Shake or flip ingredients halfway through cooking. Adjust temperature or cooking time as needed.
- **White smoke coming from the appliance:** This may indicate fat residue from previous use. Clean the basket and crisper tray thoroughly. If cooking fatty foods, place a small amount of water in the bottom of the basket to prevent smoke.
- **Appliance emits a burning smell:** Unplug immediately. Check for any foreign objects or food debris on the heating element. Clean thoroughly.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Technical details for the GoWISE USA 5.5 Quart Air Fryer.

Feature	Detail
Model Name	5.5 Quart Air Fryer with 180° Viewing Window
Model Number	GW22980

Feature	Detail
Capacity	5.5 Quarts
Product Dimensions	14"D x 12"W x 10"H
Item Weight	12 Pounds
Color	Black
Material	Plastic
Output Wattage	1400 Watts
Voltage	120 Volts
Control Method	Touch
Nonstick Coating	Yes
Dishwasher Safe Parts	No (Hand Wash Recommended)
UPC	819687024045



Image: Diagram illustrating the dimensions of the GoWISE USA 5.5 Quart Air Fryer: 14 inches deep, 12 inches wide, and 10 inches high.

CUSTOMER SUPPORT

For further assistance, warranty information, or to report issues not covered in this manual, please contact GoWISE USA customer support. Refer to the product packaging or the official GoWISE USA website for current contact details.

