

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GoWISE](#) /

› [GoWISE USA 7-Quart Steam Air Fryer - with Touchscreen Display with 8 cooking presets + 100 Recipes](#)

## GoWISE GW22991

# GoWISE USA 7-Quart Steam Air Fryer

## INSTRUCTION MANUAL

Model: GW22991

## Introduction

---

Thank you for choosing the GoWISE USA 7-Quart Steam Air Fryer. This appliance combines the power of air frying with the benefits of steam cooking, offering a versatile solution for healthier and more efficient meal preparation. Please read this manual thoroughly before operation to ensure safe and optimal use of your new appliance.



Image: Front view of the GoWISE USA 7-Quart Steam Air Fryer, showcasing its sleek black design and digital touchscreen display.

## Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials from the air fryer and its accessories. Ensure all components are

present: main unit, fry pan, crisper tray with legs, and water reservoir.

2. **Initial Cleaning:** Before first use, wipe the exterior of the air fryer with a damp cloth. Wash the fry pan, crisper tray, and water reservoir with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space around all sides of the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Water Reservoir (for Steam Function):** To use steam or combo modes, fill the water reservoir with distilled water.



Image: A hand lifting the clear water reservoir from the top of the air fryer unit.

## Operating Instructions

The GoWISE USA 7-Quart Steam Air Fryer features an intuitive touchscreen display for easy operation. It offers three primary cooking modes: Air Fry, Steam, and Combo, along with eight convenient cooking presets.

### Cooking Modes:

- **Air Fry Mode:** Ideal for achieving crispy results with little to no oil.



Image: The air fryer basket pulled out, showing a generous portion of golden-brown french fries, indicating the Air Fry mode's capability.

- **Steam Mode:** Perfect for steaming vegetables, fish, and other delicate foods, preserving nutrients and moisture. The steam mode operates at a fixed temperature of 212°F (100°C).



Image: The air fryer basket pulled out, revealing vibrant steamed broccoli and carrots, demonstrating the Steam mode's function.

- **Combo Mode:** Combines air frying and steaming for dishes that require both crispiness and moisture, such as roasted chicken.

### Cooking Presets:

The air fryer includes eight pre-programmed settings for common foods:

- Fries/Potato
- Chicken
- Eggs
- Vegetables
- Bread/Bagel
- Cake
- Broil (Air Fry mode only)

Select a preset from the touchscreen display. You can pair 7 of these presets with your desired cooking mode (Air Fry, Steam, or Combo), except for the Broil preset which only works in Air Fry mode.

### Temperature and Timer Control:

- **Temperature Range:** 180°F - 400°F (82°C - 204°C).
- **Timer:** Up to 60 minutes.
- Adjust temperature and time using the dedicated controls on the touchscreen.

## Using the Crisper Tray with Legs:

The crisper tray can be elevated using its collapsible legs to achieve optimal broiling results, allowing for better air circulation around the food.



Image: A hand carefully placing the crisper tray into the air fryer basket.



Image: A close-up view of the crisper tray with its collapsible legs extended, ready for use.

## Maintenance and Cleaning

- **Daily Cleaning:** After each use, allow the appliance to cool completely. Remove the fry pan and crisper tray. Wash them with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly. The main unit should be wiped down with a damp cloth.
- **Self-Clean Function:** The steam air fryer features a self-clean function to descale the interior. Refer to the specific instructions in the full manual for activating this cycle. This function uses steam to loosen residue inside the cooking chamber.
- **Drip Tray:** The appliance includes a drip tray to collect excess moisture or oil. Empty and clean this tray regularly.



Image: A hand pulling out the small drip tray located at the bottom front of the air fryer unit.

- **Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

## Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; main unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the fry pan is fully inserted into the main unit.
Food is not cooked evenly.	Overcrowding the basket; insufficient shaking/flipping.	Cook food in smaller batches. Shake or flip food halfway through cooking for even results.
White residue inside after steaming.	Mineral buildup from tap water.	Use distilled water for the steam function. Run the self-clean function to descale the interior.

Problem	Possible Cause	Solution
Smoke coming from the unit.	Grease buildup; fatty foods.	Clean the fry pan and crisper tray thoroughly after each use. For fatty foods, consider using parchment paper or aluminum foil in the basket (ensure it doesn't block airflow).

## Specifications

Feature	Detail
Special Feature	Manual, crisper tray with legs
Product Dimensions	13"D x 16"W x 16"H
Color	black
Capacity	7 Liters
Material	Plastic
Recommended Uses For Product	Broil, Steam
Output Wattage	1.7E+3 Watts
Item Weight	18 Pounds
Brand	GoWISE
Wattage	1700 watts
Voltage	120 Volts
Control Method	Touch
Model Name	GW22991
Has Nonstick Coating	No
Inner Material	Plastic
Controller Type	touch
Is Dishwasher Safe	No
Max Temperature Setting	400
UPC	819687024250
Global Trade Identification Number	00819687024250
Manufacturer	GoWISE USA
Item Weight	18 pounds
ASIN	B0B1GK7VRQ
Item model number	GW22991

Feature	Detail
Customer Reviews	3.9 3.9 out of 5 stars 26 ratings 3.9 out of 5 stars
Best Sellers Rank	#417,776 in Kitchen & Dining (See Top 100 in Kitchen & Dining) #885 in Air Fryers
Date First Available	June 3, 2022



Image: Diagram showing the dimensions of the GoWISE USA 7-Quart Steam Air Fryer (16"H x 16"W x 13"D).

## Warranty and Support

GoWISE USA products are designed for durability and performance. For detailed warranty information, including coverage and terms, please refer to the warranty card included with your product or visit the official GoWISE USA website.

If you encounter any issues or have questions regarding your GoWISE USA 7-Quart Steam Air Fryer, please contact our customer support team. Our representatives are available to assist you with troubleshooting, parts replacement, and general inquiries.

## Customer Support:

- **Website:** [www.gowiseusa.com](http://www.gowiseusa.com)
- **Email:** Refer to website for contact form or email address.
- **Phone:** Refer to website for phone number.

Please have your model number (GW22991) and purchase information ready when contacting support.