

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [COSTWAY](#) /

> [COSTWAY Countertop Ice Maker User Manual - Model 26Lbs/24H Black](#)

COSTWAY 26Lbs/24H Black

COSTWAY Countertop Ice Maker User Manual

Model: 26Lbs/24H Black

INTRODUCTION

Thank you for purchasing the COSTWAY Countertop Ice Maker. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new ice machine. Please read these instructions thoroughly before use and retain them for future reference.



Image: The COSTWAY Countertop Ice Maker, black in color, shown with a clear ice scoop and a few bullet-shaped ice cubes. This image displays the overall design of the appliance.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before use.
- Do not touch the evaporator or ice basket when the unit is operating.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Supervise children when the appliance is in use.
- Unplug from the outlet when not in use or before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Do not use outdoors.
- Ensure the appliance is placed on a stable, level surface.

- Do not block ventilation openings.
- Use only potable water.

PARTS LIST

- Ice Maker Unit
- Ice Scoop
- Removable Ice Basket
- User Manual



Simple Control Panel
Easy to Control and Operate

Ice Scoop & Removable Basket
Offer Great Convenience

Anti-slip Foot Pad
Provide Strong Stability

Image: This image highlights key components and features: the simple control panel with indicator lights, the included ice scoop and removable ice basket, and the anti-slip foot pads on the bottom of the unit for stability.

SETUP

1. **Unpacking:** Carefully remove the ice maker from its packaging. Remove all packing materials, including tape and

labels.

2. **Placement:** Place the ice maker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 4 inches of space on all sides). Avoid direct sunlight or heat sources.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance" section for detailed cleaning instructions.
4. **Power Connection:** Ensure the power cord is securely plugged into a grounded electrical outlet.



Image: The black COSTWAY ice maker positioned on a clean kitchen countertop, demonstrating a typical setup environment.

OPERATING INSTRUCTIONS

1. **Add Water:** Open the lid and fill the water reservoir with potable water up to the "MAX" fill line. Do not overfill.
2. **Power On:** Plug the unit into a power outlet. Press the **ON/OFF** button on the control panel. The "ICE MAKING" indicator light will illuminate.
3. **Ice Production:** The ice maker will begin the ice-making cycle. The first batch of bullet-shaped ice cubes will be

ready in approximately 8 minutes.

4. **Ice Full Indicator:** When the ice basket is full, the "ICE FULL" indicator light will illuminate, and the ice making process will pause. Remove ice using the provided scoop. The unit will resume ice production once ice is removed.
5. **Add Water Indicator:** If the water level is too low, the "ADD WATER" indicator light will illuminate, and the unit will stop making ice. Add more water to the reservoir and press the **ON/OFF** button to restart.
6. **Power Off:** To stop ice production, press the **ON/OFF** button. Unplug the unit when not in use.



Image: A visual guide showing the three main steps for operation: filling the water tank, pressing the ON/OFF button on the control panel, and removing ice with the scoop.

MAINTENANCE

Self-Cleaning Function

1. Ensure the unit is empty of ice and water.
2. Fill the water reservoir with clean water up to the MAX line.

3. Press and hold the **CLEAN** button for 3-5 seconds. The self-cleaning cycle will begin, indicated by a flashing light.
4. The cycle typically lasts several minutes. Once complete, drain the water from the unit by removing the drain plug located at the bottom.
5. Rinse the interior with fresh water and drain again.

General Cleaning

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth dampened with a mild detergent solution.
- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or sharp objects.
- Ensure all parts are dry before reassembling and storing.



Image: This graphic highlights the self-cleaning function, a key maintenance feature of the ice maker, along with other benefits like low noise operation and portability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working.	No power.	Check if the unit is plugged in and the outlet is functional.
"ADD WATER" indicator is on.	Water reservoir is empty or low.	Fill the water reservoir to the MAX line and restart.
"ICE FULL" indicator is on.	Ice basket is full.	Remove ice from the basket.
Ice cubes are small or not forming.	Water temperature too high; ambient temperature too high.	Use colder water; place the unit in a cooler environment.
Unusual noise during operation.	Unit not level; internal components vibrating.	Ensure the unit is on a level surface. If noise persists, contact customer support.

SPECIFICATIONS

- **Model:** 26Lbs/24H Black
- **Ice Production Capacity:** 26 lbs per 24 hours
- **Ice Shape:** Bullet
- **Ice Making Time:** Approximately 8 minutes per cycle
- **Refrigerant:** R600a
- **Voltage:** 120 Volts
- **Noise Level:** 45 dB
- **Dimensions (L x W x H):** 12" x 9" x 12"
- **Net Weight:** Approximately 19.07 lbs



Image: A diagram illustrating the compact dimensions of the ice maker: 12 inches high, 9 inches wide, and 12 inches deep.

WARRANTY AND SUPPORT

COSTWAY products are designed for quality and reliability. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official COSTWAY website. Please have your model number and purchase date available when contacting support.

Website: www.costway.com