



[Manuals.plus](#) /

› [Joiedomi](#) /

› Joiedomi 12 FT Tall Scary Ghost Halloween Inflatable Instruction Manual

Joiedomi JOI-BU4-31664

Joiedomi 12 FT Tall Scary Ghost Halloween Inflatable Instruction Manual

Model: JOI-BU4-31664

1. INTRODUCTION

Thank you for choosing the Joiedomi 12 FT Tall Scary Ghost Halloween Inflatable. This product is designed to enhance your outdoor Halloween decorations with its impressive height and integrated LED lighting. Please read this manual thoroughly before setup and operation to ensure safe and proper use.



Image 1.1: The Joiedomi 12 FT Tall Scary Ghost Inflatable illuminated at night.

2. SAFETY INFORMATION

- This product is for outdoor use. Ensure it is placed on a stable, level surface.
- Keep the inflatable and its electrical components away from water sources, sprinklers, and excessive moisture to prevent electric shock.
- Always secure the inflatable using the provided stakes and ropes to prevent it from blowing away in windy conditions.
- Do not place the inflatable near open flames, heat sources, or combustible materials.
- Ensure the power cord is not damaged, pinched, or covered. Use a UL-certified extension cord if necessary, ensuring it is rated for outdoor use.
- Unplug the inflatable from the power source when not in use, during strong winds, heavy rain, or when unattended for extended periods.
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Joiedomi 12 FT Tall Scary Ghost Inflatable
- 1 x Built-in Air Blower
- 1 x UL Safety Certified Plug (attached to blower)
- Stakes for securing
- Strings for securing



Image 3.1: Included components and key features.

4. SETUP INSTRUCTIONS

Follow these steps to set up your inflatable ghost:

1. **Unpack and Position:** Carefully remove the inflatable from its packaging. Lay it flat in your desired outdoor location, ensuring there are no obstructions around it.
2. **Close Zipper:** Locate the zipper at the bottom of the inflatable. Ensure it is fully closed to allow for

proper inflation.

3. **Connect Power:** Plug the UL Safety Certified plug into a standard outdoor-rated electrical outlet. The built-in air blower will begin to inflate the ghost automatically.
4. **Secure with Strings:** Once the inflatable is fully inflated, attach the provided strings to the designated loops on the inflatable.
5. **Anchor with Stakes:** Use the stakes to firmly secure the strings to the ground. Adjust the tension of the strings to ensure the inflatable stands upright and is stable.



Image 4.1: Step-by-step setup guide.

5. OPERATING INSTRUCTIONS

The Joiedomi Scary Ghost Inflatable operates simply:

- **Inflation:** The inflatable will begin to inflate immediately upon being plugged into a power source. It typically inflates in seconds.
- **LED Lights:** The built-in blue ice LED lights will automatically illuminate when the unit is powered on, providing a glowing effect.
- **Deflation:** To deflate, simply unplug the unit from the power source. The air will slowly release, and the

inflatable will collapse.



LET US BRING JOY TO YOUR HOME

Safe for indoor and outdoor use.



INFLATES IN SECONDS



WEATHER RESISTANT



**IP44
SPLASH PROOF**



Image 5.1: Key operational features.

6. MAINTENANCE

- **Cleaning:** If the inflatable becomes dirty, gently wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric or electrical components.
- **Drying:** Ensure the inflatable is completely dry before deflating and storing to prevent mold or mildew.

7. STORAGE

When the Halloween season concludes or when not in use:

1. Unplug the inflatable and allow it to fully deflate.
2. Ensure the fabric is clean and completely dry.
3. Carefully fold or roll the inflatable to minimize wrinkles and save space.
4. Store the inflatable and all its components (stakes, strings) in a cool, dry place, away from direct sunlight and extreme temperatures. The original packaging can be used for storage.



Image 7.1: The product packaging, suitable for storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	No power; Zipper open; Blower obstructed.	Check power connection; Ensure zipper is fully closed; Clear any obstructions from the blower intake.
Inflatable does not stand upright or sways.	Insufficient anchoring; Strong winds.	Ensure all stakes and strings are properly secured and taut; Deflate during strong winds.

Problem	Possible Cause	Solution
LED lights are not working.	No power; Damaged wiring.	Check power connection; If wiring is damaged, discontinue use and contact customer support.
Inflatable deflates slowly or partially.	Small tear or puncture; Zipper not fully closed.	Inspect for small holes and patch if possible; Ensure zipper is completely closed.

9. SPECIFICATIONS

- **Model Number:** JOI-BU4-31664
- **Product Dimensions (Inflated):** Approximately 48 inches (W) x 27 inches (D) x 144 inches (12 FT) (H)
- **Item Weight:** 4.97 pounds
- **Power Source:** Standard electrical outlet (UL Certified Plug)
- **Lighting:** Built-in Blue Ice LEDs
- **Material:** Waterproof Polyester



Image 9.1: Product dimensions for reference.

10. WARRANTY AND SUPPORT

Joiedomi products are manufactured with quality and care. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For product support, troubleshooting assistance, or to inquire about replacement parts, please contact Joiedomi customer service through the retailer where the product was purchased.