

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bayer](#) /

› [Bayer Xeo Twin Pram Instruction Manual - Stars Navy & Pink](#)

Bayer 26716AA



INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Bayer Xeo Twin Pram. Please read all instructions carefully before use to ensure safe and proper handling of the product. This twin doll's pram is designed for dolls up to 18 inches (46 cm) and features flexible sun covers, a height-adjustable handle, and versatile seating arrangements.

SAFETY INFORMATION

Caution: Not suitable for children under 3 years. Contains small parts which may present a choking hazard.

- Always supervise children during play.
- Ensure all parts are securely assembled before allowing use.
- Keep packaging materials away from children to prevent suffocation.

WHAT'S IN THE BOX

Your Bayer Xeo Twin Pram package includes the following items:

- 1 Dolls Twin Pram frame
- 2 Doll seats with sun covers
- 1 Matching Handbag
- 1 Shopping Basket (integrated)



Image: The Bayer Xeo Twin Pram in Stars Navy & Pink, shown with its matching handbag. The pram features two seats with canopies and a storage basket underneath.

SETUP AND ASSEMBLY

Follow these steps to assemble your Xeo Twin Pram:

- 1. Unfold the Frame:** Carefully unfold the pram frame until it locks into place. Ensure all locking mechanisms are engaged.
- 2. Attach the Seats:**
 - Align the seat connectors with the corresponding slots on the pram frame.
 - Press firmly until each seat clicks securely into position.
 - The seats can be attached facing forward, backward, or towards each other.
- 3. Adjust the Handle:** The handle height is adjustable from 23-28 inches (58-71 cm). Press the buttons on both sides of the handle and slide it to the desired height. Release the buttons to lock.
- 4. Attach the Handbag:** The matching handbag can be attached to the handle for convenient storage.

Your browser does not support the video tag.

Video: This video demonstrates the assembly and various configurations of the Bayer Xeo Twin Pram, including attaching seats, adjusting the handle, and changing seat directions.

OPERATING INSTRUCTIONS

Adjusting Seat Direction

The Xeo Twin Pram offers flexible seating options:

- **Forward-Facing:** Both dolls face away from the child pushing the pram.
- **Rearward-Facing:** Both dolls face towards the child pushing the pram.
- **Facing Each Other:** Dolls face inward, allowing for interactive play.
- **Angled Positions:** Seats can be positioned straight (one behind the other) or with an angle (one seat more reclined, the other more upright).

To change the seat direction, unlatch the seat from the frame, rotate it to the desired orientation, and re-attach securely. Adult assistance may be required for younger children.



Image: The Bayer Xeo Twin Pram shown with both doll seats configured to face forward, away from the child pushing the pram.



Image: The Bayer Xeo Twin Pram shown with both doll seats configured to face each other, allowing for interactive play.

Sun Covers

Each seat is equipped with an adjustable sun cover to protect dolls from sun and wind. Adjust the canopy by pulling it forward or pushing it back as needed.

Storage

The integrated shopping basket located beneath the seats provides space for accessories. The matching shoulder bag offers additional storage and can be hung on the handle.



Image: A close-up view of the matching handbag, featuring a stars pattern, designed to complement the Bayer Xeo Twin Pram.

Maintenance

- **Cleaning:** Wipe down the pram frame with a damp cloth and mild soap. Fabric parts can be spot cleaned. Do not machine wash.
- **Storage:** The twin doll's pram can be folded up to save space when not in use or for travel. Ensure it is clean and dry before storing.
- **Inspection:** Regularly check all screws, bolts, and moving parts to ensure they are secure and functioning correctly.

Troubleshooting

- **Pram not unfolding/folding correctly:** Ensure all locking mechanisms are disengaged before attempting to fold or unfold. Apply gentle, even pressure.
- **Handle not adjusting:** Check that the adjustment buttons on both sides of the handle are fully pressed in before attempting to slide the handle up or down.

- **Wheels not moving smoothly:** Inspect wheels for any debris or obstructions. Clean if necessary. Ensure wheels are properly attached.

SPECIFICATIONS

Feature	Detail
Product Dimensions	30 x 14.5 x 29.5 inches (75.5 x 37 x 75 cm)
Item Weight	6.93 pounds
Model Number	26716AA
Recommended Age	36 months - 8 years
Dolls Size Compatibility	Up to 18 inches (46 cm)
Adjustable Handle Height	23-28 inches (58-71 cm)
Manufacturer	Bayer Design

WARRANTY AND SUPPORT

For warranty information or product support, please contact Bayer Design customer service. Refer to the product packaging or the official Bayer Design website for contact details.

© 2026 Bayer Design. All rights reserved.