

## SNAIGE F\_22SM-T1000E

# SNAIGE Refrigerator F\_22SM-T1000E Instruction Manual

Model: F\_22SM-T1000E | Brand: SNAIGE

## 1. INTRODUCTION

Thank you for choosing the SNAIGE F\_22SM-T1000E Refrigerator. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the refrigerator and keep it for future reference.

The SNAIGE F\_22SM-T1000E is designed to provide reliable food storage, ensuring freshness and convenience for your household.

## 2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not damage the refrigerant circuit.
- This appliance is intended to be used in household and similar applications.
- Unplug the refrigerator before cleaning or performing any maintenance.

## 3. SETUP

### 3.1 Unpacking

Carefully remove all packaging materials, including tape and labels, from your new refrigerator. Dispose of packaging materials responsibly. Keep plastic bags away from children.

### 3.2 Placement

Place the refrigerator on a firm, level floor. Ensure there is adequate space around the appliance for proper ventilation. Avoid placing it in direct sunlight or near heat sources like stoves or radiators.

- Allow at least 10 cm (4 inches) of space at the back and sides for air circulation.
- Ensure the door can open fully.

### 3.3 Leveling

Adjust the leveling feet at the bottom front of the refrigerator to ensure it is stable and level. A level appliance operates more efficiently and prevents the door from swinging open or closed.

### 3.4 First Use

Before plugging in the refrigerator, allow it to stand upright for at least 2-4 hours. This allows the refrigerant to settle. After plugging in, let the appliance run empty for 24 hours to reach its optimal operating temperature before loading food.



**Figure 1: SNAIGE F\_22SM-T1000E Refrigerator.** This image displays the white upright refrigerator with its door slightly ajar, revealing multiple clear storage drawers. The drawers are filled with various fresh produce, including red and yellow bell peppers,

eggplants, and a large pumpkin. A blue sticker with "5 METU GARANTİJA" (5-year warranty) is visible in the bottom left corner of the image. The interior of the refrigerator appears spacious and well-organized.

## 4. OPERATING INSTRUCTIONS

### 4.1 Temperature Control

The temperature control dial or panel is typically located inside the refrigerator compartment. Adjust the setting according to your needs. A medium setting is usually sufficient for general use.

- **Colder Setting:** For faster cooling or when the ambient temperature is high.
- **Warmer Setting:** When the ambient temperature is low or to save energy.

### 4.2 Food Storage

Utilize the clear drawers and shelves for organized storage.

- **Drawers:** Ideal for fruits and vegetables to maintain their freshness.
- **Shelves:** Suitable for general food items, dairy, and beverages.

### 4.3 Fast Freeze Function

Some models feature a "FAST F" (Fast Freeze) function, indicated on one of the drawers. This function rapidly lowers the temperature to quickly freeze fresh food, preserving its quality. Activate this function when adding a large quantity of unfrozen food. Remember to deactivate it after 24 hours or once the food is frozen to save energy.

## 5. MAINTENANCE

### 5.1 Cleaning

Regular cleaning helps maintain the efficiency and hygiene of your refrigerator.

- **Interior:** Unplug the appliance. Wash interior surfaces with a solution of mild soap and warm water. Rinse and dry thoroughly. Do not use abrasive cleaners or harsh detergents.
- **Exterior:** Clean the exterior with a soft cloth dampened with mild soap and water. Dry with a soft cloth.
- **Door Gaskets:** Clean door gaskets regularly to ensure a proper seal.

### 5.2 Defrosting

If your model is a manual defrost type, defrost it when the frost layer reaches about 5 mm (0.2 inches) thick.

1. Unplug the refrigerator.
2. Remove all food items and store them in a cool place.
3. Leave the door open to allow frost to melt naturally. You can place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior before plugging it back in and returning food.

## 6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Check power cord; reset breaker; check house power.
Temperature is too warm.	Door not closed properly; temperature setting too high; too much food loaded; poor ventilation.	Ensure door is sealed; adjust temperature; do not overload; ensure proper clearance.
Unusual noises.	Appliance not level; items rattling inside; normal operating sounds.	Level the appliance; rearrange items; gurgling/hissing sounds are normal.

## 7. SPECIFICATIONS

Feature	Detail
Brand	SNAIGE
Model Name	SNAIGE FRIGORIFERATORE SNAIGF 22SM-T1000E
Model Number	F_22SM-T1000E
Product Dimensions (L x W x H)	24 x 69 x 2.5 cm
Weight	52 kg
Number of Pieces	1
Batteries Required	No

## 8. WARRANTY AND SUPPORT

The SNAIGE F\_22SM-T1000E Refrigerator comes with a **5-year warranty**, ensuring peace of mind regarding its quality and performance.

For technical assistance, spare parts, or warranty claims, please contact your authorized SNAIGE service center or the retailer from whom you purchased the appliance. Please have your model number and purchase date ready when contacting support.

