

[Manuals.plus](#) /

› [Uetmulik](#) /

› Adjustable Bed Richmat HJH55 Remote Control Replacement User Manual

## Uetmulik HJH55

# Adjustable Bed Richmat HJH55 Remote Control Replacement

Brand: Uetmulik | Model: HJH55

## INTRODUCTION

---

This manual provides essential information for the proper use, setup, and maintenance of your Uetmulik Adjustable Bed Richmat HJH55 Remote Control Replacement. Please read these instructions carefully before use to ensure optimal performance and compatibility.

The Richmat HJH55 remote is specifically designed for Classic Brands adjustable beds. It is crucial to verify your existing remote and bed's control box label to ensure compatibility. This remote will not work with other brands of adjustable beds.

Multiple versions of the remote look similar, please match your remote button, if the buttons are different from ours, this product will not replace your remote.

## Ours



## Others



**Image Description:** A close-up image of a label found on an adjustable bed's control box. The label clearly shows "Richmat" and "Model: HJH55", along with FCC ID information. This label is critical for verifying that your adjustable bed is compatible with this replacement remote control.



**Richmat**

Model: HJH55

Contains FCC ID 2AJJGHJRF

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

4-4 000000011





**Image Description:** A side-by-side comparison of two remote controls. The left remote is labeled "Ours" and shows the Uetmulik Richmat HJH55 remote with specific buttons like "ANTI SNORE" and "FLAT" (for M3). The right remote is labeled "Others" and shows a similar-looking remote but with different button labels such as "LOUNGE" and a different icon for the M3 button. This image emphasizes the importance of matching your old remote's buttons exactly to ensure compatibility, as multiple versions of the HJH55 model exist with varying functions.

There are several versions of the Richmat HJH55 remote. Even if the model number matches, the buttons and their functions might differ. It is essential that the buttons on your old remote exactly match those on this replacement remote. If they do not, this product may not be compatible with your bed.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Ensure correct polarity when inserting the batteries.





**Image Description:** A view of the back of the Richmat HJH55 remote control with its battery compartment cover removed, showing slots for two AAA batteries. Next to the remote is a small control box label, similar to the one shown previously, indicating "Richmat Model: HJH55". This image illustrates where to insert the batteries and also shows the control box label for reference during pairing.

## 2. Pairing Instructions

The remote control needs to be paired with your adjustable bed's control box. Follow one of the methods below. If these methods do not work, refer to your bed's original pairing instructions.



## Pairing Method #1

Press and hold the **head up** and **foot up** buttons as indicated on the left

While holding the two buttons on your remote, press the Reset Coding button indicated on the right (it may be labeled something else but it works the same)



## pairing Pairing Method #2

Similar to the steps above, but instead of holding the head up and foot up, you will hold the **head up** and **foot down** as indicated on the left

While holding the two buttons on your remote, press the Reset Coding button indicated on the right (it may be labeled something else but it works the same)



## Pairing Method #3

Similar to the other 2 steps, but lastly you will hold the **head down** and **foot up** as indicated on the left

While holding the two buttons on your remote, press the Reset Coding button indicated on the right (it may be labeled something else but it works the same)



**Image Description:** A visual guide illustrating three different pairing methods for the Richmat HJH55 remote control. Each method shows a diagram of the remote with specific buttons circled (Head Up, Foot Up, Head Down, Foot Down) and a corresponding diagram of the bed's control box, highlighting the "Reset Coding" or "Learn" button. This image visually supports the step-by-step pairing instructions provided in the manual.

### Method 1:

1. On the remote, press and hold the **"head up"** button and the **"foot up"** button at the same time for 10 seconds.
2. Push the button on the side of the control box underneath the bed where it indicates reset coding (usually labeled **"Learn"** or **"Reset Coding"**). Do not press and hold; just press and release.
3. Once you hear beeps, this indicates that the remote is synced.

### Method 2:

1. On the remote, press and hold the **"head down"** button and the **"foot up"** button at the same time for 10 seconds.

2. Push the button on the side of the control box underneath the bed where it indicates reset coding (usually labeled **"Learn"** or **"Reset Coding"**). Do not press and hold; just press and release.
3. Once you hear beeps, this indicates that the remote is synced.

#### Method 3:

1. On the remote, press and hold the **"head up"** button and the **"foot down"** button at the same time for 10 seconds.
2. Push the button on the side of the control box underneath the bed where it indicates reset coding (usually labeled **"Learn"** or **"Reset Coding"**). Do not press and hold; just press and release.
3. Once you hear beeps, this indicates that the remote is synced.

## OPERATING THE REMOTE CONTROL

---

Once paired, your Richmat HJH55 remote control allows you to adjust your compatible adjustable bed. Familiarize yourself with the button layout and functions.





**Image Description:** A clear front view of the Uetmulik Richmat HJH55 adjustable bed remote control. The remote is black with clearly labeled buttons for various bed functions, including "TV", "ANTI SNORE", "ZG" (Zero Gravity), "HEAD" (up/down arrows), "FOOT" (up/down arrows), "M1", "M2", "M3" (memory positions), "10 MIN", "20 MIN" (massage timers), "HEAD" (flat), "FLAT", "FOOT" (flat), "TIMER/ALL OFF", a light icon, and "MODE". This image serves as a visual reference for all the remote's controls.

### Button Functions:

- **TV:** Adjusts the bed to a comfortable TV viewing position.
- **ANTI SNORE:** Elevates the head slightly to help reduce snoring.
- **ZG (Zero Gravity):** Positions the bed to simulate a feeling of weightlessness, often with the head and feet slightly elevated.
- **HEAD (Up/Down Arrows):** Adjusts the head section of the bed up or down.
- **FOOT (Up/Down Arrows):** Adjusts the foot section of the bed up or down.
- **M1, M2, M3:** Memory preset buttons. Press and hold to save a favorite position, or press briefly to recall a saved position.
- **10 MIN / 20 MIN:** Activates a massage function for the specified duration (if your bed supports this feature).
- **HEAD (Flat):** Returns the head section of the bed to a flat position.
- **FLAT:** Returns both the head and foot sections of the bed to a completely flat position.
- **FOOT (Flat):** Returns the foot section of the bed to a flat position.
- **TIMER / ALL OFF:** May control a timer function or turn off all active functions (e.g., massage, light).
- **Light Icon:** Activates or deactivates an under-bed light or other integrated lighting (if your bed supports this feature).
- **MODE:** Cycles through different massage modes or other bed functions (if applicable).

### MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA batteries.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

| Problem                                | Possible Cause                                                                | Solution                                                                                                                                    |
|----------------------------------------|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Remote not responding                  | Dead or low batteries; Remote not paired; Obstruction between remote and bed. | Replace batteries; Re-pair the remote using one of the methods in the "Setup" section; Ensure clear line of sight to the bed's control box. |
| Bed functions intermittently           | Weak batteries; Interference; Loose connection at control box.                | Replace batteries; Minimize electronic interference; Check all cables connected to the bed's control box.                                   |
| Remote buttons do not match old remote | Incorrect version of HJH55 remote purchased.                                  | This remote is only compatible if the buttons exactly match your original remote. If they do not, this remote will not work with your bed.  |

If you continue to experience issues after following these troubleshooting steps, please contact Uetmulik customer support for further assistance.

SPECIFICATIONS

- **Model Number:** HJH55
- **Brand:** Uetmulik
- **Manufacturer:** Richmat
- **Compatible Devices:** Adjustable beds (specifically Classic Brands with Richmat HJH55 control boxes)
- **Max Number of Supported Devices:** 1
- **Color:** Black
- **Item Weight:** 3.38 ounces
- **Package Dimensions:** 8.7 x 6.93 x 0.87 inches
- **Country of Origin:** China

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Uetmulik Richmat HJH55 remote control, please contact Uetmulik customer support. Refer to your purchase documentation or the Amazon product page for contact details. It is recommended to have your product model number (HJH55) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question