

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Rino8 Pro Unlocked Android Cell Phone User Manual

ASHATA Rino8 Pro

ASHATA Rino8 Pro Unlocked Android Cell Phone User Manual

Model: Rino8 Pro

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your ASHATA Rino8 Pro Unlocked Android Cell Phone. Please read this guide thoroughly to ensure proper use and to maximize your device's performance.



Image: Front and back view of the ASHATA Rino8 Pro phone, illustrating its design and highlighting features like the AI Quad Camera and Android 6 system.

SETUP

1. What's in the Box

Verify that all items are present in the package:

- ASHATA Rino8 Pro Cell Phone
- USB Cable
- Earphones
- Protective Case
- Screen Protector



Image: The ASHATA Rino8 Pro phone alongside its included accessories: a clear protective case, screen protector, USB charging cable, and wired earphones.

2. Inserting SIM and Memory Cards

The ASHATA Rino8 Pro supports two SIM cards and one Micro SD card simultaneously. Locate the SIM/SD card tray on the side of the device. Use the provided SIM ejector tool (if included) to open the tray. Carefully place your Nano-SIM cards and Micro SD card into their respective slots, ensuring correct orientation. Close the tray securely.



Image: A close-up view of the phone's back, showing the placement of an SD card, SIM1, and SIM2 in their respective slots.

3. Charging the Battery

Before first use, fully charge the phone's 2200mAh battery. Connect the USB cable to the phone's charging port and the other end to a compatible USB power adapter or computer. The charging indicator will appear on the screen. Disconnect the charger once the battery is full.

Built in 2200mAh Large Capacity Battery

For watching videos, chatting on WeChat, listening to music

Allows you to play for a long time when fully charged



Image: The ASHATA Rino8 Pro phone screen displaying a battery charging animation with a percentage of 44.94% and 'Quick charge' text.

4. Powering On/Off

To power on, press and hold the Power button located on the side of the phone until the screen lights up. To power off, press and hold the Power button, then select 'Power off' from the options that appear on the screen.

OPERATING INSTRUCTIONS

1. Basic Navigation

The ASHATA Rino8 Pro runs on Android 6. Navigate the interface using touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.

2. Making Calls and Sending Messages

To make a call, open the 'Phone' app, enter the number, and tap the call icon. To send a message, open the 'Messages' app, start a new conversation, enter the recipient's number or select from contacts, type your message, and tap send.

3. Connecting to Wi-Fi

Go to **Settings > Wi-Fi**. Turn on Wi-Fi, then select your desired network from the list. Enter the password if prompted and tap 'Connect'.

4. Using Face Recognition

The device features face recognition for quick unlocking. To set it up, go to **Settings > Security > Face Unlock**. Follow the on-screen instructions to register your face. Ensure good lighting conditions during setup for optimal performance.



Image: A person's face being scanned by the phone for face recognition, with a digital overlay indicating the scanning process.

5. Camera Usage

The ASHATA Rino8 Pro is equipped with a 2MP front camera and a 5MP rear camera. Open the 'Camera' app to capture photos and videos. Tap the screen to focus and press the shutter button to take a picture. Switch between front and rear cameras using the camera toggle icon.



Image: The phone's screen showing a picture of a dog, with other pet images partially visible, illustrating the camera's capability.

6. Memory Management

The phone has 32GB of internal storage. For additional storage, use a Micro SD card up to 128GB.

Regularly transfer large files like photos and videos to your SD card or cloud storage to free up internal memory and maintain device performance.



Image: The phone screen showing a car game, with icons indicating 128GB expandable storage, 2GB RAM, and MTK6799 processor.

MAINTENANCE

1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials, which can damage the device's surface.

2. Battery Care

To prolong battery life, avoid exposing the phone to extreme temperatures. Do not let the battery completely drain frequently. Use the original charger and cable for optimal charging.

3. Software Updates

Periodically check for system updates in **Settings > About phone > System updates**. Keeping your software updated ensures you have the latest features and security enhancements.

TROUBLESHOOTING

1. Phone Not Turning On

Ensure the battery is charged. Connect the phone to a charger and wait a few minutes before attempting to power it on again. If it still doesn't turn on, try holding the Power button for an extended period (10-15 seconds).

2. SIM Card Not Recognized

Check if the SIM card is correctly inserted into the tray. Power off the phone, re-insert the SIM card, and power it back on. Verify that your SIM card is active and not damaged.

3. Device Freezing or Slow Performance

Close unused applications running in the background. Clear cache data from apps in **Settings > Apps**. If the issue persists, restart the device. Consider performing a factory reset as a last resort (back up your data first).

4. Poor Call Quality or Network Issues

Ensure you are in an area with good network coverage. Try restarting the phone. If using dual SIMs, ensure the correct SIM is selected for calls. Contact your network provider if problems persist.

SPECIFICATIONS

Feature	Detail
Model Name	Rino8 Pro
Screen Size	5.45 Inches
Resolution	854 x 480
Processor	MTK6799 Quad Core CPU
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 128GB (Micro SD)
Operating System	Android 6
Rear Camera	5 MP
Front Camera	2 MP
Battery Capacity	2200 Milliamp Hours
Cellular Technology	2G, 3G
Connectivity	USB, Wi-Fi
Audio Jack	3.5 mm
Security Features	Face Recognition
Item Weight	12.3 ounces

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for warranty claims.