

Cuifati CUIFATlxsyk6oti7a15285-12

Cuifati Digital Alarm Clock Radio with Bluetooth Speaker - User Manual

Model: CUIFATlxsyk6oti7a15285-12

INTRODUCTION

Thank you for purchasing the Cuifati Digital Alarm Clock Radio with Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read it carefully before use to ensure optimal performance and longevity.



Front view of the Cuifati Digital Alarm Clock Radio, displaying time and environmental data.

PRODUCT OVERVIEW


Package Contents

- Cuifati Digital Alarm Clock Radio
- USB Charging Cable
- AUX Audio Cable
- FM Antenna
- User Manual



Image showing the included accessories: FM antenna, AUX audio cable, and USB charging cable.

Device Layout

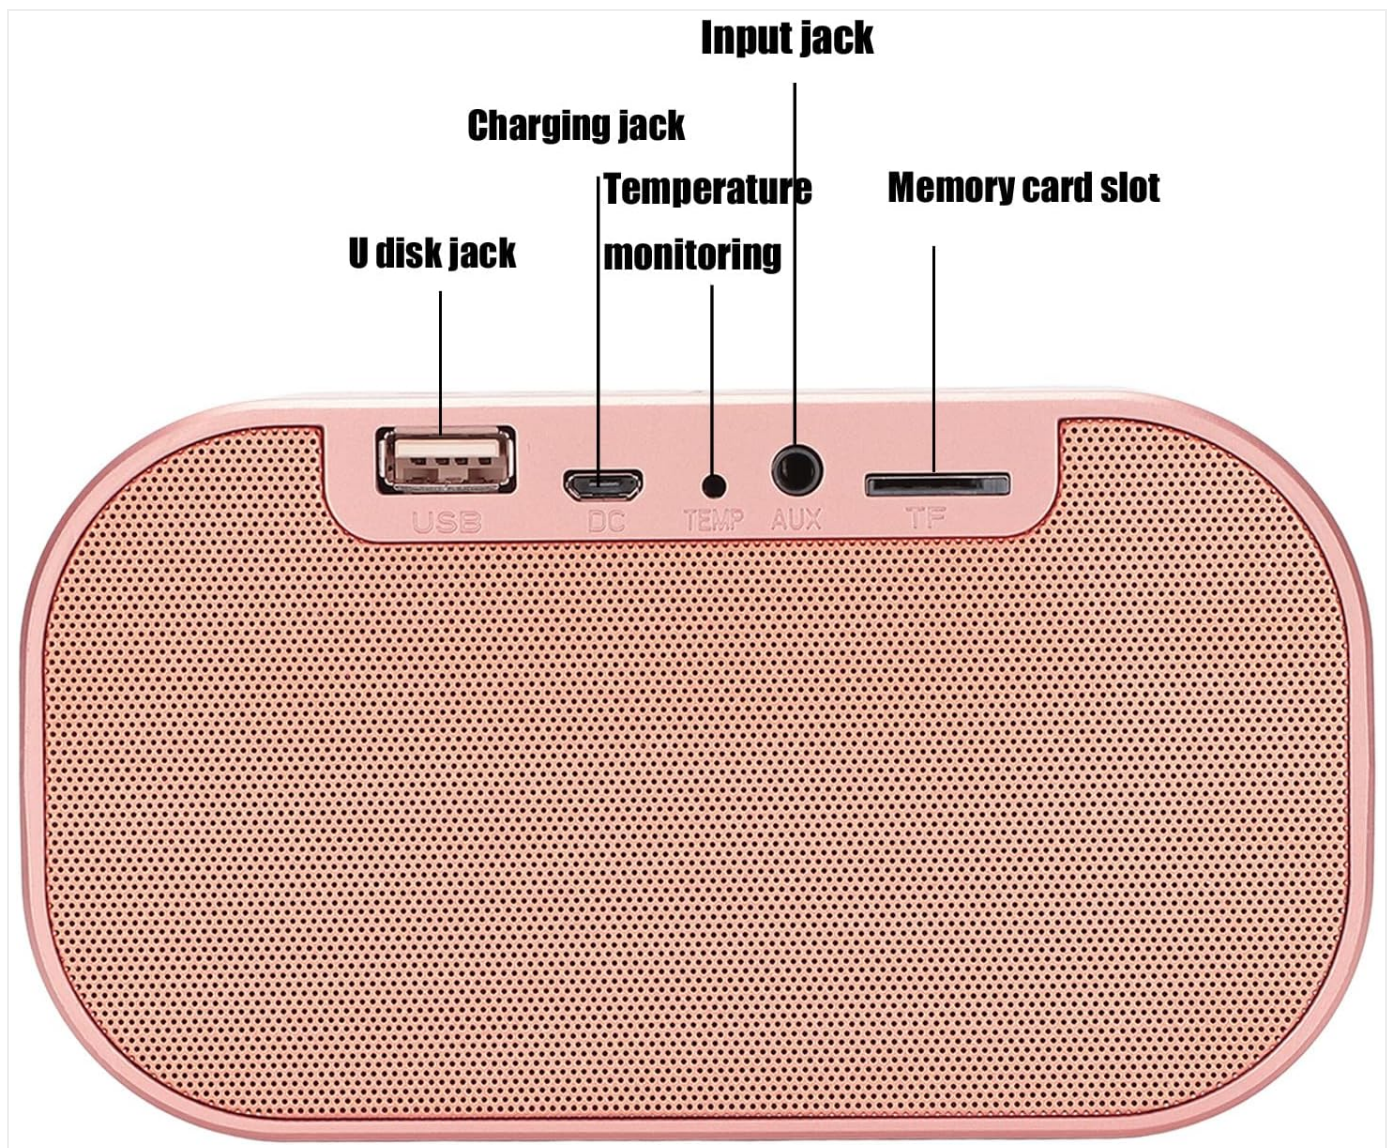

Rear panel of the device, indicating the U disk jack (USB), Charging jack (DC), Temperature monitoring port (TEMP), Input jack (AUX), and Memory card slot (TF).

Key and display description



Detailed view of the front display, showing indicators for Time Display, 24-hour system, Temperature, Humidity, Alarm 1, Alarm 2, AM/PM, Wireless function (Bluetooth), and Input modes (AUX, TF, FM, USB).



Top panel of the device, showing control buttons for playback, mode selection, power, and volume.

SETUP

1. Powering On/Charging

1. Connect the provided USB charging cable to the DC charging jack on the rear of the device.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
3. The device has a built-in high-quality polymer battery. Ensure it is fully charged before first use for optimal battery life.

2. Initial Time and Alarm Setting

1. Press and hold the **MODE** button to enter time setting mode.
2. Use the **+** and **-** buttons to adjust the hour and minute.
3. Press the **MODE** button again to confirm each setting.
4. To set alarms, refer to the "Alarm Clock Function" section under Operating Instructions.

OPERATING INSTRUCTIONS

Power On/Off

- Press and hold the **Power** button to turn the device on or off.

Mode Selection

- Press the **MODE** button to cycle through available modes: Bluetooth, FM Radio, AUX Input, USB Playback, TF Card Playback.

Bluetooth Speaker Function

- Ensure the device is in Bluetooth mode (indicated by a Bluetooth icon on the display).
- On your mobile device, search for Bluetooth devices and select "Cuifati Alarm Clock" (or similar name) to pair.
- Once paired, you can play audio from your device through the alarm clock's dual high-power speakers.
- The effective transmission distance is approximately 10 meters (32.8 feet).

Superior Quality Sound

Dual sound unit, high powered dual speakers plus heavy bass diaphragm, bright sound without distortion explosive power



The device features a dual sound unit with high-power speakers and a heavy bass diaphragm for clear audio.

Two-Way Call Function

- When connected via Bluetooth, the built-in HD call microphone allows for hands-free calls.
- Equipped with intelligent noise reduction technology for clear conversations without delay.
- Press the **Play/Pause** button to answer or end a call.

Built in FM radio

Built in FM radio module and configured with an external antenna, so that the band frequency stable reception



The integrated HD call microphone and noise reduction technology enable clear two-way communication.

FM Radio Function

- Connect the external FM antenna to the AUX input jack for improved reception.
- Switch to FM Radio mode using the **MODE** button.
- Press the **Play/Pause** button to auto-scan and save available stations.
- Use the **Previous/Next** buttons to navigate through saved stations.



The device features a built-in FM radio module and supports an external antenna for stable reception.

Alarm Clock Function

- Press the **Alarm 1** or **Alarm 2** button to activate or deactivate the respective alarm.
- To set an alarm, press and hold the **Alarm 1** or **Alarm 2** button.
- Use the **+** and **-** buttons to adjust the alarm time.
- Press the alarm button again to confirm.

Display Brightness Adjustment

- The display has three adjustable brightness levels.
- Short press the **Previous Song** button to cycle through brightness levels (High, Medium, Low).
- Long press the **Previous Song** button to turn off the backlight.
- Long press the **Next Song** button to adjust backlight brightness.

Three brightness levels

◀ Previous song/long press to turn on backlight

▶ Next song/long press to adjust backlight brightness



First gear
(high brightness)



Second gear
(medium brightness)



Third gear
(low brightness)

The display offers three brightness settings: high, medium, and low, for comfortable viewing in various lighting conditions.

USB and TF Card Playback

- Insert a USB flash drive into the U disk jack or a TF (Micro SD) card into the memory card slot.
- The device will automatically switch to the corresponding playback mode or can be selected via the **MODE** button.
- Use the **Previous/Next** buttons to skip tracks and **Play/Pause** for playback control.

AUX Input

- Connect an external audio device (e.g., MP3 player, smartphone) to the AUX input jack using the provided AUX audio cable.
- Switch to AUX mode using the **MODE** button. Audio will play from the connected device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Exposure:** This device is for indoor use only. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery or no power connection.	Connect the device to a power source using the USB cable and allow it to charge.

Problem	Possible Cause	Solution
No sound from speakers.	Volume too low, incorrect mode, or device not paired (Bluetooth).	Increase volume. Ensure correct mode is selected. Re-pair Bluetooth device if necessary. Check AUX cable connection.
Bluetooth connection unstable.	Device too far from the alarm clock, interference, or low battery.	Move devices closer (within 10m). Avoid obstacles. Charge the alarm clock.
FM radio reception is poor.	Antenna not connected or poor signal area.	Ensure the external FM antenna is properly connected. Try repositioning the antenna or the device.
Alarm does not sound.	Alarm not set or deactivated.	Verify alarm settings and ensure the alarm is activated.

SPECIFICATIONS

Brand	Cuifati
Model Number	CUIFATlxsyk6oti7a15285-12
Color	Rose Gold
Display Type	Digital
Special Features	Adjustable Brightness, FM Radio, Bluetooth Speaker, Two-Way Call, Thermometer, Backup Battery
Power Source	Electric Cable (USB)
Material	Metal
Connectivity Technology	Bluetooth
Bluetooth Transmission Distance	Approx. 10 meters (32.8 feet)
Batteries Included	Yes (Built-in polymer battery)
Mounting Type	Table Mount
Indoor/Outdoor Use	Indoor

WARRANTY AND SUPPORT

Limited Warranty

This Cuifati product is covered by a 90-day limited warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.



Cuifati offers a 90-day warranty for this product.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Cuifati customer support through the retailer's platform or visit the official Cuifati website for contact information. Please have your model number (CUIFATlxsyk6oti7a15285-12) and purchase details ready.

© 2026 Cuifati. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question