

[Manuals.plus](#) /

› [WINIA](#) /

› WINIA KOS-61WW 0.7 Cu. Ft. Mirror Finish Microwave Oven User Manual

WINIA KOS-61WW

WINIA KOS-61WW 0.7 Cu. Ft. Mirror Finish Microwave Oven User Manual

Model: KOS-61WW

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not use this microwave oven for commercial purposes.
- Always ensure the turntable and roller ring are correctly positioned before operation.

2. PRODUCT OVERVIEW

The WINIA KOS-61WW microwave oven is designed for convenient and efficient heating and cooking. It features a compact design with a mirror finish door and an intuitive control panel.



Figure 2.1: Front view of the WINIA KOS-61WW Microwave Oven, showcasing its mirror finish door and control panel on the right.



Figure 2.2: Interior view of the microwave oven with the door open, showing the glass turntable and interior cavity.

Control Panel Features



Figure 2.3: Close-up of the control panel, featuring buttons for power, express cooking, defrost, clock, pause/clear, start, and a rotary knob for auto-cooking and time/weight settings.

- **Power Level Buttons:** Adjust microwave power output.
- **Express Cook:** For quick cooking at full power.
- **Defrost (Time/Weight):** Defrost food based on time or weight.
- **Clock:** Set the current time.
- **Auto Cook:** Select from 6 pre-programmed cooking menus.
- **Start/Pause/Clear:** To start, pause, or cancel cooking.
- **Rotary Knob:** Used to set cooking time, weight, or select auto-cook options.

3. SETUP AND INSTALLATION

Unpacking

- Remove all packaging materials from inside and outside the microwave oven.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If any damage is present, do not operate the oven and contact customer service.

Placement

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation: leave a minimum of 10 cm (4 inches) of space at the rear, 20 cm (8 inches) at the top, and 5 cm (2 inches) on each side for proper airflow.
- Do not place the oven near heat sources or in a damp environment.

Power Connection

Plug the power cord into a standard grounded electrical outlet. Ensure the voltage matches the specifications of the microwave oven.

Your browser does not support the video tag.

Video 3.1: An unboxing video demonstrating the initial setup and placement of a similar microwave oven. This video provides a visual guide for unpacking and positioning the appliance.

4. OPERATING INSTRUCTIONS

Setting the Clock

1. Press the 'Clock' button.
2. Use the number buttons or rotary knob to enter the current time.
3. Press the 'Clock' button again to confirm.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the 'Power' button repeatedly to select the desired power level (e.g., P100 for full power, P80 for 80% power). There are 5 power levels available.
4. Use the rotary knob to set the cooking time.
5. Press 'Start' to begin cooking.

Auto-Cook Menus

The microwave features 6 pre-programmed auto-cook menus for common foods.

1. Place food in a microwave-safe container.
2. Turn the 'Auto Cooking' rotary knob to select the desired menu (e.g., Popcorn, Potato, Pizza, Frozen Vegetables, Beverage, Dinner Plate).
3. Press 'Start' to begin. The oven will automatically set the cooking time and power level.

Defrosting

You can defrost food by time or by weight.

- **Defrost by Time:** Press 'Defrost (Time)', use the rotary knob to set the defrosting time, then press 'Start'.
- **Defrost by Weight:** Press 'Defrost (Weight)', use the rotary knob to enter the food weight, then press 'Start'.

Child Lock Function

To prevent unsupervised operation by children:

1. To activate: Press and hold the 'Pause/Clear' button for 3 seconds. A lock indicator will appear on the display.

2. To deactivate: Press and hold the 'Pause/Clear' button for 3 seconds again. The lock indicator will disappear.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Interior:** Clean the interior cavity after each use with a damp cloth. For stubborn stains, place a bowl of water with lemon juice inside and heat for a few minutes to loosen residue, then wipe clean.
- **Door and Seals:** Keep the door and door seals clean to ensure proper closure.
- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or a dishwasher.
- Always unplug the microwave oven before cleaning.

6. TROUBLESHOOTING GUIDE

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Food not suitable for microwave heating.	Adjust cooking time and power level; Ensure food is microwave-safe.
Turntable not rotating	Turntable or roller ring not correctly placed; Obstruction under the turntable.	Reposition turntable and roller ring; Remove any obstructions.
Unusual noise during operation	Food container touching oven walls; Turntable not centered.	Ensure container is not touching walls; Center the turntable.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Technical details for the WINIA KOS-61WW Microwave Oven:

Feature	Detail
Brand	WINIA
Model Number	KOS-61WW
Capacity	0.7 Cubic Feet (19.8 Liters)
Color	White/Black (Mirror Finish)

Feature	Detail
Power Consumption	1150 W
Output Power	700 W
Power Levels	5
Auto-Cook Menus	6
Material	Stainless Steel
Dimensions (W x D x H)	48.26 x 38.1 x 30.48 cm (19 x 15 x 12 inches)
Weight	11 kg (24.25 lbs)
Special Features	Programmable, Child Lock
Control Type	Button and Rotary Knob
Installation Type	Countertop



Figure 7.1: Diagram showing the dimensions of the WINIA KOS-61WW Microwave Oven.

8. WARRANTY AND SUPPORT

Warranty Information

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, service, or questions regarding your WINIA KOS-61WW microwave oven, please contact WINIA customer support. Contact details can typically be found on the manufacturer's website or in the warranty documentation.

When contacting support, please have your model number (KOS-61WW) and purchase date readily available.

© 2024 WINIA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question