

[Manuals.plus](#) /

> [Soundcore](#) /

> Soundcore Space A40 Auto-Adjustable Active Noise Cancelling Wireless Earbuds User Manual

Soundcore A3936

Soundcore Space A40 Wireless Earbuds User Manual

Model: A3936

INTRODUCTION

This manual provides comprehensive instructions for the Soundcore Space A40 Auto-Adjustable Active Noise Cancelling Wireless Earbuds. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.



Image: The Soundcore Space A40 wireless earbuds and their charging case. The earbuds are dark blue with a metallic finish, and the charging case is a matching dark blue.

WHAT'S IN THE BOX

- Soundcore Space A40 Earbuds
- Charging Case

- USB-C Cable
- Ear Tips (XS/S/M/L/XL sizes)



Image: A visual representation of the Soundcore Space A40 package contents, including the earbuds, charging case, USB-C cable, and various sizes of ear tips.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the USB-C cable to the charging port on the case and a power source. The LED indicators on the case will show charging status.



Image: The Soundcore Space A40 charging case placed on a wireless charging pad, indicating wireless charging capability.

The earbuds provide up to 10 hours of playtime on a single charge, and the charging case extends this to a total of 50 hours. A quick 10-minute charge can provide 4 hours of listening time.

2. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device, enable Bluetooth and search for "Soundcore Space A40" in the list of available devices.
3. Select "Soundcore Space A40" to connect. Once connected, the earbuds will indicate successful pairing.

For subsequent use, the earbuds will automatically connect to the last paired device when removed from the case.

Wearing the Earbuds

Choose the ear tips that provide the best seal and comfort for your ears. A proper fit is crucial for optimal sound quality and noise cancellation.

REDUCES NOISE BY UP TO 98%

With an upgraded noise cancelling system.



Performance Tested
✔ Reduces Noise By Up to 98%

Image: A person wearing the Soundcore Space A40 earbuds, demonstrating their comfortable and discreet fit.

Touch Controls

The Soundcore Space A40 earbuds feature touch-sensitive controls for various functions:

Action	Function
Single Tap (Left/Right)	Play/Pause, Answer/End Call

Action	Function
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Press and Hold (Left/Right)	Switch Noise Cancelling Modes (ANC/Transparency/Normal)
Triple Tap (Left/Right)	Activate Voice Assistant

These controls can be customized via the Soundcore app.

Noise Cancelling Modes

The Space A40 features auto-adjustable active noise cancelling, which detects external noises and automatically selects a suitable level of noise cancelling for your surroundings. You can also manually switch between modes:

- **Active Noise Cancellation (ANC):** Reduces ambient noise by up to 98% for an immersive listening experience.
- **Transparency Mode:** Allows you to hear your surroundings while still enjoying your audio, ideal for awareness in urban environments.
- **Normal Mode:** Standard audio playback without noise cancellation or transparency.



50H

Charging Case

10H

Single Charge

Image: A diagram illustrating the internal components of the Soundcore Space A40 earbud, highlighting the external and internal microphones used for noise cancellation and the ergonomic noise-blocking fit.



10 MIN Charge = **4 HR** Playtime ⚡

Image: A visual demonstrating the adaptive noise cancelling feature of the Soundcore Space A40, showing a user enjoying the earbuds in different environments such as commuting, flying, outdoors, and indoors.

Soundcore App

Download the Soundcore app from your device's app store to unlock additional features and customization options, including:

- Customizable EQ settings
- HearID Sound personalization
- Firmware updates
- Touch control customization
- Switching between noise cancelling modes

SO LIGHTWEIGHT, SO COMFORTABLE



4.9g

Image: A smartphone screen displaying the Soundcore app interface, showing options for sound effects, ambient sound modes, and controls for the Space A40 earbuds.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. For ear tips, remove them from the earbuds and clean with a mild soap solution, then rinse thoroughly and dry completely before reattaching.

Storage

When not in use, always store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your Soundcore Space A40 earbuds, please refer to the following common solutions:

- **No Sound/Poor Sound Quality:**

- Ensure earbuds are properly seated in your ears and ear tips provide a good seal.
- Check Bluetooth connection and ensure earbuds are paired correctly.
- Clean any debris from the ear tips and earbud grilles.
- Adjust volume on both your device and the earbuds.

- **Earbuds Not Charging:**

- Ensure the charging cable is securely connected to both the case and power source.
- Verify the charging contacts on the earbuds and inside the case are clean and free of debris.
- Try a different USB-C cable or power adapter.

- **Pairing Issues:**

- Ensure Bluetooth is enabled on your device.
- Place earbuds back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
- Forget "Soundcore Space A40" from your device's Bluetooth list and attempt to pair again.
- Reset the earbuds (refer to the Soundcore app or online support for specific reset instructions).

- **Noise Cancellation Not Effective:**

- Ensure earbuds are worn correctly and ear tips provide a tight seal.
- Switch between ANC modes in the Soundcore app to find the most effective setting for your environment.
- Ensure earbud microphones are not obstructed.

For more detailed troubleshooting, please refer to the official Soundcore support resources or the [Troubleshooting Guide \(PDF\)](#).

SPECIFICATIONS

Feature	Detail
Model Name	A3936

Feature	Detail
Noise Control	Active Noise Cancellation (Auto-Adjustable)
Connectivity Technology	Wireless (Bluetooth 5.2)
Audio Driver Type	Dynamic Driver (Double-layer diaphragm)
Battery Life (Earbuds)	Up to 10 Hours
Battery Life (with Charging Case)	Up to 50 Hours
Fast Charging	10 min charge = 4 hours playtime
Weight (Earbud)	4.9g (approx. 0.17 oz)
Water Resistance Level	Waterproof
Frequency Range	20 Hz - 20,000 Hz
Control Method	Touch
Included Components	Ear Tips, Charging Case, USB Cable
UPC	194644102258

WARRANTY AND SUPPORT

Soundcore products come with a limited warranty. For detailed warranty information, product registration, and technical support, please visit the official Soundcore website or contact their customer service.

Online Resources:

- [Soundcore Official Website](#)
- [User Manual \(PDF\)](#)
- [Troubleshooting Guide \(PDF\)](#)

For direct support, you can reach Anker customer service at service@soundcore.com or call +1 (800) 988-7973 (US/CA).