

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Keeppley](#) /

› [Keeppley Crayon Shinchan Shinnosuke Nohara Building Blocks Model QQCS467220 Instruction Manual](#)

Keeppley QQCS467220

Keeppley Crayon Shinchan Shinnosuke Nohara Building Blocks

INSTRUCTION MANUAL - MODEL QQCS467220

[Information](#) [Assembly](#) [Operation](#) [Maintenance](#) [Introduction](#) [Safety](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

Thank you for choosing the Keeppley Crayon Shinchan Shinnosuke Nohara Building Blocks set. This manual provides essential information for the assembly, care, and enjoyment of your new building block model. This set allows you to construct a detailed representation of Shinnosuke Nohara using high-quality building blocks, featuring printed patterns instead of stickers for enhanced durability and appearance.

2. Safety Information

- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended for younger children.
- **Material:** The blocks are made from plastic. Do not ingest.
- **Assembly:** Follow the included pictorial instructions carefully. Do not force pieces together.
- **Storage:** Store the blocks in a safe place away from extreme temperatures and direct sunlight to prevent deformation or discoloration.

3. Assembly Instructions

Before beginning assembly, please ensure all parts are present. Refer to the parts list provided in the packaging. The estimated building duration is approximately 20-30 minutes.

1. **Unpack Components:** Carefully open the packaging and lay out all the building blocks and the instruction booklet on a clean, flat surface.
2. **Review Instructions:** Familiarize yourself with the step-by-step pictorial instructions provided in the box. These instructions are designed to guide you through the construction process.
3. **Begin Assembly:** Start building from the base as indicated in the manual. Connect the blocks firmly

but gently. The blocks are designed for a secure fit.

4. **Printed Graphics:** Note that patterns and graphics are printed directly onto the blocks, eliminating the need for stickers. Handle these blocks with care to preserve the printed details.
5. **Verify Each Step:** Ensure each step is completed correctly before moving to the next. If a piece does not fit, re-check the instructions and the orientation of the blocks.
6. **Final Check:** Once assembly is complete, inspect the model to ensure all parts are securely connected and the structure is stable.



Figure 1: Front view of the assembled Shinnosuke Nohara building block model.



Figure 2: Side view of the assembled Shinnosuke Nohara building block model.



Figure 3: Another side view of the assembled Shinnosuke Nohara building block model.

4. Operation (Play)

Once assembled, the Keeppley Crayon Shinchan Shinnosuke Nohara model is ready for display or gentle play. This building block set is designed to encourage creativity, spatial reasoning, and fine motor skills.

- **Display:** Place your finished model on a stable surface for display.
- **Gentle Play:** The model is robust for gentle handling. Avoid dropping or applying excessive force, which could cause parts to detach.
- **Reassembly:** If parts become detached, refer to the assembly instructions to reattach them.

5. Maintenance

Proper care will ensure the longevity and appearance of your building block model.

- **Cleaning:** To clean the blocks, gently wipe them with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not on display, store the assembled model or individual blocks in a clean, dry environment, away from direct sunlight and high temperatures. The original packaging or a sturdy plastic box is ideal for storage.
- **Avoid Liquids:** Keep the blocks away from water and other liquids to prevent damage to the plastic and printed graphics.

6. Troubleshooting

Should you encounter any issues during assembly or use, refer to the following common solutions:

- **Missing Parts:** If you find any parts missing upon opening the box, please contact Keeppley customer support with your product model number and details of the missing components.
- **Difficulty Connecting Blocks:** Ensure the blocks are correctly oriented according to the instructions. Apply firm, even pressure. Do not force blocks together, as this can cause damage.

- **Model Instability:** Re-check the assembly steps, particularly the foundational layers. Ensure all blocks are fully pressed into place.
- **Damaged Parts:** If any blocks are damaged, contact customer support for assistance.

7. Specifications

Model Number	QQCS467220
Manufacturer	Keeppley
Material Type	Plastic
Colour	Multicolor
Product Dimensions (LxWxH)	9 x 12 x 8 cm
Item Weight	454 g
Assembly Required	Yes
Recommended Age	4 - 16 years
Educational Objective(s)	Motor Skills, Spatial Reasoning
Included Components	Build Blocks

8. Warranty and Support

Keeppley products are manufactured to high-quality standards. For any questions, concerns, or to report missing or damaged parts, please contact Keeppley customer support. Please have your product model number (QQCS467220) and purchase information ready when contacting support.

Specific warranty details may vary by region and retailer. Please refer to your purchase documentation or the official Keeppley website for detailed warranty information.