

- [Manuals.plus](#) /
- › [Hammer H](#) /
 - › Hammer H Dig Rugged Flip Phone User Manual

Hammer H Dig

Hammer H Dig Rugged Flip Phone User Manual

Model: Dig

INTRODUCTION

The Hammer H Dig is a rugged flip phone designed for durability and ease of use. It features an IP68 rating for water and dust resistance, dual screens, large tactile buttons, and a long-lasting 1200 mAh battery. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Image: The Hammer H Dig Rugged Flip Phone in a partially open state, displaying its robust design, keypad, and the external screen.

SETUP

1. Battery, SIM Card, and Memory Card Installation

Before first use, install the battery, SIM card(s), and an optional memory card.

1. **Remove the Back Cover:** Carefully pry open the back cover of the phone.
2. **Insert SIM Card(s):** Locate the SIM card slots. The Hammer H Dig supports Dual SIM. Insert your SIM card(s) into the designated slots with the gold contacts facing down.
3. **Insert Memory Card (Optional):** If desired, insert a microSD memory card into its dedicated slot for expanded storage.
4. **Insert Battery:** Place the 1200 mAh Lithium-ion battery into the battery compartment, ensuring the contacts align correctly.
5. **Replace Back Cover:** Securely attach the back cover until it clicks into place.



Image: Rear view of the Hammer H Dig phone, illustrating the textured back cover and the area where the battery and SIM cards are installed.

2. Initial Charging

Fully charge the phone before its first use.

- **Using the Charging Station:** Place the phone into the included charging station. Ensure it is seated correctly and the charging indicator light illuminates.
- **Using the Adapter:** Alternatively, connect the provided charging adapter directly to the phone's Micro USB port.



Image: The Hammer H Dig phone securely placed in its charging dock, indicating the ease of recharging.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen illuminates.
- **To Power Off:** Press and hold the Power/End Call button, then select 'Power Off' from the options.

2. Making and Receiving Calls

- **Making a Call:** Open the phone, dial the number using the large keypad, and press the Green Call button.
- **Receiving a Call:** Open the phone to answer an incoming call.
- **Ending a Call:** Close the phone or press the Red End Call button.



Image: The Hammer H Dig phone being closed, demonstrating the intuitive action of ending a call by flipping the device shut.

3. Dual Screens

The Hammer H Dig features two screens for convenience:

- **Main Screen (2.4"):** The internal color display for all primary phone functions, menus, and content.
- **External Screen (1.44"):** A smaller display on the front cover that shows essential information such as date, time, network coverage, battery status, and caller ID for incoming calls without needing to open the phone.



Image: The Hammer H Dig phone in its closed position, highlighting the external screen displaying time and other notifications.

4. Keypad and Navigation

The phone features large, easy-to-press buttons. Use the navigation keys to move through menus and select options.



Image: The Hammer H Dig phone fully open, showcasing its large, well-spaced keypad designed for easy dialing and navigation.

5. Internet Access and Connectivity

- **3G Connectivity:** The phone supports 3G for basic internet access. Consult your network provider for data plan details.
- **Bluetooth:** Enable Bluetooth in the settings menu to pair with compatible devices such as headsets or car kits.
- **Wi-Fi:** The phone supports Wi-Fi connectivity. Access Wi-Fi settings to connect to available networks.

6. Camera Functionality

The Hammer H Dig is equipped with an 8 Megapixel rear camera and a 1 Megapixel front camera. Access the camera application from the main menu to capture photos and videos.

7. SOS Function

The phone includes an SOS button for emergencies. Configure emergency contacts in the settings menu. When activated, the SOS function will send pre-set messages or dial emergency numbers.

MAINTENANCE

1. Durability and Protection (IP68)

The Hammer H Dig is IP68 certified, meaning it is resistant to dust and can withstand immersion in water up to 1.5 meters for 30 minutes. This makes it suitable for use in challenging environments. Ensure all port covers are securely closed to maintain water and dust resistance.

2. Cleaning

To clean your phone, use a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the device's surface or seals.

3. Battery Care

The 1200 mAh battery provides an average battery life of up to 10 days on standby or 240 hours of talk time. To prolong battery life:

- Avoid extreme temperatures.
- Charge the battery regularly, but avoid overcharging.
- Use only the original charger and charging station provided.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Solution
Phone does not power on	Ensure the battery is correctly installed and charged. Connect to the charger for at least 30 minutes.
Cannot make or receive calls	Check SIM card installation. Ensure you have network coverage. Contact your service provider.
Battery not charging	Verify the charger and charging station connections. Ensure the charging port is clean. Try a different power outlet.
Camera error	Restart the phone. If the issue persists, contact customer support.
External screen not displaying information	Ensure the phone is powered on. Check display settings.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please refer to the Support section.

SPECIFICATIONS

Feature	Detail
Model Name	Dig
Brand	Hammer H

Feature	Detail
Durability Rating	IP68 (Waterproof, Dustproof)
Main Screen Size	2.4 Inches
Main Screen Resolution	320 x 240
External Screen Size	1.44 Inches (implied from description)
Battery Capacity	1200 mAh Lithium-ion
Average Battery Life (Standby)	Up to 10 days
Talk Time	240 Hours
Cellular Technology	3G
Wireless Connectivity	Bluetooth, Wi-Fi
SIM Card Slots	Dual SIM
Rear Camera Resolution	8 Megapixels
Front Camera Resolution	1 Megapixel
Weight	136 Grams
Input	Buttons
Charging Port	Micro USB

WARRANTY AND SUPPORT

Warranty Information

Your Hammer H Dig phone is covered by a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Hammer H customer support. Contact details can typically be found on the manufacturer's official website or in the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B1N4DC1M>

More documents and user manuals: <https://manuals.plus/>