

Evolved Novelties 840719

Evolved Novelties Tap & Thrust Dual Vibe User Manual

Model: 840719

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Evolved Novelties Tap & Thrust Dual Vibe. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Information

- Clean the device thoroughly before and after each use with warm water and a mild, toy-safe cleaner.
- Do not use with silicone-based lubricants, as these can damage the silicone material. Use water-based lubricants only.
- Discontinue use immediately if you experience any discomfort or irritation.
- Keep out of reach of children.
- This product is for adult use only.

2. PRODUCT OVERVIEW

The Evolved Tap & Thrust Dual Vibe is designed for dual stimulation, offering both internal thrusting and vibrating sensations, alongside external tapping stimulation. Its flexible design allows for customized comfort and satisfaction.

Components

The device features a main shaft with a textured, vibrating head and a separate tapping shaft. It is constructed from smooth silicone with chrome-finished ABS plastic details.





Image 2.1: The Evolved Tap & Thrust Dual Vibe, illustrating its overall design and control panel.

Key Features

- Thrusting, tapping curved vibrator design.
- Main shaft thrusts while its textured head vibrates.
- 7 thrusting and vibrating speeds & functions.

- Wide, wing-shaped tapping stimulator pulses in a center spot.
- 7 tapping speeds & functions, with the center spot lighting up when in use.
- Flexibility in the elbow of the shaft for easier navigation.
- Easy-to-use 2-button control panel.
- LED illuminates buttons when in use.
- Made from smooth silicone and chrome-finished ABS plastic.
- Waterproof & submersible.

3. SETUP

Charging the Device

1. Locate the charging port, typically found at the base of the device.
2. Insert the provided USB charging cable into the port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
4. The LED indicator on the device will illuminate or flash to indicate charging.
5. Allow the device to charge fully before first use. Charging time may vary, but typically takes 2-3 hours. The LED indicator will change or turn off when charging is complete.
6. Disconnect the charger once fully charged. Do not overcharge.

4. OPERATING INSTRUCTIONS

The device features an intuitive 2-button control panel for easy operation.





Image 4.1: Detail of the control panel with two buttons.

Basic Operation

- **Power On/Off:** Press and hold the power button (usually indicated by a circle or power symbol) for 2-3 seconds to turn the device on or off. The LED will illuminate when the device is active.
- **Main Shaft Functions:** Press the button associated with the main shaft (often indicated by waves or vibration symbol) to cycle through its 7 thrusting and vibrating speeds and functions.
- **Tapping Shaft Functions:** Press the button associated with the tapping shaft (often indicated by a tapping or pulse symbol) to cycle through its 7 tapping speeds and functions. The center spot of the tapping stimulator will light up when in use.
- Experiment with different combinations of settings to find your preferred experience.

5. MAINTENANCE AND CARE

Cleaning

1. Always clean the device before and after each use.
2. Wash the device with warm water and a mild, toy-safe soap or specialized toy cleaner.
3. Rinse thoroughly to remove all soap residue.
4. Dry completely with a lint-free cloth or allow to air dry.
5. The device is waterproof and submersible, allowing for easy cleaning under running water.

Storage

- Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.
- Ensure the device is fully charged before storing for extended periods to maintain battery health.

6. TROUBLESHOOTING

If you encounter any issues with your device, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Device does not turn on.	Incorrect power button press.	Press and hold the power button for 2-3 seconds.
Weak or no vibration/thrusting.	Low battery.	Recharge the device.
Weak or no vibration/thrusting.	Device malfunction.	Contact customer support.
Buttons are unresponsive.	Device is locked or frozen.	Try turning the device off and on again. If issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	840719
Product Dimensions (L x W x H)	3.86 x 2.09 x 6.71 inches
Insertable Length	5.5 inches
Shaft Thrust Distance	0.25 inches
Weight	Under 0.5 lb (approximately 8 ounces)
Material	Smooth Silicone, Chrome-finished ABS Plastic
Water Resistance Level	Waterproof & Submersible
Power Source	Rechargeable (USB cable included)
Manufacturer	Evolved Novelties INC

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Evolved Novelties customer service directly. Refer to the product packaging or the official Evolved Novelties website for the most current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question