



[Manuals.plus](#) /

› [Bosch](#) /

› Bosch PKK611BB8E Series 4 Electric Hob User Manual

## Bosch PKK611BB8E

# Bosch PKK611BB8E Series 4 Electric Hob User Manual

Model: PKK611BB8E

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Bosch PKK611BB8E Series 4 electric hob. Please read these instructions carefully before installation and operation, and keep them for future reference. The Bosch PKK611BB8E is a 60 cm electric hob featuring 3 cooking zones and a total power output of 5700 W, designed for ease of use and precise cooking control.

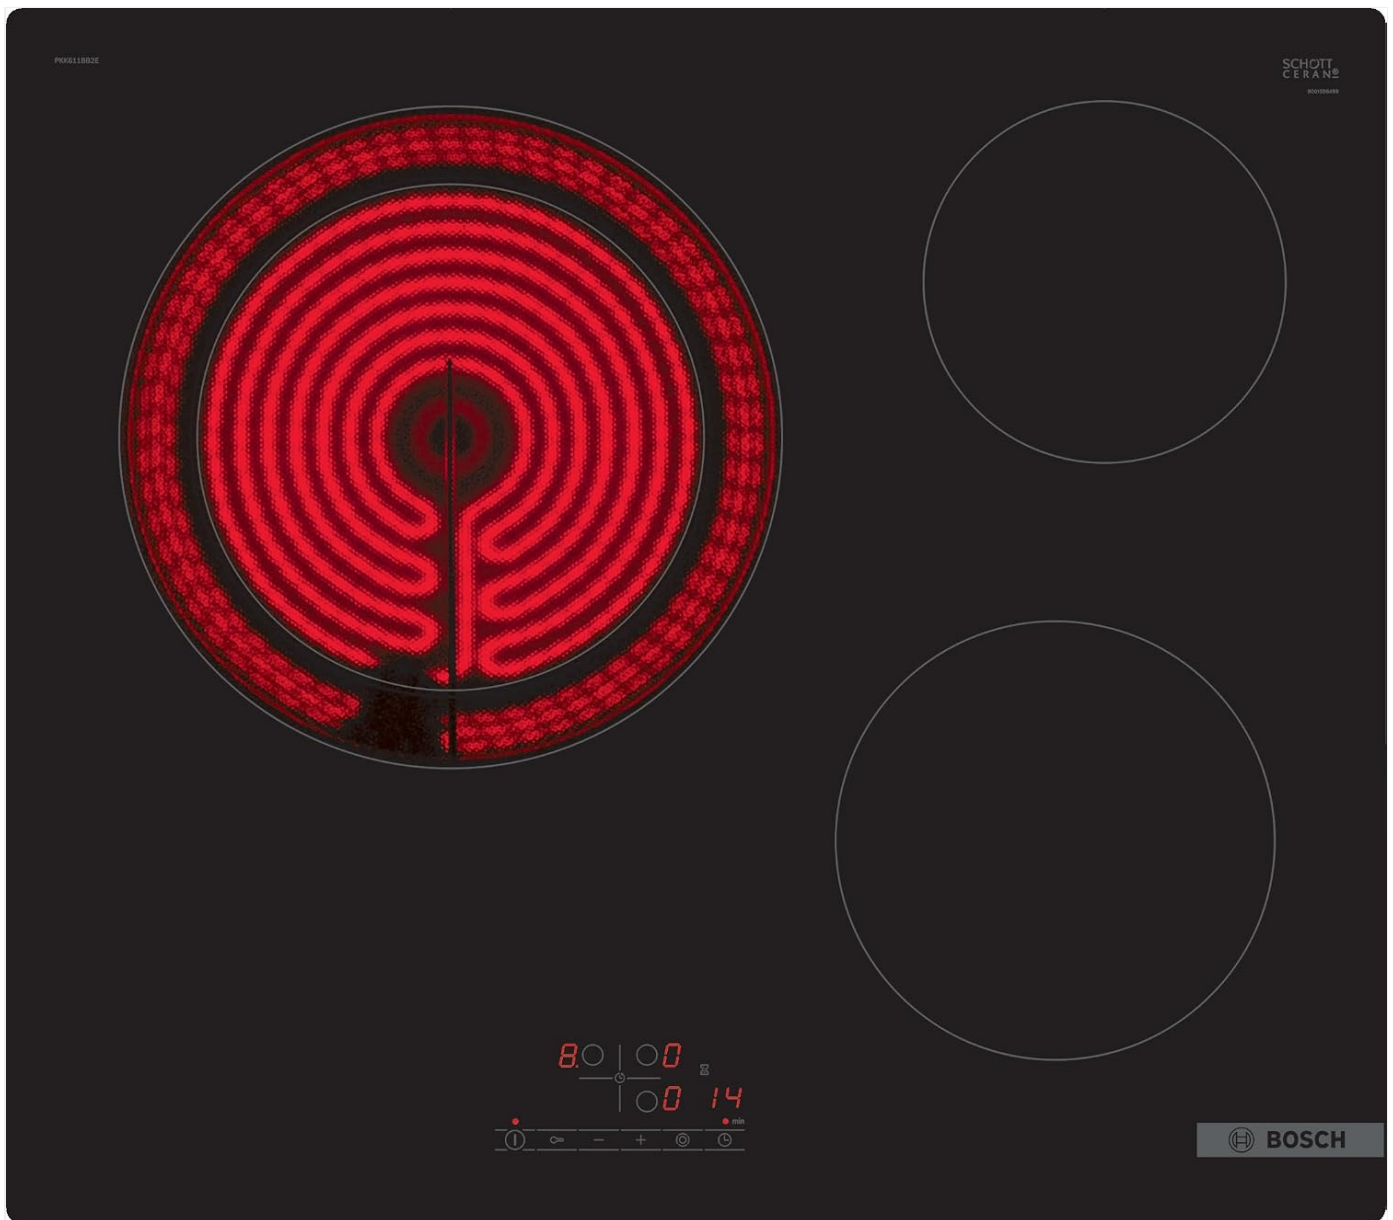


Image: Top view of the Bosch PKK611BB8E electric hob, showing three cooking zones and the illuminated control panel. One cooking zone is visibly active and glowing red.

## SAFETY INSTRUCTIONS

---

- Ensure the appliance is installed by a qualified professional according to local regulations.
- Do not operate the hob if the glass ceramic surface is cracked or broken. Disconnect from power immediately.
- Keep children away from the appliance during operation and when it is cooling down, as residual heat can cause burns.
- Never leave cooking unattended, especially when cooking with fats or oils, as they can ignite.
- Do not store flammable materials on or near the hob.
- Use only cookware with a flat base that matches the size of the cooking zone.
- The hob surface becomes hot during use. Avoid touching hot surfaces.
- This appliance is equipped with a child safety lock. Refer to the 'Operating Instructions' section for activation and deactivation.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove the hob from its packaging. Inspect the appliance for any signs of damage. If damage is found, do not install or operate the hob and contact your supplier. Retain packaging materials for potential future transport or service.

## Installation Requirements

- **Product Dimensions (HxWxD):** 45 x 592 x 522 mm
- **Required Niche Dimensions (HxWxD):** 45 x 560 x (490 - 500) mm
- **Minimum Worktop Thickness:** 16 mm
- Ensure adequate ventilation space around the appliance as specified in the installation diagram.
- The electrical connection must be performed by a qualified electrician. The appliance requires a 240 Volt power supply with a total power of 5700 Watts.



Image: Technical diagram illustrating the dimensions for cutting the worktop and the minimum clearances required for installing the hob. Measurements are provided in millimeters.



Image: The Bosch PKK611BB8E electric hob seamlessly integrated into a modern white kitchen countertop, showcasing its sleek design.

## OPERATING INSTRUCTIONS

---

### Control Panel - TouchSelect

The hob features a TouchSelect control panel, allowing for easy and precise adjustment of cooking zones and power levels. Simply touch the desired cooking zone and then select the power level using the '+' and '-' touch controls.



Image: A hand interacting with the TouchSelect control panel, demonstrating the ease of adjusting settings on the hob.

### Cooking Zones and Power Levels

- The hob offers **17 power levels** (9 main levels and 8 intermediate levels) for precise heat control.
- **Front Right Cooking Zone:** 180 mm, 2 kW
- **Rear Right Cooking Zone:** 145 mm, 1.2 kW
- **Rear Left Cooking Zone:** 210 mm / 275 mm (double zone), 2 kW. This double zone allows for the use of various cookware sizes.

### Special Functions

- **ReStart Function:** If the hob is accidentally switched off, all previous settings can be restored by switching the hob back on within 4 seconds.

- **QuickStop:** Quickly switch off a cooking zone by pressing and holding the corresponding control.
- **Timer with Stop Function:** Set a cooking time for a specific zone. Once the time elapses, the selected cooking zone will automatically switch off.
- **2-Level Residual Heat Indicator:** Indicates which cooking zones are still hot after use, enhancing safety.
- **Child Safety Lock:** Prevents accidental activation or changes to settings. Refer to the full manual for specific instructions on how to activate and deactivate this feature.

## MAINTENANCE AND CLEANING

---

To maintain the appearance and functionality of your Bosch electric hob, regular cleaning is recommended.

- Always ensure the hob is cool before cleaning.
- For daily cleaning, wipe the glass ceramic surface with a damp cloth and a small amount of mild detergent.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for glass ceramic surfaces.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Wipe up spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.



Image: A glass of milk spilled on the hob surface, illustrating the need for prompt cleaning to maintain the appliance.

## TROUBLESHOOTING

---

If you encounter issues with your Bosch PKK611BB8E electric hob, please refer to the following common troubleshooting steps before contacting service.

- **Hob not turning on:** Check if the appliance is properly connected to the power supply. Ensure the child safety lock is not activated.
- **Cooking zone not heating:** Verify that the correct cooking zone has been selected and a power level is set. Ensure the cookware is suitable for electric hobs and has a flat base.
- **Error codes displayed:** If an error code appears on the display, consult the comprehensive user manual for a list of codes and their corresponding solutions.
- **Unusual noises:** Minor humming or clicking sounds during operation are normal for electric hobs. If loud or persistent unusual noises occur, disconnect the appliance and contact service.

For more detailed troubleshooting or issues not covered here, please consult the complete Bosch user manual or contact Bosch customer service.

## SPECIFICATIONS

---

Feature	Specification
Brand	Bosch
Model Number	PKK611BB8E
Type	Electric Hob
Color	Black
Product Dimensions (HxWxD)	45 x 592 x 522 mm
Weight	7.6 kg
Total Power	5700 Watts
Voltage	240 Volts
Number of Cooking Zones	3
Control Type	TouchSelect
Special Features	Timer, ReStart Function, QuickStop, 2-Level Residual Heat Indicator, Child Safety Lock
Material	Glass Ceramic

## WARRANTY AND SUPPORT

---

Bosch appliances are designed for reliability and durability. Spare parts for the PKK611BB8E model are available for up to 15 years.

For warranty claims, technical support, or to purchase spare parts, please contact Bosch customer service or visit the official Bosch website. You can also find more information and products at the [Bosch Store on Amazon](#).



© 2023 Bosch. All rights reserved.

This manual is for informational purposes only. Refer to the official Bosch documentation for complete details.