

[Manuals.plus](#) /

> [ASHATA](#) /

> User Manual for ASHATA 16" Digital ATSC Portable TV

## ASHATA ASHATA4xgh7fr9b0360

# User Manual for ASHATA 16" Digital ATSC Portable TV

Model: ASHATA4xgh7fr9b0360

## INTRODUCTION

Thank you for purchasing the ASHATA 16" Digital ATSC Portable TV. This device is designed to provide versatile entertainment and information access, featuring a high-resolution LED display and multiple connectivity options. It is built with durable ABS material and includes a rechargeable battery for portable use. This manual provides essential information for setting up, operating, and maintaining your new portable television.

## IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this product to ensure safe operation and prevent damage. Keep this manual for future reference.

- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Avoid placing the device in direct sunlight or near heat sources.
- Ensure proper ventilation; do not block ventilation openings.
- Use only the power adapter supplied with the device.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.
- Keep the device away from strong magnetic fields.
- Dispose of batteries properly according to local regulations.

## WHAT'S IN THE BOX

Carefully unpack your ASHATA Portable TV and ensure all items are present:

- 1 x Digital TV
- 1 x Remote Control

- 1 x Antenna
- 1 x AV Cable
- 1 x Power Adapter
- Batteries (for remote control, may not be included)



Figure 1: Included accessories with the ASHATA Portable TV.

## PRODUCT OVERVIEW

---

Familiarize yourself with the various parts and interfaces of your portable TV.



Figure 2: Front view of the ASHATA Portable TV and remote control.



Figure 3: Front and rear views of the ASHATA Portable TV, highlighting the built-in stand.



Figure 4: Side panel with various input/output ports.

**Antenna Jack:** For connecting the external antenna.

**AV In/Out:** For connecting external audio/video devices.

**Headphone Jack:** For private listening.

**HDMI In:** For connecting high-definition devices.

**USB Port:** For playing multimedia content from USB drives.

**DC-IN:** Power input for charging and operation.

## SETUP

Follow these steps for initial setup of your portable TV:

1. **Charge the Battery:** Before first use, fully charge the built-in 1800mAh rechargeable lithium battery

using the provided power adapter. The charging indicator light will show the charging status.

**2. Connect the Antenna:**

- Extend the cable of the antenna for better signal reception.
- Insert the antenna connector into the Antenna Jack on the side of the TV.
- For optimal signal, place the antenna near a window or outdoors.

**3. Power On:** Press the power button on the TV or remote control to turn on the device.

**4. Initial Setup (Language & Channel Scan):**

- Upon first power-on, you will be prompted to select your OSD (On-Screen Display) language and country/region.
- After selecting, the TV will typically initiate an automatic channel scan. Allow this process to complete to find available analog (ATV) and digital (DTV/ATSC) channels. This may take a few minutes.

Your browser does not support the video tag.

Video 1: Guide on how to search for TV channels. This video demonstrates connecting the antenna, powering on the TV, selecting language, and performing an auto-tuning scan for channels. It also advises on re-scanning if the TV or antenna position changes.

## OPERATING INSTRUCTIONS

---

This section covers the basic operation of your ASHATA Portable TV.

### Remote Control Functions



Figure 5: The portable TV and its remote control.

The remote control provides full functionality for navigating menus and controlling playback. Refer to the remote control diagram for specific button layouts.

## Changing Input Source

- Press the "Input" or "Source" button on the remote control or the TV's control panel.
- Use the arrow keys to navigate through the available input sources.
- Press "OK" or "Enter" to select the desired input.

## Playing Multimedia Content (USB)

The TV supports various video (MKV, MOV, AVI, WMV, MP4, FLV, MPEG1-4, 1080P) and audio (MP3) formats from a USB drive.

1. Insert your USB flash drive into the USB port on the side of the TV.
2. Switch the input source to "USB".
3. Navigate through the folders and files using the remote control.
4. Select the desired file and press "OK" to play.

## FM Radio Function

The TV also supports FM broadcast function:

- Switch the input source to "FM Radio".
- Perform a scan to find available FM radio stations.
- Use the channel up/down buttons to switch between stations.



Figure 6: The TV features a high sensitivity tuner for enhanced signal reception.

## MAINTENANCE

---

Proper care will extend the life of your ASHATA Portable TV.

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the TV in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long time, charge the battery to about 50% every few months.

## TROUBLESHOOTING

---

If you encounter issues with your ASHATA Portable TV, refer to the following common problems and solutions:

| Problem                             | Possible Cause                                                             | Solution                                                                                                                                                                                                                                                                  |
|-------------------------------------|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power                            | Battery drained;<br>Power adapter not connected or faulty.                 | Connect the power adapter and ensure it's plugged into a working outlet. Allow time for charging.                                                                                                                                                                         |
| No signal /<br>Poor picture quality | Antenna not connected properly;<br>Weak signal;<br>Incorrect input source. | Ensure antenna is securely connected. Adjust antenna position (near window/outdoors). Perform a channel re-scan. Check if the correct input source (DTV/ATV) is selected. Weather conditions or other electrical appliances/wireless signals may reduce antenna strength. |
| No sound                            | Volume too low or muted;<br>Faulty audio cable (for external devices).     | Increase volume. Check if mute is activated. If using AV/HDMI, ensure cables are connected correctly.                                                                                                                                                                     |
| USB playback issues                 | Unsupported file format;<br>USB drive not recognized.                      | Ensure files are in supported formats (MKV, MOV, AVI, WMV, MP4, FLV, MPEG1-4, MP3). Try a different USB drive or reformat the current one (FAT32 recommended).                                                                                                            |
| Remote control not working          | Dead batteries;<br>Obstruction between remote and TV.                      | Replace remote control batteries. Ensure no objects are blocking the remote's signal path to the TV's IR receiver.                                                                                                                                                        |

SPECIFICATIONS

| Feature              | Detail                                                             |
|----------------------|--------------------------------------------------------------------|
| Brand                | ASHATA                                                             |
| Model Number         | ASHATA4xgh7fr9b0360                                                |
| Screen Size          | 16 Inches (Visible screen diagonal: 41 cm)                         |
| Display Technology   | LED                                                                |
| Resolution           | 1280x800                                                           |
| Aspect Ratio         | 16:10                                                              |
| Viewing Type         | ATSC (Analog TV, Digital TV, ATV)                                  |
| Battery Type         | Built-in 1800mAh Rechargeable Lithium Battery                      |
| Connectivity         | USB, HDMI, AV In/Out, Headphone Jack, Antenna Jack                 |
| Supported Multimedia | MKV, MOV, AVI, WMV, MP4, FLV, MPEG1-4 (1080P video), MP3           |
| Special Features     | High Sensitivity Tuner, FM Broadcast Function, Portable with Stand |

| Feature            | Detail                                             |
|--------------------|----------------------------------------------------|
| Material           | ABS                                                |
| Item Weight        | 3.84 pounds                                        |
| Package Dimensions | 15.5 x 13 x 3.5 inches                             |
| Voltage            | 2.2E+2 Volts (likely 110-220V based on A+ content) |
| Wattage            | 2 watts                                            |

## WARRANTY AND SUPPORT

ASHATA products are designed for reliability and performance. For warranty information, please refer to the documentation included with your purchase or contact the retailer. If you experience any operational problems or require technical assistance, please contact the customer service of the store where you purchased the product. For general inquiries about ASHATA products, you may visit the official ASHATA store on Amazon:

[Visit the ASHATA Store on Amazon](#)