

Bushnell Golf 362110

Bushnell Golf Phantom 2 GPS Navigator

Model: 362110
Brand: Bushnell Golf

INTRODUCTION

The Bushnell Golf Phantom 2 GPS Navigator provides golfers with precise distances and course information to enhance their game. This compact device features a large, easy-to-read display, an integrated BITE magnetic mount, and GreenView with movable pin placement. It is designed for ease of use and reliability on the course.

Key Features:

- Large, Easy-to-read front, center and back distances
- Integrated BITE Magnetic Mount
- GreenView with Movable Pin
- Larger Display
- New Bushnell Golf App connectivity

DETAILED FEATURES

Bushnell


P 4 | 118 | + 4

167


151 | 183

PHANTOM 2

The Phantom 2 provides clear, large, and easy-to-read distances to the front, center, and back of the green, ensuring you always have the most critical information at a glance.

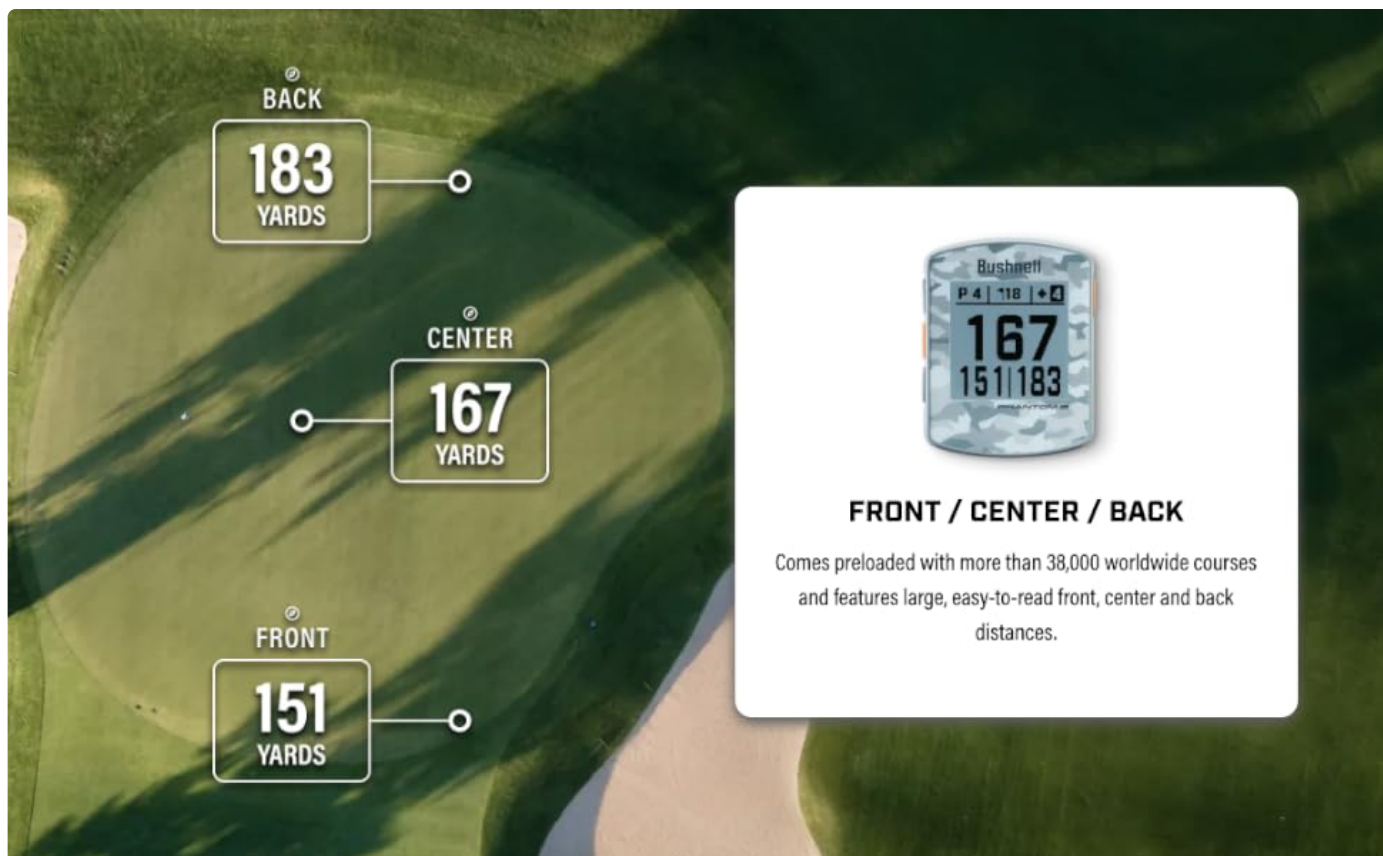

Visual representation of front, center, and back distances to the green, aiding in shot planning and course management.

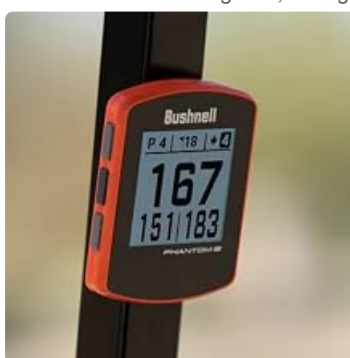

The integrated BITE magnetic mount allows for easy and secure attachment to a golf cart or any metal surface, keeping the device readily accessible.



GreenView with movable pin placement provides a more accurate distance to the flag, adapting to daily pin positions for improved shot accuracy.

1. Charging the Device:

Before first use, fully charge your Bushnell Golf Phantom 2. Connect the included USB C Charging Cable to the device and a compatible USB power source. A full charge provides approximately 18 hours of battery life.

2. Powering On/Off:

Press and hold the Power button (usually located on the side) to turn the device on or off. The larger display will illuminate, indicating it's ready for use.

3. Initial Course Download/Sync:

For optimal performance, download the new Bushnell Golf App on your smartphone. Connect your Phantom 2 via Bluetooth to the app to sync course data and ensure you have the latest updates for over 38,000 worldwide courses. This process ensures accurate map data and features like GreenView are up-to-date.

OPERATING INSTRUCTIONS

1. Getting Distances:

Once powered on and a course is selected (or automatically detected via GPS), the Phantom 2 will display large, easy-to-read distances to the front, center, and back of the green. These dynamic distances adjust as you move around the course.

2. Using GreenView with Movable Pin:

Access the GreenView feature to see the shape of the green and move the pin location for more precise yardage to the day's flag position. This is particularly useful for strategizing approach shots.

3. BITE Magnetic Mount:

Utilize the integrated BITE magnetic mount to securely attach the device to your golf cart's frame or any other metal surface for convenient access throughout your round.

4. Bushnell Golf App Integration:

Pair your Phantom 2 with the Bushnell Golf App via Bluetooth for additional features, including hole layouts, score tracking, and further analysis of your game. The app provides a richer visual experience and more detailed information than the device alone.

MAINTENANCE

Cleaning:

Wipe the device with a soft, damp cloth as needed. Avoid using abrasive cleaners or solvents that could damage the display or casing.

Storage:

Store the Phantom 2 in a cool, dry place when not in use. Avoid extreme temperatures, which can affect battery life and device performance.

Battery Care:

To maximize battery longevity, avoid fully discharging the device frequently. Charge it regularly, especially if it will be stored for an extended period. The device uses 1 Lithium Ion battery.

TROUBLESHOOTING

Device Not Powering On:

- Ensure the device is fully charged.
- Try a different USB C charging cable and power adapter.
- Perform a soft reset by holding the power button for an extended period (e.g., 10-15 seconds).

GPS Signal Issues:

- Ensure you are in an open area with a clear view of the sky.
- Allow several minutes for the device to acquire a satellite signal.
- Sync the device with the Bushnell Golf App to ensure updated course data.

Display Not Responding (Touchscreen):

- Restart the device.
- Ensure the screen is clean and free of debris or moisture.

SPECIFICATIONS

Item Weight	8 ounces
Product Dimensions	0.67 x 2.28 x 2.95 inches
Item Model Number	362110
Batteries	1 Lithium Ion batteries required.
Display Size	3 inches
Battery Life	18 Hours
Voice Command	Touchscreen
Connectivity Technology	Bluetooth
Map Type	Golf Course
Special Feature	Larger and easier to read display

WHAT'S IN THE BOX

- Phantom 2 Golf GPS Device
- USB C Charging Cable

- Belt Clip with Carabiner
- Quick Start Guide

WARRANTY & SUPPORT

The Bushnell Golf Phantom 2 GPS Navigator comes with a 3-year manufacturer warranty.

For further support, troubleshooting, or to access additional resources, please refer to the Bushnell Golf App or visit the official Bushnell Golf website.

© 2024 Bushnell Golf. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B1W1S4HR>

More documents and user manuals: <https://manuals.plus/>