

B0B1W4CSWX

Generic Electric Callus Remover and Foot Polisher Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Generic Electric Callus Remover and Foot Polisher. Please read this manual thoroughly before first use and retain it for future reference. This device is designed to remove calluses and polish feet, offering a comprehensive pedicure experience.

2. PACKAGE CONTENTS

Your package includes the following items:

- 1x Electric Callus Remover Device
- 1x Coarse Quartz Roller Head (for overgrown calluses)
- 1x Regular Quartz Roller Head (for exfoliating)
- 1x Fine Quartz Roller Head (for smooth skin)
- 1x USB Charging Cord
- 1x Cuticle and Callus Remover Tool
- 1x Callus Scraper
- 1x Nail File
- 1x Callus Shaver
- 1x Sandpaper
- 1x Nail Brush
- 1x V-shaped Push Stick
- 1x Cleaning Brush

IPX7 Body Wash

IP X7 waterproof design, can be washed all over the body, cleaning is more delicate



Image 3.1: Key components of the Electric Callus Remover, including the microdermabrasion roller, grinding head removal key, flashlight, switch, power display, gear display, and charging interface.

bank, wall adapter, car charger).

4. The power display will show charging progress. Ensure the device is fully charged before first use. A full charge can take approximately 2-3 hours.

3 Different Quartz Sand Roller Heads

Solve the problem of dead skin and calluses of different thicknesses on the feet



Fine roller head

For daily care,
relieve foot fatigue



Regular roller head

Treats new dead
skin and keeps skin moist



Coarse roller head

Solve adult calluses
and protect foot health



Image 5.1: Various methods for charging the device using the convenient USB port.



Image 5.2: The device features a durable 1200mAh battery for extended use.

5.2 Attaching a Roller Head

1. Ensure the device is off.
2. Select the desired quartz roller head (Coarse, Regular, or Fine) based on your needs.
3. Align the roller head with the device and gently press it into place until it clicks securely.

6. OPERATING INSTRUCTIONS

Follow these steps for optimal use:

1. Ensure the device is fully charged before use.
2. Wet your feet to soften the skin.
3. Select the appropriate quartz head for your needs (Coarse for tough calluses, Regular for exfoliation, Fine for smoothing).
4. Press the power button (switch) to turn on the device. The LED light will activate.
5. Press the power button again to switch between low and high speed settings.
6. Gently move the device over the desired area, applying light to moderate pressure. Do not press too hard or stay in one spot for too long to avoid irritation.

7. Continue until the skin feels smooth.
8. Rinse your feet and the device after use.
9. Turn off the device by pressing and holding the power button.

7. MAINTENANCE

7.1 Cleaning the Device

Due to its IPX7 waterproof design, the electric callus remover is easy to clean:

1. Ensure the device is turned off and disconnected from the charging cable.
2. Remove the roller head by pressing the grinding head removal key.
3. Rinse the roller head and the device body under running water to remove skin debris.
4. Use the included cleaning brush to remove any stubborn particles from the roller head.
5. Allow all parts to air dry completely before reassembling or storing.

Convenient USB Port Charging

With a USB charging interface, you can charge at any time, whether at home or away



Image 7.1: The device is IPX7 waterproof and can be washed directly under water for thorough cleaning.

7.2 Replacing Roller Heads

Roller heads should be replaced when they show signs of wear or become less effective.

1. Ensure the device is off.
2. Press the grinding head removal key to detach the old roller head.
3. Dispose of the old roller head responsibly.
4. Align a new roller head with the device and press it firmly until it clicks into place.

8. TROUBLESHOOTING

If you encounter issues with your device, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device not properly assembled	Charge the device fully; Ensure roller head is securely attached.
Roller head stops spinning or slows down significantly	Excessive pressure applied; Roller head clogged with skin debris; Worn out roller head	Reduce pressure; Clean the roller head; Replace the roller head.
Device not charging	Faulty USB cable or power source; Charging port obstruction	Try a different USB cable or power source; Check charging port for debris.
Skin irritation after use	Excessive use or pressure; Using on broken skin	Reduce usage time and pressure; Do not use on broken or irritated skin.

9. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	B0B1W4CSWX
Color	Black
Item Weight	0.36 Kilograms
Power Source	Rechargeable Battery (USB)
Battery Capacity	1200mAh
Operating Speeds	1700x/min (low), 2000x/min (high)
Waterproof Rating	IPX7
Number of Items	10 (including device and accessories)
GTIN/UPC	792264181198

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of

purchase or contact your retailer. Specific warranty terms may vary. Keep your proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please reach out to the manufacturer or the point of purchase for support.