

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PTHTECHUS](#) /

› [PTHTECHUS Kids Smart Watch S19 Instruction Manual](#)

PTHTECHUS S19

PTHTECHUS Kids Smart Watch S19 Instruction Manual

Model: S19

1. GETTING STARTED

1.1 Package Contents

- PTHTECHUS Kids Smart Watch S19
- USB Charge Cable
- User Manual (this document)

1.2 Charging the Smart Watch

Before first use, fully charge the smart watch. Locate the USB charging port on the left side of the watch, covered by a small rubber flap. Gently open the flap and insert the provided USB charge cable. Connect the other end of the cable to a standard USB power adapter (not included) or a computer USB port. The watch screen will indicate charging status.

Kids-friendly Smart Watch



Cable USB Android



Image: The smart watch with its USB charging port indicated.

1.3 Powering On/Off

To power on the watch, press and hold the Power button located on the right side of the watch until the screen lights up. To power off, press and hold the Power button until the power-off option appears on the screen, then confirm.



Image: Detailed view of the smart watch showing the power button and other components.

1.4 Initial Setup: Language, Time, Date

Upon first power-on or after a factory reset, you may need to set the language, time, and date. Navigate to the 'Settings' menu by tapping the gear icon. From there, select 'Language' to choose your preferred language (e.g., English, Français, Español). Then, go to 'Time and Date' to adjust these settings as needed.

2. OPERATING THE SMART WATCH

2.1 Basic Navigation

- **Swiping:** Swipe left or right on the home screen to change watch faces or backgrounds. Swipe up or down within menus to scroll through options.
- **Tapping:** Tap an icon on the screen to open an application or select an option.

2.2 Key Features

The PTHTECHUS Kids Smart Watch S19 offers a variety of functions designed for entertainment and utility:


- **Games:** Enjoy 10 educational puzzle games to develop creativity and eye-hand coordination.
- **MP3 Music Player:** Play MP3 audio files.
- **HD Selfie Camera:** Capture photos and videos.
- **Video Recording & Player:** Record and watch AVI video files.
- **Calculator:** Perform basic arithmetic operations.
- **Alarm Clock:** Set multiple alarms.
- **Flashlight:** A built-in torch for convenience.
- **Pedometer:** Track steps and encourage active habits.
- **Calendar:** View dates and manage schedules.
- **Voice Recorder:** Record audio notes.
- **Photo Album:** View saved images.
- **Silent Mode:** Mute sounds for quiet environments.
- **Custom Wallpapers:** Personalize the watch face with different backgrounds.



Image: Watch screen showing video and music player interfaces.



Alarm clock

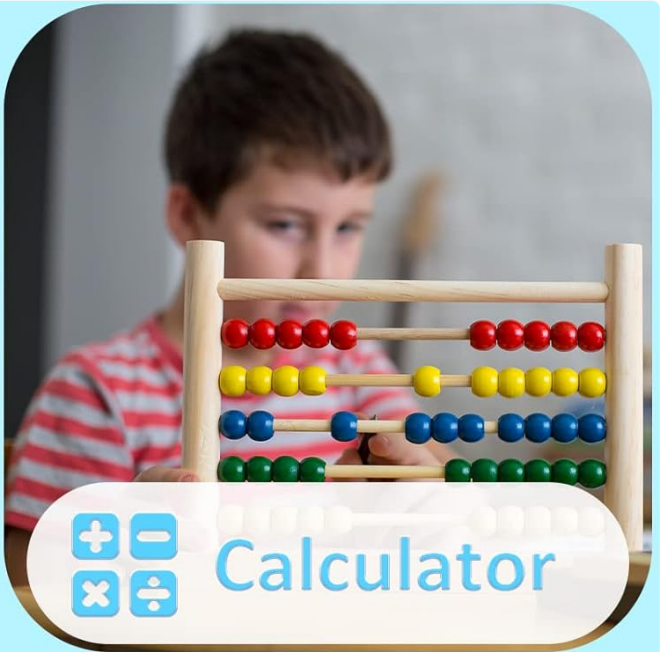

Calculator



Silent mode



Stopwatch

Image: Watch screen displaying icons for alarm clock, calculator, silent mode, and stopwatch.

Back to School

A must have watch for kids of
age 4-12 years old















			
Music	Games	Photo	Camera
			
Video		Silent mode	
			
Calendar	Flashlight	Calculator	
			
Pedometer	Alarm	Timer	Recorder

Image: Overview of the watch's features.



Image: Watch screen showing custom wallpaper options.

14 Educational Games

Develop creativity and promote eye-hand coordination



Get more:



Reaction Ability



**Promote Brain
Development**



**Logical
Thinking Ability**

Image: Watch screen displaying icons for various educational games.

2.3 Transferring Files (Music, Photos, Videos)

To transfer media files to or from the smart watch:

1. Ensure the watch is powered off.
2. Connect the watch to your computer using the provided USB cable.
3. The watch's internal storage (1GB SD card included, supports up to 32GB) will appear as a removable drive on your computer.
4. Copy MP3 format files to the "My Music" folder.
5. Copy photo files (gif, png, jpg, bmp, jpeg, jpe) to the "Photos" folder.
6. Copy AVI format video files to the "Videos" folder.
7. Safely eject the device from your computer before disconnecting the USB cable.

3. MAINTENANCE

3.1 Cleaning

Wipe the watch regularly with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the screen or casing.

3.2 Storage

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery has some charge to prevent deep discharge.

3.3 Battery Life

The watch is equipped with a 500 Milliamp Hours Lithium Polymer battery. Depending on usage, daily recharging may be necessary to ensure continuous operation of all features.

4. TROUBLESHOOTING

4.1 Screen Responsiveness

If the touch screen appears slow or unresponsive, try the following:

- Ensure your finger is clean and dry when interacting with the screen.
- Restart the watch by holding the power button and selecting the restart option.
- If the issue persists, a factory reset (found in 'Settings') may resolve it, but this will erase all user data.

4.2 Watch Not Turning On/Charging

- Verify the USB cable is securely connected to both the watch and the power source.
- Try a different USB port or power adapter.
- Ensure the charging port on the watch is free of debris.
- Allow the watch to charge for at least 30 minutes before attempting to power it on again.

4.3 File Transfer Issues

- Confirm the watch is powered off before connecting to a PC for file transfer.
- Ensure files are being copied to the correct designated folders (e.g., "My Music" for MP3s, "Photos" for images, "Videos" for AVI files).
- Check if the USB cable is functioning correctly; try a different cable if available.
- Verify that your computer recognizes the watch as a removable storage device.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Product Dimensions	3.94 x 1.18 x 1.18 inches
Item Weight	2.39 ounces
Item Model Number	S19
Batteries	1 Lithium Polymer battery required (included)
Memory Storage Capacity	1 GB (supports up to 32GB SD card)

Feature	Specification
Operating System	Proprietary OS
Special Features	Alarm Clock, Calendaring, Camera, Music Player, Touchscreen
Battery Capacity	500 Milliamp Hours
Connectivity Technology	USB
Wireless Communication Standard	Bluetooth
GPS	False (No GPS function)
Shape	Square
Screen Size	1.54 Inches

6. WARRANTY INFORMATION AND SUPPORT

PTHTECHUS is committed to providing quality and safe educational products. For any product-related inquiries, technical support, or warranty claims, please refer to the seller's return policy on the platform of purchase or visit the official PTHTECHUS brand store for more information.

Visit the [PTHTECHUS Store](#) for additional products and support.

