

[Manuals.plus](#) /

› [cimetech](#) /

› cimetech Wireless Keyboard and Mouse Combo User Manual

cimetech KF10

cimetech Wireless Keyboard and Mouse Combo

MODEL: KF10

1. INTRODUCTION

Thank you for choosing the cimtech Wireless Keyboard and Mouse Combo. This set offers a compact, full-size keyboard and a high-sensitivity mouse, designed for seamless 2.4G wireless connectivity. Its ultra-thin, sleek design and quiet operation make it ideal for various computing environments, including Windows PCs, desktops, laptops, and notebooks. This manual will guide you through the setup, operation, and maintenance of your new wireless combo.



Figure 1: cimetech Wireless Keyboard and Mouse Combo (Rosegold)

2. PACKAGE CONTENTS

- 1 x cimetech Wireless Keyboard
- 1 x cimetech Wireless Mouse
- 1 x USB Nano Receiver (stored inside the mouse battery compartment)
- 1 x User Manual (this document)

3. SETUP INSTRUCTIONS

Follow these steps to set up your wireless keyboard and mouse combo:

1. Install Batteries:

- For the mouse: Open the battery compartment on the underside of the mouse. Insert one AA battery (not included), ensuring correct polarity.
- For the keyboard: Open the battery compartment on the underside of the keyboard. Insert two AA batteries (not included), ensuring correct polarity.

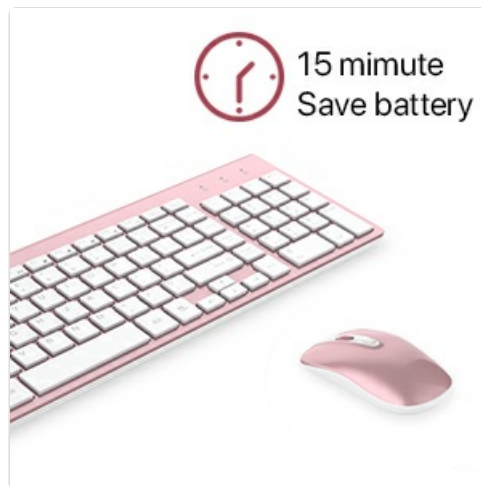


Figure 2: Battery saving feature illustration. The combo features auto-sleeping mode and on/off switches to conserve battery life.

2. **Locate USB Nano Receiver:** The nano receiver is conveniently stored inside the mouse's battery compartment. Carefully remove it.
3. **Connect Receiver:** Plug the USB nano receiver into an available USB port on your computer (PC, desktop, laptop, or notebook).
4. **Power On:** Turn on the keyboard and mouse using their respective on/off switches, usually located on the underside of each device.
5. **Plug and Play:** The devices are designed for plug-and-play operation. Your computer should automatically detect and install the necessary drivers. No additional software is required.



Figure 3: One USB Nano Receiver connects both the keyboard and mouse, saving USB ports.

4. OPERATING INSTRUCTIONS

4.1 Keyboard Usage

The full-size keyboard features a numeric keypad and multimedia hotkeys for quick access to various functions.

- **Multimedia Hotkeys:** Access functions like music, internet, email, and volume directly using the dedicated multimedia hotkeys. *Note: These hotkeys may not be fully compatible with Mac systems.*
- **Quiet Typing:** The keyboard's noise-reduced keys provide a quiet typing experience, minimizing disturbance in your environment.



Figure 4: Multimedia Hotkeys for quick access to common functions.



Figure 5: Scissor-switch construction provides comfortable and quiet typing.

4.2 Mouse Usage

- **DPI Adjustment:** The mouse offers 3 adjustable DPI levels (800, 1200, 1600) to change cursor sensitivity. Press the DPI button (usually located near the scroll wheel) to cycle through the settings.
- **Polling Rate Adjustment:** Adjust the polling rate between 125Hz and 250Hz by simultaneously pressing the right mouse button and the scroll wheel for 3 seconds.
- **Silent Click:** The mouse features silent click buttons, ensuring a quiet working environment.



Figure 6: The mouse is designed for whisper-quiet clicking, ideal for shared spaces.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when performance degrades. Always use new, good quality AA batteries. Dispose of used batteries responsibly.
- **Storage:** When not in use for extended periods, turn off both the keyboard and mouse using their power switches to conserve battery life.

6. TROUBLESHOOTING

- **No Connection/Lag:**
 - Ensure the USB nano receiver is securely plugged into a working USB port.
 - Check if the keyboard and mouse are powered on.
 - Replace batteries in both devices if they are low or depleted.
 - Move the devices closer to the USB receiver to ensure they are within the 10-meter (33 ft) operating range.
 - Try plugging the receiver into a different USB port on your computer.
- **Keys Not Responding/Mouse Not Moving:**
 - Verify battery levels and replace if necessary.
 - Ensure the devices are turned on.
 - Re-plug the USB receiver.
 - Restart your computer.
- **Multimedia Hotkeys Not Working (Mac):** As noted, multimedia hotkeys may not be fully compatible with Mac operating systems. This is expected behavior.

7. SPECIFICATIONS

Feature	Detail
Brand	cimetech
Model Number	KF10
Connectivity Technology	2.4G Wireless (USB Receiver)
Operating Range	Up to 10 meters (33 ft)
Keyboard Dimensions	14.57 x 5.31 x 1.97 inches
Item Weight	1.21 pounds
Mouse DPI	800/1200/1600 (Adjustable)
Mouse Polling Rate	125Hz/250Hz (Adjustable)
Compatible Devices	PC, Desktop Computer, Laptop, Notebook
Operating Systems	Windows XP / Vista / 7 / 8 / 10
Battery Type	AA (not included)



Figure 7: Ultra-slim design with key dimensions.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your cimeteck Wireless Keyboard and Mouse Combo, please refer to the product packaging or contact cimeteck customer service directly. Contact details can typically be found on the manufacturer's official website or the product's retail page.

© 2024 cimeteck. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

