



Manuals.plus /

› YQSAVIOR /

› YQSAVIOR 10" Android 14 Tablet User Manual

YQSAVIOR YQ10S

YQSAVIOR 10" Android 14 Tablet User Manual

Model: YQ10S | Brand: YQSAVIOR

1. INTRODUCTION

This user manual provides comprehensive instructions for the YQSAVIOR 10" Android 14 Tablet (Model: YQ10S). It covers essential information regarding product setup, operation, maintenance, and troubleshooting. Please read this manual thoroughly before using your tablet to ensure proper functionality and to maximize your user experience.

2. SAFETY INFORMATION

- **Battery Safety:** Do not attempt to replace the battery yourself. Use only the provided charger and cable. Avoid exposing the tablet to extreme temperatures or direct sunlight.
- **Water Resistance:** This tablet is not water-resistant. Avoid exposure to liquids.
- **Cleaning:** Disconnect the tablet from power before cleaning. Use a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Disposal:** Dispose of the tablet and its accessories responsibly according to local regulations. Do not dispose of electronic waste in household trash.
- **Children:** Keep small parts and packaging materials away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x YQ10S tablet
- 1x Charger
- 1x Type C Cable
- 1x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical features and components of your YQSAVIOR 10" Android 14 Tablet.



Figure 4.1: Front and back view of the YQSAVIOR 10" Android 14 Tablet in Pink. The tablet features a sleek design with a textured pink back panel and a black front display.

4.1. Key Components

- **Display:** 10-inch IPS Touch Screen with 1280x800 resolution for vibrant colors and clear visuals.
- **Front Camera:** 2.0MP camera, typically located above the screen for video calls and selfies.
- **Rear Camera:** 8.0MP camera, located on the back panel for capturing photos and videos.
- **Power Button:** Usually on the side, used to turn the tablet on/off or put it to sleep/wake.
- **Volume Buttons:** Typically located near the power button, used to adjust audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** Allows for storage expansion up to 1TB.
- **Dual Speakers:** Located on the sides or bottom for audio output.

5G/2.4G WiFi & Wi-Fi 6

Stay connected with 5G Wi-Fi, which helps keep the network connected and websites loading faster



Figure 4.2: The tablet supports 5G/2.4G WiFi and Wi-Fi 6, ensuring fast and stable network connectivity for browsing and streaming.

6000mAh Large Capacity Battery

Non-stop gaming, streaming, creating with battery that outpowers daily use

6000mAh



Figure 4.3: Equipped with a 6000mAh large capacity battery, the tablet provides extended usage time for various activities.

Capture Every Moment in Stunning Clarity



8MP
Rear camera



2MP
Cash camera



Figure 4.4: The tablet features an 8MP rear camera and a 2MP front camera, suitable for capturing moments and video calls.

Powerful High Performance

6GB RAM +84GB ROM .Don't worry about running out of memory. You'll have plenty of storage space for your daily uses, like watching videos and playing games.



Figure 4.5: The tablet's powerful quad-core processor and 8GB RAM (4+4GB) ensure smooth performance for gaming and multimedia consumption.

8GB + 64GB & Android 14

Enhance TF card up to **512GB**
to store more apps, photos and videos



Figure 4.6: With 64GB ROM and support for up to 1TB expandable storage via TF card, the tablet offers ample space for apps, photos, and videos.

Your browser does not support the video tag.

Video 4.1: An official product video showcasing the YQSAVIOR 10-inch tablet's features, including its display, speakers, and overall design. This video highlights the tablet's suitability for various uses.

5. SETUP

5.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the provided Type-C cable to the tablet's charging port and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging status. A full charge typically takes several hours.

5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the YQSAVIOR logo appears on the screen.

- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" and confirm.
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it from sleep mode.

5.3. Initial Setup

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account (or create one).
- Set up screen lock (PIN, pattern, password).
- Review and accept terms and conditions.

5.4. Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

6. OPERATING INSTRUCTIONS

6.1. Basic Navigation

The YQSAVIOR tablet uses a touch-sensitive screen for navigation:

- **Tap:** To select an item or open an application.
- **Touch & Hold:** To access contextual menus or move items.
- **Swipe:** To scroll through screens or lists.
- **Pinch-to-Zoom:** To zoom in or out on images and web pages.

6.2. App Management

As a GMS Certified Tablet, you can download and install a wide variety of applications from the Google Play Store.

- **Installing Apps:** Open the **Play Store** app, search for your desired app, and tap **Install**.
- **Uninstalling Apps:** Touch and hold the app icon on the home screen or app drawer, then drag it to "Uninstall" or select "App info" and choose "Uninstall".

6.3. Storage Management

Your tablet comes with 64GB of internal storage. You can expand this by inserting a MicroSD card (up to 1TB).

- **Inserting MicroSD Card:** Locate the MicroSD card slot, gently insert the card until it clicks into place.
- **Managing Storage:** Go to **Settings > Storage** to view storage usage and manage files.

6.4. Camera Usage

Use the built-in cameras to capture photos and videos.

1. Open the **Camera** app.
2. Switch between front (2MP) and rear (8MP) cameras using the camera switch icon.
3. Tap the shutter button to take a photo or start/stop video recording.

6.5. Bluetooth Connectivity

Connect your tablet to Bluetooth devices like headphones or speakers.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Select your device from the list of available devices to pair.

7. MAINTENANCE

7.1. Cleaning Your Tablet

To keep your tablet in optimal condition:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid spraying liquids directly onto the tablet.

7.2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements.

1. Ensure your tablet is connected to Wi-Fi.
2. Go to **Settings > System > System update**.
3. Follow the on-screen instructions to check for and install any available updates.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your YQSAVIOR tablet.

Problem	Possible Cause	Solution
Tablet does not turn on.	Low battery; software crash.	Charge the tablet for at least 30 minutes. Perform a forced restart by holding the Power button for 10-15 seconds.
Tablet is slow or freezes.	Too many apps running; low storage; outdated software.	Close unused apps. Clear cache. Free up storage space. Check for system updates. Restart the tablet.
Cannot connect to Wi-Fi.	Incorrect password; router issue; Wi-Fi disabled.	Ensure correct password. Restart your Wi-Fi router. Toggle Wi-Fi off and on in tablet settings.
Battery drains quickly.	High screen brightness; background apps; poor signal.	Reduce screen brightness. Close background apps. Disable unused features like Bluetooth/GPS.
Apps crashing or not installing.	Insufficient storage; app incompatibility; corrupted data.	Clear app cache/data. Free up storage. Ensure app is compatible with Android 14. Reinstall the app.

If problems persist, consider performing a factory data reset (**Settings > System > Reset options > Erase all data**)

(factory reset)). Note: This will erase all data on your tablet, so back up important files first.

9. SPECIFICATIONS

Feature	Detail
Brand	YQSAVIOR
Model Name	YQ10S
Operating System	Android 14
Screen Size	10 Inches
Screen Resolution	1280x800 IPS
Processor	1.6 GHz Quad-core (ARM Rockchip)
RAM	8GB (4+4GB)
Internal Storage (ROM)	64 GB
Expandable Storage	Up to 1TB MicroSD
Rear Camera	8 MP
Front Camera	2 MP
Wireless Type	802.11n (2.4G WiFi), Bluetooth
Battery Capacity	6000mAh
Average Battery Life	10 Hours (mixed use)
Item Weight	14.1 ounces (approx. 400g)
Product Dimensions (LxWxH)	10 x 4.6 x 0.3 inches
Color	Pink

10. WARRANTY AND SUPPORT

YQSAVIOR products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official YQSAVIOR website. Please have your product model number (YQ10S) and purchase details ready when contacting support.