



[Manuals.plus](#) /

› [Aurabeam](#) /

› Replacement TV Remote Control User Manual for Telefunken Vetsel L40F278M3C-3D TV

Aurabeam RC4875-L40F278M3C-3D-CN

Replacement TV Remote Control User Manual

MODEL: RC4875-L40F278M3C-3D-CN

Brand: Aurabeam

1. INTRODUCTION AND OVERVIEW

This user manual provides essential information for the operation and maintenance of your Aurabeam replacement TV remote control. This remote is designed to be a direct replacement for various Telefunken and Vetsel TV models, offering full functionality without the need for complex programming.

The remote control operates using infrared technology and is ready for use immediately after inserting the appropriate batteries.

Compatible Models:

This remote control is compatible with a wide range of TV models, including but not limited to: L40F278M3C-3D-CN, 24FHA4160, 24FLZ274S, 32FLZ274S, ASL24960, ASL289202T, ASL28920-2T, ASL329202T, ASL39202T, CRTV20100, CR-TV20-100, CRTV22100, CR-TV22-100, CRTV28100, CR-TV28-100, CRTV32100, CR-TV32-100, D32H278A3, D32H278A3CW, D32H278A3CW, D32H280Q3, D32H280Q3, D39F275Q3C, D39F275Q3C, D40F272A3, DGQ32169HDRD, DGQ40169FHDD, DTE19180B31T10E, FIN19DVDBK, FIN22DVDBK, FINLUX24FLZ274S, FINLUX32FLZ274S, FINLUXFIN19DVDBK, FINLUXFIN22DVDBK, FLN32T339, L22F274R, L24H180A3D, L40F278M3C3D, L40F278M3C-3D, L40F2788.M3C3D, L40F278M3C-3D, L48F249X3CW3DU, L48F249X3CW-3DU, L48F249X3CW3DU, L48F249X3CW-3DU, SAT, SL42960, SL48990, T39EX1650, T39EX1650SAT, TE19180B31T10E, TE20265S20T10E, TE22272B30FC10E, TE22275B30FC10E, TE24180B31T10E, TE24275B30S10E, TE24275B30S10E, TE24275B31T10E, TE28275B31T10E, TE32182B311T10, TE32182B311T10D, TE32182B311T10D, TE32265B301C10D, TE32275B301S10D, TE32275B311T10D, TE32280B311T10D, TE32280B311T10D, TE39275N26F1T10D, TE39275N26F1T10D, TE40240S20F2T10ES4, TE40240S20F2T10ES4, TE40275N2, TE40275N2, TE49280S20F2T10D, TE50275N26F1T10D, TE65240G26F4T10, TE65240G26F4T10, TechnikaSM32240AW15, TechnikaSM32-240-AW15, TELORC4875, TFL40DL275B15, TFL40DL275B15, XD22FHV, XD22FHV, XD28HDV, XD28HDV, XD32HDV, XD32HDV, XD39FHV, XF32A200D, XF32A201D, XF32A201DW, XF40A300.



Image 1: Front view of the Aurabeam replacement TV remote control, showing all buttons and its sleek black design.

2. SETUP

Your Aurabeam remote control is designed for immediate use. No programming or pairing is required. Simply install the batteries, and it will be ready to operate your compatible TV.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) appropriate batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.





Image 2: Rear view of the remote control, highlighting the battery compartment cover at the bottom.

3. OPERATING INSTRUCTIONS

To operate your TV, point the remote control directly at the TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

Button Functions:



Image 3: Detailed close-up of the remote control's buttons, showing their labels and layout.

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (V+/V-)**: Adjusts the volume level.
- **Channel Up/Down (P+/P-)**: Changes the TV channel.
- **Mute Button** (☒): Mutes or unmutes the TV audio.
- **Menu Button**: Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right Arrows)**: Navigate through menus and options.
- **OK Button**: Confirms selections in menus.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or function.

- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed on the TV screen, often in teletext or smart TV applications.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Control media playback if your TV supports it.
- **LANG. Button:** Changes audio language or subtitle options.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check if there are any obstructions between the remote's infrared emitter and the TV's receiver.
 - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Buttons Not Working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only specific buttons are not working, it might indicate internal damage.
- **Interference:**
 - Bright light sources, especially fluorescent lights or direct sunlight, can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

6. SPECIFICATIONS

Feature	Detail
Brand	Aurabeam
Model Number	RC4875-L40F278M3C-3D-CN
Connectivity Technology	Infrared
Compatible Devices	Television (Telefunken, Vetsel, and other listed models)

Controller Type	Button Control
Maximum Range	10 Meters
UPC	723452689783

7. WARRANTY AND SUPPORT

This Aurabeam replacement remote control comes with a **1-year warranty** from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your product, please contact the seller or manufacturer directly through the platform where the purchase was made. Please retain your proof of purchase for warranty validation.