

SAKI SKT1AN-BK

SAKI Turkish Tea Maker Pro Instruction Manual

Model: SKT1AN-BK

INTRODUCTION

Welcome to the SAKI Turkish Tea Maker Pro. This manual provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Ensure the lid is securely closed before operating.
- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your SAKI Turkish Tea Maker Pro:

- Upper Teapot (Demlik) with Lid
- Magnetic Tea Infuser
- Lower Water Kettle (Samovar) with Spout
- Power Base with Digital Display and Controls
- Drip Tray



Image: SAKI Turkish Tea Maker Pro in Matte Black, fully assembled.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the upper teapot, magnetic tea infuser, and lower water kettle with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the power base with a damp cloth. Do not immerse the power base in water.

3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Assemble:** Place the lower water kettle onto the power base. Insert the magnetic tea infuser into the upper teapot.

OPERATING INSTRUCTIONS

Brewing Turkish Tea

1. **Fill Water Kettle:** Remove the upper teapot. Fill the lower water kettle with fresh, filtered water up to the MAX line.

Your browser does not support the video tag.

Video: Quick Start Guide for SAKI Turkish Tea Maker Pro, demonstrating initial setup and water filling.

2. **Add Tea Leaves:** Place approximately three tablespoons of loose-leaf Turkish tea into the magnetic tea infuser in the upper teapot. Ensure there is enough space for the tea leaves to expand.
3. **Assemble Teapot:** Place the upper teapot with the tea infuser onto the lower water kettle. Secure the lid on the upper teapot.
4. **Power On and Select Preset:** Plug the appliance into a 120V outlet. The full-color LCD screen will activate. Use the controls to select your desired brewing preset (e.g., SAKI Classic, Extra Hot, Mediterranean). The device offers to-the-degree temperature control and altitude calibration for optimal brewing.



Image: Close-up of the digital display showing temperature and hold settings.

5. **Brewing Process:** The water kettle will heat the water to the selected temperature. Once boiling, a portion of the hot water will be transferred to the upper teapot to steep the tea. The LED brew ring will indicate the heating status.
6. **Keep Warm Function:** After brewing, the tea maker automatically enters a keep-warm mode. You can adjust the hold time to 30, 60, 90, or 120 minutes, or turn it off completely.
7. **Serving:** To serve, pour the concentrated tea from the upper teapot into a glass, then dilute with hot water from the lower kettle's spout to your preferred strength.

Your browser does not support the video tag.

Video: Demonstration of the SAKI Turkish Tea Maker Pro in use, showing the brewing and serving process.

Automatic Shut-Off and Boil-Dry Protection

The SAKI Turkish Tea Maker Pro is equipped with an automatic shut-off feature for safety. If the water kettle runs dry, the boil-dry protection will activate, turning off the heating element to prevent damage.

MAINTENANCE AND CLEANING

- Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Clean Teapot and Infuser:** The upper teapot and magnetic tea infuser can be washed with warm, soapy water. Rinse thoroughly and dry. These components are made of stainless steel and are designed for easy cleaning.
- Clean Water Kettle Interior:** For the interior of the lower water kettle, use a soft brush or sponge with warm, soapy water. Rinse thoroughly. For mineral deposits (limescale), use a descaling solution or a mixture of water and vinegar. Follow the descaling product instructions or boil a mixture of equal parts water and white vinegar, let it sit for an hour, then rinse thoroughly.
- Clean Exterior:** Wipe the exterior of the water kettle and power base with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the power base in water.
- Drip Tray:** Remove and empty the drip tray regularly. Wash with warm, soapy water, rinse, and dry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not power on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the power cord is securely plugged into a working 120V outlet. Press the power button on the base.
Water is not heating.	Boil-dry protection activated; heating element malfunction.	Check if there is sufficient water in the kettle. If boil-dry protection activated, allow to cool and refill. If problem persists, contact customer support.
Tea tastes weak or too strong.	Incorrect tea-to-water ratio; incorrect brewing temperature/time.	Adjust the amount of tea leaves. Experiment with different presets or manually adjust temperature and hold time to suit your preference.
Mineral deposits inside kettle.	Hard water usage.	Descale the kettle using a descaling solution or a water-vinegar mixture as described in the Maintenance section.

SPECIFICATIONS

Feature	Detail
Brand	SAKI
Model Name	Turkish Tea Maker Pro
Model Number	SKT1AN-BK

Feature	Detail
Color	Matte Black
Capacity	1.75L (Lower Kettle)
Voltage	120V
Material	Stainless Steel (BPA-Free, Non-Toxic)
Special Features	Automatic Shut-Off, Boil Dry Protection, Built-In Magnetic Infuser, Digital Display, Drip-Less Spout, LED Brew Ring, 6 Tea Presets, Altitude Calibration, Adjustable Keep-Warm (30/60/90/120 min)
Product Dimensions	8.5"L x 7"W x 14.5"H
Item Weight	7.48 pounds
UPC	850015186417

WARRANTY

The SAKI Turkish Tea Maker Pro includes a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind regarding the product's quality and durability.


Please retain your proof of purchase for warranty claims.

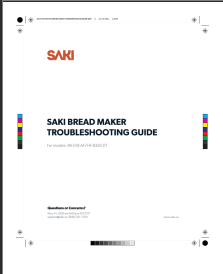 

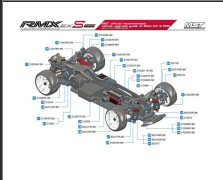 
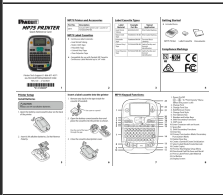 
CUSTOMER SUPPORT

For any questions, assistance, or troubleshooting not covered in this manual, please contact SAKI customer support. Our dedicated team is available to provide reliable service and answers to your inquiries.

Visit the official SAKI website for contact information and additional resources:[SAKI Official Store](#)

Related Documents - SKT1AN-BK

	<p>SAKI Tea Maker User Manual - Model SK-TM01</p> <p>Comprehensive user manual for the SAKI Tea Maker (Model SK-TM01), covering setup, operation, safety guidelines, cleaning, maintenance, troubleshooting, and warranty information.</p>
---	--

	<p>SAKI Bread Maker Troubleshooting Guide</p> <p>A comprehensive troubleshooting guide for SAKI bread makers, covering common issues and solutions for models RA-018 AF and HF-8350 DT. Learn how to address problems with kneading, buttons, operation, noise, smoke, and display errors.</p>
	<p>SAKI Bread Maker: Guide to Removing and Inserting the Bread Pan</p> <p>A step-by-step guide for SAKI bread maker models RA-018 AF/HF-8350 DT on how to safely remove and insert the bread pan, including important notices.</p>
	<p>MST RMX EX S PRO RC Drift Car Upgrade Guide</p> <p>Official upgrade guide for the MST RMX EX S PRO 1/10 scale RC RWD high-performance drift car, detailing recommended parts and comparisons for enhanced performance.</p>
	<p>Panduit MP75 Printer Quick Reference Card</p> <p>A concise guide to the Panduit MP75 label printer, covering setup, keypad functions, label modes, serialization, barcodes, symbols, display settings, and support contact information.</p>