

OMOTON WK003

OMOTON 2.4GHz Wireless AZERTY Keyboard Instruction Manual

Model: WK003

Brand: OMOTON

1. INTRODUCTION

Thank you for choosing the OMOTON 2.4GHz Wireless AZERTY Keyboard. This ultra-slim, silent keyboard is designed for comfortable and efficient typing across various Windows operating systems. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new keyboard to ensure optimal performance.

2. PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, please contact OMOTON customer support.

- 1 x OMOTON 2.4GHz Wireless AZERTY Keyboard
- 1 x USB Receiver
- 1 x User Manual

3. SETUP GUIDE

Follow these steps to set up your OMOTON wireless keyboard:

1. **Install Batteries:** Open the battery compartment on the back of the keyboard. Insert two AAA batteries (not included), ensuring correct polarity. Close the compartment.
2. **Insert USB Receiver:** Locate the USB receiver, which is magnetically stored in the battery compartment. Plug the USB receiver into an available USB port on your computer.



Image: Battery compartment with USB receiver and AAA batteries.

3. **Power On:** Slide the ON/OFF switch located on the top right side of the keyboard to the "ON" position.
4. **Connect:** Your computer should automatically detect and install the necessary drivers for the keyboard. No additional software is required.

Plug&Play

2.4G Technologie sans fil



Image: Plug & Play setup with USB receiver.

The keyboard is now ready for use.

4. OPERATING INSTRUCTIONS

4.1 Basic Typing

Simply begin typing. The keyboard features a standard AZERTY layout for familiar use.

4.2 Fn Lock Function

The keyboard includes a convenient Fn Lock function. By default, the F1-F12 keys perform their standard function. To access the multimedia shortcuts directly without pressing the Fn key, activate the Fn Lock.

- **Activate/Deactivate Fn Lock:** Press **Fn + Échap** simultaneously. When activated, the multimedia functions (e.g., volume control, home page) will be directly accessible by pressing F1-F12. When deactivated, F1-F12 will perform their standard functions, and multimedia actions will require pressing **Fn + Fx**.

Entièrement compatible aevc

Systeme Windows



Image: Fn Lock function and multimedia keys.

4.3 Multimedia Shortcuts

The keyboard provides 12 multimedia shortcuts for quick access to common functions. These can be used directly when Fn Lock is active, or by pressing **Fn** in combination with the respective F-key when Fn Lock is inactive.

Key	Function
F1	Mute
F2	Volume Down
F3	Volume Up
F4	Previous Track
F5	Play/Pause

Key	Function
F6	Next Track
F7	Brightness Down (System Dependent)
F8	Brightness Up (System Dependent)
F9	Search
F10	Home Page
F11	Copy
F12	Paste

4.4 Compatibility

This keyboard is compatible with Windows 11, 10, 8, 7, XP, and Vista, making it suitable for a wide range of desktop and laptop computers.



Image: Keyboard compatibility with Windows systems.

5. MAINTENANCE

5.1 Battery Replacement

When the keyboard's performance degrades or the indicator light flashes, it's time to replace the batteries. Open the battery compartment on the back and replace the two AAA batteries with new ones, observing polarity.

5.2 Cleaning

To clean your keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials. Ensure the keyboard is turned off before cleaning.

5.3 USB Receiver Storage

For convenience and to prevent loss, the USB receiver can be magnetically stored inside the keyboard's battery compartment when not in use or during transport.

6. TROUBLESHOOTING

If you encounter issues with your keyboard, please refer to the following common solutions:

- **Keyboard not responding:**

- Ensure the keyboard is turned ON.
- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Verify that the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Restart your computer.

- **Lagging or intermittent input:**

- Ensure the keyboard is within the effective operating range (up to 10 meters) of the USB receiver.
- Reduce potential interference by moving the keyboard closer to the receiver or away from other wireless devices (e.g., Wi-Fi routers, cordless phones).
- Check battery level. Low batteries can affect wireless performance.

- **Specific keys not working:**

- Gently clean around the affected key to remove any debris.
- If the issue persists, contact OMOTON customer support for further assistance.

7. SPECIFICATIONS

Detailed technical specifications for the OMOTON Wireless AZERTY Keyboard:

Feature	Detail
Brand	OMOTON

Feature	Detail
Model	WK003
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Keyboard Layout	AZERTY
Compatible Devices	PC, Desktop, Laptop
Compatible Operating Systems	Windows 11/10/8/7/XP/Vista
Special Features	12 Multimedia Shortcuts, Fn Lock, Silent Keys, Ultra-Slim Design, Magnetic USB Receiver Storage
Color	Black
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	38.1 x 13.7 x 2 cm (15 x 5.4 x 0.8 inches)
Number of Keys	99
Key Switch Type	Tactile (Scissor-mechanism)
Optimal Gradient	8 degrees

Verrouillage Fn

Fn+Echap : Activer ou désactiver la fonction de verr. Fn



Touches confortables

Design de mécanisme à ciseaux amélioré



Image: Scissor-mechanism key design.

8. WARRANTY INFORMATION

OMOTON products typically come with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official OMOTON website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or experience issues not covered in this manual, please do not hesitate to contact OMOTON customer support. You can usually find contact information on the OMOTON official website or

through the retailer where you purchased the product.