

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Redi-Remote](#) /

› User Manual for Redi-Remote Replacement Remote Control for Technical Pro X-Force-2, X Force 2

Redi-Remote RTXFORCE2REM

User Manual: Redi-Remote Replacement Remote Control

Model: RTXFORCE2REM

PRODUCT OVERVIEW

This document provides instructions for the Redi-Remote replacement remote control, specifically designed for use with Technical Pro X-Force-2 and X Force 2 audio units. This remote is a custom replacement and is not an original Technical Pro product. It is engineered to provide full functionality for the specified models without requiring any programming.



Image 1: Front view of the Redi-Remote replacement remote control. The remote is black with blue and grey buttons. The top section features power, input, display, channel, volume, mute, menu, recall, and a numeric keypad. The lower section, covered by a sliding panel, reveals additional function buttons for AUX, FM, OSD, tone controls, microphone, echo, navigation, playback, and language settings.

Battery Installation

The remote control requires 4 AAA batteries for operation. To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required for this remote control. It is pre-configured to work with compatible Technical Pro X-Force-2 and X Force 2 units immediately after battery installation.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your Redi-Remote replacement control.

Upper Section Buttons

- **PWR (Power)** (Red button, top left): Turns the Technical Pro unit on or off.
- **SLEEP** (Below PWR): Activates or deactivates the sleep timer function.
- **INPUT** (Top right): Cycles through available input sources.
- **DISP (Display)** (Below INPUT): Changes or shows display information.
- **CH+ / CH- (Channel)** (Blue buttons, center top): Navigates through channels or menu options.
- **VOL+ / VOL- (Volume)** (Blue buttons, left and right of MUTE): Adjusts the master volume level.
- **MUTE** (Center of volume/channel cluster): Mutes or unmutes the audio output.
- **MENU** (Left of numeric keypad): Accesses the system menu.
- **RECALL** (Right of numeric keypad): Recalls previous settings or channels.
- **Numeric Keypad (0-9)** (Central block): Used for direct input of numbers, such as channel numbers or settings.
- **. (Dot)** (Left of 9): Used for decimal points or specific input functions.
- **ENT (Enter)** (Right of 0): Confirms selections or inputs.

Lower Section Buttons (Slide Down Cover)

The lower half of the remote control is protected by a sliding cover. To access these functions, gently slide the cover downwards. This section contains advanced controls for specific unit features.

- **AUX1 / AUX2 B.T / FM** (Top row of lower section): Selects auxiliary inputs or FM radio mode.
- **OSD OPEN/CLOSE** (Top right of lower section): Opens or closes the On-Screen Display menu.
- **TRE +/- (Treble)** (Second row, left): Adjusts treble levels.
- **BASS +/-** (Second row, center): Adjusts bass levels.
- **SETUP** (Second row, right): Accesses the system setup menu.
- **MIC +/- (Microphone)** (Third row, left): Adjusts microphone volume.

- **ECHO +/-** (Third row, right): Adjusts echo effect levels.
- **TITLE** (Fourth row, left): Accesses disc title menu.
- **RETURN** (Fourth row, center-left): Returns to the previous menu or screen.
- **SUB-TITLE** (Fourth row, center-right): Selects subtitle options.
- **LANGUAGE** (Fourth row, right): Changes audio language or menu language.
- **REPEAT / A-B REPEAT** (Fifth row, left and right): Controls playback repeat functions.
- **Navigation Arrows (Up, Down, Left, Right)** (Around ENTER button): Used for menu navigation.
- **ENTER** (Center of navigation arrows): Confirms selections within menus.
- **L/R/ST** (Sixth row, left): Toggles between Left, Right, and Stereo audio modes.
- **Playback Controls** (|<, >>|, <, >, ||, ■) (Bottom rows): Standard media playback controls including Skip Back, Skip Forward, Rewind, Fast Forward, Play/Pause, and Stop.
- **PAL/NTSC** (Bottom row, center-left): Switches between PAL and NTSC video formats.
- **FM SCAN / ►II** (Bottom row, center-right): Initiates FM radio scan or acts as a play/pause button.

MAINTENANCE

Cleaning the Remote

To maintain the remote control's appearance and functionality, clean it periodically:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Care

- Replace all batteries simultaneously when they are depleted. Do not mix old and new batteries.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your Redi-Remote, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace all batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the Technical Pro unit's infrared receiver.
 - Confirm you are within the effective operating range of the unit.
- **Specific Buttons Not Working:**
 - Ensure the remote is pointed directly at the unit.

- Verify that the function you are trying to use is supported by your specific Technical Pro X-Force-2 or X Force 2 model.
- For buttons under the sliding cover, ensure the cover is fully open and the buttons are clean.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is not blocked or dirty.

If these steps do not resolve the issue, please refer to the "Support and Contact" section for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	5 ounces
Model Number	RTXFORCE2REM
Batteries Required	4 AAA batteries (not included)
Color	Black
Max Number of Supported Devices	1 (Technical Pro X-Force-2 / X Force 2)
Special Feature	No Programming Required

SUPPORT AND CONTACT

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the seller directly for assistance. The seller is committed to ensuring your satisfaction with the product.

Please refer to your purchase documentation or the platform where you purchased the remote for specific contact information for the seller, Redi-Remote.

© 2023 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B247W27W>

More documents and user manuals: <https://manuals.plus/>