

[manuals.plus](#) /› [Airbition](#) /› [Airbition 8-inch Wall Mount Fan with Remote Control \(Model A1\) User Manual](#)

Airbition A1

Airbition 8-inch Wall Mount Fan with Remote Control (Model A1) User Manual

Comprehensive instructions for safe and efficient use of your Airbition Wall Mount Fan.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Keep the power cord away from heated surfaces.
- Do not immerse the fan in water or other liquids.
- This fan is intended for indoor use only. Do not use outdoors.
- Do not insert fingers or any other objects through the grille when the fan is operating.
- Ensure the fan is placed on a stable, level surface or securely mounted to a wall to prevent tipping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Airbition 8-inch Wall Mount Fan (Model A1)
- Remote Control
- Mounting Bracket
- Power Cord (5.9 ft / 70 inches)
- User Manual



Image: The Airbition 8-inch Wall Mount Fan, showing the fan unit and its remote control.

3. SETUP AND INSTALLATION

3.1 Wall Mounting

The Airbition A1 fan is designed for wall mounting to optimize space and airflow. Ensure the mounting surface is sturdy and capable of supporting the fan's weight.

- Select Location:** Choose a suitable location on a wall, ensuring it is within reach of a power outlet and allows for optimal air circulation. Consider the 70-inch power cord length.
- Mark Drilling Points:** Use the provided mounting bracket as a template to mark the positions for drilling holes on the wall.
- Drill Holes:** Drill holes at the marked positions. Use appropriate drill bits and wall anchors if necessary, depending on your wall material.
- Secure Bracket:** Attach the mounting bracket to the wall using screws (not included, typically provided with wall anchors). Ensure it is firmly secured.
- Attach Fan:** Align the fan unit with the secured mounting bracket and slide it into place until it clicks or is firmly seated.

3.2 Power Connection

Once the fan is securely mounted, connect the power cord.

1. Insert the USB-C connector of the power cord into the back of the fan unit.
2. Plug the standard electrical plug into a 120V AC power outlet.

No Sound but the Wind



Image: Diagram illustrating the 90° oscillation and 120° vertical tilt capabilities of the fan, demonstrating efficient air circulation in a room.

4. OPERATING INSTRUCTIONS

The Airbition A1 fan can be operated using the control panel on the unit or the included remote control.

4.1 Control Panel

The control panel is located on the base of the fan unit. It typically includes buttons for Power, Speed, Oscillation, and Timer.

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Button:** Press repeatedly to cycle through the 4 available fan speeds (Speed 1, Speed 2, Speed 3, Speed 4).

- **Oscillation Button:** Press to activate or deactivate the 90° oscillation feature.
- **Timer Button:** Press repeatedly to set the automatic shut-off timer (0.5, 1.5, 4, or 8 hours).

4.2 Remote Control

The remote control allows convenient operation from a distance of up to 20 feet. Ensure the CR2032 battery is correctly installed and the battery cover is fully tightened for proper function.



Image: The remote control for the Airbition fan, showing its buttons for various functions.

- **Power Button:** Turns the fan ON or OFF.
- **Speed Buttons:** Adjusts the fan speed.
- **Oscillation Button:** Activates or deactivates the 90° oscillation.
- **Timer Button:** Sets the automatic shut-off timer.

The remote control is magnetic for convenient storage, for example, on a refrigerator or the fan itself.

4.3 Adjustable Tilt

The fan head can be manually adjusted up to 120° vertically to direct airflow precisely where needed. Gently tilt the fan head to the desired angle.



Image: A woman comfortably operating the wall-mounted fan with a remote control from her couch, highlighting the convenience of remote operation.

5. MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

5.1 Cleaning the Fan

1. **Unplug:** Always unplug the fan from the power outlet before cleaning.
2. **Remove Grille:** The front grille and fan blades are detachable for easy cleaning. Carefully remove the front grille by twisting or unlatching it according to the design.
3. **Clean Blades:** Gently remove the fan blades. Wash the blades and grille with mild soap and water. Ensure they are completely dry before reassembling.
4. **Wipe Exterior:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
5. **Reassemble:** Once all parts are dry, carefully reassemble the fan blades and front grille. Ensure all components are securely in place before plugging the fan back in.



Image: Hands washing the detachable fan blades under running water, demonstrating the ease of cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Airbition A1 fan, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in. Power outlet malfunction. Power cord damage.	Ensure the power cord is securely plugged into a 120V outlet. Test the outlet with another appliance. Inspect the power cord for visible damage. If damaged, discontinue use and contact support.
Remote control not working.	Battery depleted or incorrectly installed. Battery cover not fully tightened. Obstruction between remote and fan. Remote out of range.	Replace the CR2032 battery. Ensure it is installed with correct polarity. Tighten the battery cover completely. Ensure a clear line of sight between the remote and the fan's receiver. Operate the remote within the 20ft range.
Fan makes unusual noise.	Loose parts. Dust or debris on blades.	Unplug the fan and check if the grille or blades are securely attached. Clean the fan blades and grille as per maintenance instructions.
Oscillation not working.	Oscillation feature deactivated. Mechanical obstruction.	Press the oscillation button on the control panel or remote. Ensure nothing is blocking the fan's movement.

7. SPECIFICATIONS

Feature	Detail
Brand	Airbition
Model Name	A1
Color	White
Electric Fan Design	Wall Mount Fan

Feature	Detail
Power Source	Corded Electric
Product Dimensions	11.4"D x 8.26"W x 10.3"H
Room Type	Bedroom, Office, RV, Garage, Basement
Special Features	Adjustable Tilt (120°), Oscillating (90°), Timer
Recommended Uses	Cooling
Noise Level	35-55 dB (DC motor)
Wattage	264 watts
Number of Blades	7
Voltage	120V
Switch Type	Push Button
Included Components	Cord, Remote
Indoor/Outdoor Usage	Indoor
Control Method	Remote
Number of Power Levels	4
Main Power Connector Type	Standard Electrical Plug
Motor Type	DC
Installation Type	Wall Mount
Item Weight	2.25 pounds
Battery for Remote	1 CR2032 battery required

Control on the Couch

Personalize your comfort from 20ft away



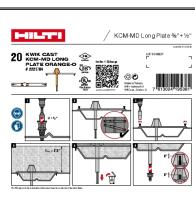
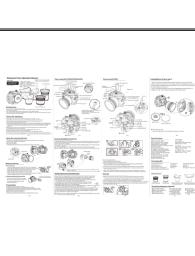
Image: The Airbition wall mount fan installed on a wall, illustrating the 70-inch power cord length reaching a wall outlet.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Airbition customer service. Keep your purchase receipt as proof of purchase.

Contact information can typically be found on the product packaging or the official Airbition website.

Related Documents - A1

	<p>Airbition AIR301 Wall Mount Fan User Manual</p> <p>Comprehensive user manual for the Airbition AIR301 Wall Mount Fan, covering specifications, installation, operation, cleaning, troubleshooting, and warranty information.</p>
	<p>Hilti KWIK CAST KCM-MD Long Plate Installation and Specifications</p> <p>Detailed installation guide for the Hilti KWIK CAST KCM-MD Long Plate (Model 2221704), featuring 3/8" and 1/2" compatibility. Includes product overview, safety, step-by-step instructions, and technical data.</p>
	<p>User's Manual: Wireless CarPlay & Android Auto for Audi A1/Q3 (CX-Q3S, CX-3GQ3)</p> <p>Comprehensive user manual for the CX-Q3S and CX-3GQ3 aftermarket modules, enabling Wireless CarPlay and Android Auto for Audi A1/Q3 models (2G/3GMMI, 09-18 years). Includes installation, connection, specifications, settings, and troubleshooting.</p>
	<p>PARKSIDE PSSO 500 A1 Oszillierender Spindel- und Bandschleifer Bedienungsanleitung</p> <p>Die offizielle Bedienungsanleitung für den PARKSIDE PSSO 500 A1 Oszillierenden Spindel- und Bandschleifer. Enthält wichtige Sicherheitshinweise, Bedienungsanleitungen, Wartungsinformationen und technische Daten für Heimwerker.</p>
	<p>Seafrogs Waterproof Case Operation Manual for Sony Cameras</p> <p>Comprehensive operation manual for Seafrogs waterproof cases compatible with Sony A1, A7SIII, A7RIV, A7RIVA, and A9II cameras. Covers introduction, points for attention, opening the case, waterproof testing, preparation, camera installation, maintenance, storage, specifications, and packaging.</p>