

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for MEMOREX MIHTS3202

Redi-Remote MIHTS3202

Redi-Remote Replacement Remote Control User Manual for MEMOREX MIHTS3202

1. INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, specifically designed for compatibility with MEMOREX MIHTS3202 units. This remote is a custom replacement and is not an original MEMOREX product. It is engineered to perform all essential functions for the specified unit.

2. PRODUCT OVERVIEW

The Redi-Remote replacement remote control features a standard layout for common functions and a sliding cover to reveal additional, model-specific controls. Its dimensions are approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.





Figure 1: Redi-Remote Replacement Remote Control. This image displays the full Redi-Remote replacement remote control. The upper section features standard TV controls like Power, Volume, Channel, Mute, and number buttons. The lower section, revealed by sliding down a cover, contains additional function buttons for specific unit operations.

2.1 Button Functions (Upper Section)

- **PWR (Power):** Turns the unit on or off.
- **SLEEP:** Activates or deactivates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen information.
- **VOL +/- (Volume Up/Down):** Adjusts the audio volume level.
- **CH +/- (Channel Up/Down):** Changes the channel.

- **MUTE:** Silences or restores the audio.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly selects channels or enters numerical values.
- **ENT (Enter):** Confirms selections or entered numbers.

2.2 Button Functions (Lower Section - Slide Down)

To access these functions, gently slide down the cover located at the lower half of the remote control.

- **FUNCT (Function):** Activates specific functions depending on the unit.
- **MODE:** Changes the operating mode of the unit.
- **▶ || (Play/Pause):** Initiates playback or pauses media.
- **◀◀ (Skip Back):** Skips to the previous track or chapter.
- **▶ ▶ (Skip Forward):** Skips to the next track or chapter.
- **DOWN, UP, SEL (Select):** Navigation and selection controls for menus or settings.
- **BASS +/-:** Adjusts the bass level.
- *Additional unlabeled buttons:* These buttons are specific to the MEMOREX MIHTS3202 unit and their functions will correspond to the original remote's layout. Refer to your MEMOREX unit's original manual for their specific uses.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or press the latch to open the cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: This remote control does not require programming. It is pre-configured for the MEMOREX MIHTS3202 unit.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the MEMOREX MIHTS3202 unit you wish to control. Ensure there are no obstructions between the remote and the unit.

4.1 Basic Functions

- **Power On/Off:** Press the **PWR** button.
- **Adjust Volume:** Press **VOL +** to increase volume, **VOL -** to decrease.
- **Change Channel:** Press **CH +** for the next channel, **CH -** for the previous. Use number buttons for direct channel entry, followed by **ENT**.
- **Mute Audio:** Press the **MUTE** button. Press again to unmute.
- **Select Input:** Press the **TV/VIDEO** button to cycle through available input sources.

4.2 Advanced Functions (Using Sliding Cover)

Slide down the lower cover of the remote to access these controls.

- **Media Playback:** Use **▶ ||** for play/pause, **◀◀** to skip back, and **▶ ▶** to skip forward.
- **Menu Navigation:** Use **UP** and **DOWN** buttons to navigate menu options, and **SEL** to confirm selections.

- **Bass Adjustment:** Use **BASS +** and **BASS -** to fine-tune audio bass levels.

5. MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries simultaneously when the remote's performance degrades. Do not mix old and new batteries or different battery types.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Point the remote directly at the MEMOREX unit.
 - Remove any obstructions between the remote and the unit.
- **Limited functionality:**
 - Ensure the sliding cover is open to access all functions.
 - Verify that your MEMOREX unit is the MIHTS3202 model, as this remote is specifically designed for it.

7. SPECIFICATIONS

Brand	Redi-Remote
Compatible Model	MEMOREX MIHTS3202
Item Model Number	RT2118013916006LF
Product Dimensions	7 x 2.5 x 1 inches (approximately 7.5" x 2.25" x 0.75")
Item Weight	5 ounces
Batteries Required	4 AAA batteries
Special Feature	Ergonomic design
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television (specifically MEMOREX MIHTS3202)

8. SUPPORT

For any concerns or questions regarding this remote control after purchase, please contact the seller directly for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B273NK1C>

More documents and user manuals: <https://manuals.plus/>