

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lemax](#) /
- › [Santa's Chalet, with 4.5V Adaptor #15742 User Manual](#)

Lemax 15742

Santa's Chalet, with 4.5V Adaptor #15742

USER MANUAL

Introduction

The Lemax Santa's Chalet is a meticulously crafted lighted building designed to enhance your holiday village display. This collectible features intricate details, including sparkling lights, an illuminated Christmas tree, and a unique smoke effect from the chimney, creating a vibrant and festive atmosphere. An inside scene with Santa is also visible for maximum effect.



Image: The Santa's Chalet, a detailed holiday building with lights, a snowman, and a reindeer figure. Santa is visible through a window.

Setup

1. **Unpacking:** Carefully remove the Santa's Chalet from its packaging. Inspect the item for any damage. Retain the original packaging for future storage.
2. **Placement:** This product is designed for indoor use only. Place the chalet on a stable, flat tabletop surface. Ensure there is adequate space around the unit for proper display and to prevent obstruction of any features.
3. **Power Connection:** Locate the 4.5V adaptor included with your chalet. Insert the small plug from the adaptor into the power input jack located on the back or bottom of the chalet. Plug the adaptor into a standard electrical outlet.
4. **Dimensions:** Consider the product dimensions for optimal placement: 5.98 inches (Depth) x 9.45 inches (Width) x 8.27 inches (Height).



Image: The Santa's Chalet with its approximate dimensions indicated: 9.45 inches wide, 5.98 inches deep, and 8.27 inches high.

Operating Instructions

Once the 4.5V adaptor is connected and plugged into an electrical outlet, locate the On/Off switch. This switch is typically found on the power cord or on the base of the chalet. Flip the switch to the 'On' position to activate the lights, internal scene, and smoke effect (if applicable). To turn off the chalet, flip the switch to the 'Off' position.

- **Lights:** The chalet features various lights, including those along the cornices and on the Christmas tree.
- **Inside Scene:** An illuminated inside scene provides additional visual interest, showcasing Santa.
- **Smoke Effect:** The chimney produces a smoke effect, adding to the realism and charm of the display.

Maintenance

- **Cleaning:** To clean the Santa's Chalet, gently wipe the surface with a soft, dry cloth. For stubborn spots, a slightly damp cloth can be used, followed immediately by a dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the finish or electronic components. This item is for spot clean only.
- **Storage:** When not in use, store the chalet in its original packaging or a suitable protective container in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the power adaptor is disconnected before storage.

Troubleshooting

- **No Power/Lights Not Working:**
 - Ensure the 4.5V adaptor is securely plugged into both the chalet and a working electrical outlet.
 - Check that the On/Off switch is in the 'On' position.
 - Test the electrical outlet with another device to confirm it is functioning correctly.
- **Smoke Effect Not Visible:**
 - Verify the unit is powered on.
 - Ensure the smoke mechanism (if applicable) is not obstructed. Refer to any specific instructions regarding the smoke feature if provided with the product.
- **Unstable Placement:**
 - Relocate the chalet to a flat, level, and stable surface.

Specifications

Feature	Detail
Model Number	15742
Brand	Lemax
Collection Name	Christmas Set (Santa's Wonderland)
Year Released	2022
Product Dimensions (D x W x H)	5.98" x 9.45" x 8.27"
Item Weight	2.38 Pounds
Material	Plastic
Power Source	4.5V Adaptor (Included)
Recommended Use	Indoor, Tabletop Display
UPC	728162157423

Warranty and Support

For specific warranty information and details regarding product support, please refer to the documentation provided with your purchase or contact the retailer or manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance or inquiries, please visit the official Lemax website or contact their customer service department.



[Wall-mounted LFP Battery User Manual](#)

User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.



[Wall-mounted LFP Battery User Manual](#)

User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.

[Deye Approved Battery List for Inverters](#)

A comprehensive list of batteries approved for use with Deye inverters, including model numbers and compatibility information.

[Deye Approved Battery List for Inverter Compatibility](#)

This document from Deye lists approved battery models compatible with various Deye inverter series, ensuring optimal performance and reliability for solar energy systems. It includes model numbers, brands, and compatibility details.

[Deye Approved Battery List for Inverters](#)

Official list of Deye approved batteries compatible with various Deye inverter models, including model numbers and communication protocols.

[Deye Approved Battery List for Inverter Compatibility](#)

Deye's official list of approved batteries compatible with Deye inverters, detailing brands, models, and compatibility information for energy storage solutions.