

Octrot YZH-6284B

Octrot Sherpa Electric Heated Blanket

Model: YZH-6284B

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Octrot Electric Heated Blanket. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use with an infant, child, incapacitated person, or anyone insensitive to heat.
- Do not use with or on an animal.
- Do not use if the blanket is wet.
- Never use the blanket folded, bunched, or crumpled. This can cause localized overheating.
- Do not insert pins or other metallic objects into the blanket.
- Do not use if the power cord or controller is damaged.
- Always unplug the blanket from the power outlet when not in use.
- Keep the control unit away from open windows or sources of moisture.
- Do not dry clean this product. Dry cleaning solvents may damage the insulation of the heating element.
- Do not use with generators, power converters, or inverters.
- Ensure the blanket is used on a flat surface and not tucked under a mattress.

2. PRODUCT OVERVIEW

The Octrot Sherpa Electric Heated Blanket, Model YZH-6284B, is designed to provide warmth and comfort. It features 10 adjustable heat settings and a programmable auto-shutoff timer with options from 1 to 8 hours. Constructed from soft flannel and Sherpa materials, the blanket includes integrated heating wires for even heat distribution and overheat protection for user safety. The detachable digital controller allows for easy temperature and time management, and the blanket is machine washable for convenient care.



Figure 2.1: Octrot Sherpa Electric Heated Blanket providing warmth on a bed.

3. PACKAGE CONTENTS

- 1 x Octrot Sherpa Electric Heated Blanket (62"x84")
- 1 x Detachable Digital Controller
- 1 x User Manual

4. SETUP INSTRUCTIONS

Follow these steps to set up your electric heated blanket for the first time:

1. **Unpack the Blanket:** Carefully remove the blanket and controller from its packaging.
2. **Lay Flat:** Spread the blanket flat on your bed or sofa, ensuring there are no folds or creases.
3. **Connect the Coupler:** Locate the coupler on the blanket and the corresponding connector on the detachable digital controller. Firmly push the controller's connector into the blanket's coupler until it clicks securely into place.

4. **Plug into Power:** Insert the power plug of the controller into a standard electrical outlet.



Figure 4.1: Visual guide for connecting the power and controller to the blanket.

Note: If the controller is not connected or improperly connected, or if there is an internal contact fault, the blanket may not operate correctly.

5. OPERATING INSTRUCTIONS

Your Octrot Electric Heated Blanket features a user-friendly digital controller for adjusting heat and timer settings.



Figure 5.1: Digital controller for heat and time settings.

5.1 Power On/Off

- Press the **Power button** (usually a circular button in the center) to turn the blanket on or off.

5.2 Adjusting Heat Levels

- The blanket offers 10 heat levels, ranging from approximately 86°F (30°C) to 112°F (44°C).
- Press the **Temperature button** (often indicated by a thermometer icon) to cycle through the available heat settings. The current heat level will be displayed on the digital screen.

5.3 Setting the Timer

- The automatic shut-off timer can be set for 1, 2, 4, 6, or 8 hours.
- Press the **Timer button** (often indicated by a clock icon) to select your desired operating duration. The remaining time will be shown on the digital display.
- The blanket will automatically turn off once the selected time has elapsed, providing safety and energy efficiency.

6. MAINTENANCE AND CARE

Proper care ensures the longevity and performance of your electric heated blanket.

6.1 Before Cleaning

- Always ensure the blanket is unplugged from the power outlet.
- **Detach the Controller:** Disconnect the digital controller from the blanket by firmly pulling the connector out of the coupler.
- Allow the blanket to cool completely before cleaning.



Figure 6.1: The electric blanket is machine washable after detaching the control panel.

6.2 Machine Washing

- Wash on a gentle cycle with cold water (maximum 30°C / 86°F).
- Use a mild detergent.

- Do not bleach.
- Do not iron.
- Do not dry clean.

6.3 Drying

- Tumble dry on low heat or line dry.
- Ensure the blanket is completely dry before reconnecting the controller and using it again.
- Do not wring or twist the blanket.

7. TROUBLESHOOTING

If you encounter issues with your electric heated blanket, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket does not heat.	Not plugged in. Controller not securely connected. Power outage. Overheat protection activated.	Ensure power cord is firmly plugged into a working outlet. Check that the controller is securely connected to the blanket's coupler. Verify power supply. Unplug, let cool for 30 minutes, then reconnect.
Controller display is off or flashing.	Loose connection. Internal fault.	Ensure all connections are secure. If problem persists, contact customer support.
Blanket heats unevenly.	Blanket is folded or bunched.	Spread the blanket flat, ensuring no folds or creases.

8. SPECIFICATIONS

Feature	Detail
Brand	Octrot
Model Number	YZH-6284B
Size	62 inches x 84 inches
Material	Flannel (200 GSM) and Sherpa (180 GSM)
Color	Grey
Heat Settings	10 levels (approx. 86°F - 112°F / 30°C - 44°C)
Timer Settings	1, 2, 4, 6, 8 hours auto shut-off
Safety Features	Automatic shut-off, Overheat protection
Care Instructions	Machine washable (detachable controller)
Recommended Use	Indoor Lounging, Therapeutic Use

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Octrot customer service. Keep your purchase receipt for warranty claims.

© 2023 Octrot. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question