

Kuephom PM11-Black

Kuephom Portable CD Player (Model PM11-Black) Instruction Manual

Your guide to setting up, operating, and maintaining your portable CD player.

- Overview
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. PRODUCT OVERVIEW

The Kuephom Portable CD Player (Model PM11-Black) is a versatile audio device designed for personal and multi-user listening. It features a built-in speaker, rechargeable battery, and anti-skip protection, making it suitable for various environments including home, car, and travel. The player supports multiple audio formats and offers adjustable playback speed for learning purposes.



Image 1.1: Kuephom Portable CD Player and accessories.

Key Features:

- **Rechargeable Battery:** Integrated 1500mAh battery provides up to 8 hours of playback with earphones or 5 hours with the built-in speaker on a 4-hour charge.
- **Built-in Speaker:** Allows direct listening without external headphones or speakers.
- **Anti-Skip Protection:** Ensures uninterrupted audio playback during movement or light shocks.
- **Memory Playing:** Resumes playback from the last played track when the device is turned on again.
- **Wide Compatibility:** Supports CD, CD-R, CD-RW, MP3, and WMA formats.
- **Multiple Connectivity Options:** Includes 3.5mm AUX input/output, USB port, and headphone jack.
- **Adjustable Playback Speed:** Useful for language learning or musical practice.

2. SETUP GUIDE

2.1 Charging the Device

Before initial use, fully charge the CD player. The device features a built-in rechargeable battery, eliminating the need for disposable AA batteries.

1. Locate the charging port on the side of the CD player.
2. Connect the provided USB charging cable to the player and a compatible USB power source (e.g., wall

charger, power bank, car charger, computer USB port).

3. The charging indicator light will illuminate. A full charge typically takes approximately 4 hours.



Image 2.1: Charging options for the CD player.

2.2 Loading a CD

The CD player supports standard CD, CD-R, CD-RW, MP3, and WMA disc formats.

1. Locate the 'OPEN' switch on the side of the player.
2. Slide the switch to the 'OPEN' position to release the lid.
3. Gently place the CD onto the central spindle with the label side facing up. Ensure the CD is securely seated.
4. Close the lid firmly until it clicks into place.

Your browser does not support the video tag.

Video 2.2: Demonstrates the basic functions and usage scenarios of the Kuephom Portable CD Player, including loading a CD and identifying ports.

2.3 Connecting External Devices

- **Headphones:** Plug the included earbuds or your preferred 3.5mm headphones into the headphone jack (blue port).
- **AUX Connection:** Use the provided 3.5mm audio cable to connect the player's AUX port (green port) to external speakers or a car's AUX input.
- **USB Playback:** Insert a USB flash drive into the USB port to play compatible audio files (MP3, WMA).



Image 2.3: Connecting the CD player to a car's audio system.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

Locate the power switch on the side of the player. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

3.2 Basic Playback Controls

The control panel on the top of the player features intuitive buttons:

- **Play/Pause (▶ ||):** Press to start or pause playback.

- **Previous Track** (◀◀): Press once to go to the beginning of the current track. Press twice to go to the previous track.
- **Next Track** (▶▶): Press to skip to the next track.
- **Volume Up** (+): Increases the volume.
- **Volume Down** (-): Decreases the volume.

3.3 Advanced Playback Functions

- **Repeat (REP)**: Cycles through repeat modes (e.g., repeat one, repeat all, random).
- **Mode (MODE)**: Switches between different playback modes (e.g., CD, USB, AUX).
- **A-B Repeat (A-B)**: Allows repeating a specific segment of audio.
- **Program (PROG)**: Enables programming a custom playback order for tracks.
- **Speed Adjustment (SPEED +/-)**: Adjusts the playback speed, useful for language learning or transcribing audio.

USEFUL FOR LEARNING




DESIRED AUDIO SECTION REPEAT

PLAY SPEED+/- ADJUSTABLE

Image 3.1: The adjustable playback speed feature is beneficial for learning.

3.4 Anti-Skip and Memory Functions

- **Anti-Skip Protection**: This function is automatically activated when the player is turned on, providing a

buffer against minor shocks and vibrations to ensure continuous playback.

- **Memory Playing:** The device remembers the last played track and position, resuming from that point when powered on again.



Image 3.2: Anti-shock protection for active use.

4. MAINTENANCE

4.1 Cleaning the CD Player

- Use a soft, dry cloth to clean the exterior of the player.
- For the lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.
- Avoid using abrasive cleaners or solvents.

4.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- Charge the device at least once every three months if unused to prevent deep discharge.

4.3 CD Care

- Handle CDs by their edges to avoid fingerprints and scratches.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- Store CDs in their cases to protect them from dust and damage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is depleted. Power switch is off.	Charge the battery. Ensure the power switch is in the 'ON' position.
No sound.	Volume is too low. Headphones/AUX cable not connected properly. CD/USB not playing.	Increase volume. Check connections. Ensure CD/USB is playing and not paused.
CD skipping or not playing.	CD is dirty or scratched. CD is not properly seated. Incorrect CD format.	Clean the CD. Re-seat the CD. Ensure the CD format (CD, CD-R, CD-RW, MP3, WMA) is supported.

Problem	Possible Cause	Solution
USB playback not working.	USB drive not properly inserted. Incompatible file format.	Ensure USB drive is fully inserted. Check if files are MP3 or WMA format.

6. PRODUCT SPECIFICATIONS



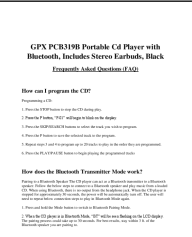

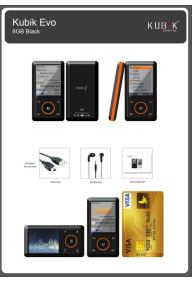

Feature	Detail
Model Number	PM11-Black
Product Dimensions	5.7 x 5.7 x 1.2 inches
Item Weight	1.01 pounds
Battery Type	1 Lithium Polymer battery (included)
Connectivity	Auxiliary, USB
Special Features	Anti-Skip Protection, Portable, Programmable Memory, Rechargeable
Included Components	CD player X 1, Earbuds X 1, Audio cable X 1, Charging cable X 1, Pouch X 1
Supported Formats	CD, CD-R, CD-RW, MP3, WMA

7. WARRANTY & SUPPORT

For warranty information and customer support, please contact Kuephom directly. Details regarding product warranty periods and service procedures are typically provided with your purchase documentation or can be found on the official Kuephom website.

If you encounter any issues not covered in this manual, please reach out to Kuephom customer service for assistance.

Related Documents - PM11-Black

 <p>MAJORITY Majority MP3 player 16GB Black/White</p> <p>Instructions Guide</p>	<p>Majority MP3 Player 16GB Black/White Instructions Guide</p> <p>Comprehensive instructions guide for the Majority MP3 player 16GB Black/White, covering setup, controls, music playback, Bluetooth, recording, settings, specifications, and warranty.</p>
 <p>ENERGY SISTEM Car MP3 Player</p> <p>Manual de usuario / User manual Manual de instrucciones / Manual de instrucciones</p>	<p>Manual de Usuario Energy Sistem Car MP3 Energy 1204 Deep Black</p> <p>Guía completa del reproductor Car MP3 Energy 1204 Deep Black de Energy Sistem. Incluye instrucciones sobre el transmisor FM, reproducción de música, uso portátil, conexión al PC y solución de problemas.</p>
 <p>GPX PCB319B Portable CD Player with Bluetooth, Includes Stereo Earbuds, Black</p> <p>Instructions, About Questions, FAQ</p> <p>How can I program the CD?</p> <p>How does the Bluetooth Transmitter Mode work?</p>	<p>GPX PCB319B Portable CD Player with Bluetooth: FAQ and Usage Guide</p> <p>Frequently Asked Questions and instructions for the GPX PCB319B Portable CD Player with Bluetooth, covering CD programming and Bluetooth transmitter mode pairing. Learn how to program tracks and connect to Bluetooth speakers.</p>
 <p>Oilsky USER MANUAL</p> <p>Important: Please read this instruction carefully before use and keep it for future reference.</p>	<p>Oilsky M308 User Manual: Digital Audio Player Guide</p> <p>Comprehensive user manual for the Oilsky M308 digital audio player. Learn about controls, basic operation, WiFi, Bluetooth, music playback, specifications, and troubleshooting.</p>
 <p>Kubik Evo 8GB Black</p>	<p>Kubik Evo 8GB Black Portable MP3 Player</p> <p>Detailed specifications and features of the Kubik Evo 8GB Black portable MP3 player, including audio playback, storage, connectivity, and system requirements.</p>
 <p>Black Diamond Astro R</p>	<p>Black Diamond Astro R Headlamp User Manual</p> <p>Instructions for use, care, and troubleshooting for the Black Diamond Astro R LED headlamp. Features include multiple brightness modes, rechargeable battery, and splashproof design.</p>