

Sweet Alice 002403

Sweet Alice Vacuum Sealer User Manual

Model: 002403

1. INTRODUCTION

Thank you for purchasing the Sweet Alice Vacuum Sealer, Model 002403. This appliance is designed to efficiently vacuum seal and preserve a variety of foods, extending their freshness and flavor. With its powerful 110W motor and versatile functions, it provides a convenient solution for food storage.

Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. The sealing bar becomes hot during operation. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing. Ensure all items are present and undamaged.

- Sweet Alice Vacuum Sealer Unit (Model 002403)
- 1 x Vacuum Sealer Roll (3 meters x 28 cm)
- User Manual

4. SETUP

1. **Unpack:** Carefully remove the vacuum sealer and all accessories from the packaging.
2. **Placement:** Place the appliance on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper operation and ventilation.
3. **Power Connection:** Plug the power cord into a standard electrical outlet (110V).
4. **Familiarize with Controls:** Identify the control buttons: "Seal Only", "Cancel", and "Vacuum & Seal". Observe the LED indicator lights.



Figure 1: Sweet Alice Vacuum Sealer showing the "Seal Only", "Cancel", and "Vacuum & Seal" buttons, and the brand name.

5. OPERATING INSTRUCTIONS

5.1 Preparing the Vacuum Bag

- Use only vacuum sealer bags designed for this appliance. Compatible bag thickness is between 0.2mm and 0.29mm.
- Ensure the bag is clean and dry.
- Leave at least 7-10 cm (3-4 inches) of empty space at the top of the bag to allow for proper sealing.
- For moist foods, pre-freeze them or place a paper towel inside the bag to absorb excess moisture.

5.2 Vacuum Sealing Process

1. **Open the Lid:** Lift the lid of the vacuum sealer.
2. **Position the Bag:** Place the open end of the bag into the vacuum channel, ensuring it lies flat across the

sealing bar. Make sure the bag is fully inside the vacuum chamber.

3. **Close the Lid:** Press down firmly on both sides of the lid until you hear a click, indicating it is securely latched.
4. **Start Vacuum & Seal:** Press the "**Vacuum & Seal**" button. The appliance will automatically remove air from the bag and then initiate the sealing process. The LED indicator will illuminate during operation.
5. **Monitor Progress:** The LED indicator will turn off once the vacuuming and sealing process is complete.
6. **Release and Remove:** Press the release buttons (often located on the sides or front) to open the lid. Carefully remove the sealed bag.



Figure 2: The Sweet Alice Vacuum Sealer in operation, demonstrating how to position a bag filled with vegetables for vacuum sealing.

5.3 Seal Only Function

This function is used to create a seal without vacuuming, ideal for making custom-sized bags from a roll or sealing delicate items.

1. **Position the Bag:** Place the open end of the bag directly over the sealing bar.
2. **Close the Lid:** Press down firmly on both sides of the lid until it latches.
3. **Start Sealing:** Press the "**Seal Only**" button. The LED indicator will illuminate.
4. **Monitor Progress:** The LED indicator will turn off when the seal is complete.
5. **Release and Remove:** Open the lid and carefully remove the sealed bag.

5.4 Stop Function

The "**Cancel**" button can be pressed at any time to stop the current operation (vacuuming or sealing).

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your vacuum sealer.

- **Unplug:** Always unplug the appliance from the power outlet before cleaning.

- **Cool Down:** Allow the appliance to cool completely, especially the sealing bar, before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Sealing Bar:** Gently wipe the sealing bar with a dry cloth. Do not scratch or damage the heating element.
- **Vacuum Channel:** If any liquid or food particles enter the vacuum channel, wipe them clean with a damp cloth and dry thoroughly.
- **Storage:** Store the appliance in a clean, dry place with the lid unlatched to prevent compression of the sealing gaskets, which can affect performance over time.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged into a working outlet.
Bag does not vacuum properly.	Bag not positioned correctly; lid not latched; bag has holes; moisture in bag.	Ensure bag opening is fully inside the vacuum channel. Press lid firmly until latched. Check bag for damage. Pre-freeze moist foods or use a paper towel.
Bag does not seal.	Sealing bar dirty or damaged; bag not positioned correctly; too much moisture.	Clean the sealing bar. Ensure bag is flat across the sealing bar. Remove excess moisture.
Air leaks into bag after sealing.	Improper seal; sharp edges on food; bag material issue.	Reseal the bag. Ensure no food particles are on the sealing area. Pad sharp food items. Use high-quality vacuum sealer bags.

8. SPECIFICATIONS

Model: 002403

Brand: Sweet Alice

Power: 110 Watts

Voltage: 110 Volts

Material: Metal

Weight: 1.5 Kilograms

Dimensions (L x H): 38 cm x 7.5 cm

Operating Mode: Automatic

Color: White

Compatible Bag Thickness: 0.2mm to 0.29mm

Functions: Vacuum Only, Vacuum & Seal, Stop

9. WARRANTY AND SUPPORT

Sweet Alice products are manufactured to the highest quality standards. For any questions, technical support, or warranty claims, please contact Sweet Alice customer service through the retailer where the product was

purchased or refer to the contact information provided on the product packaging or official Sweet Alice website. Please retain your proof of purchase for warranty purposes.