

[Manuals.plus](#) /

› [Mattel](#) /

› Mattel Disney Princess Cinderella Doll (Model HLW06) Instruction Manual

Mattel HLW06

Mattel Disney Princess Cinderella Doll

MODEL: HLW06

1. Introduction

This instruction manual provides important information regarding the Mattel Disney Princess Cinderella Doll. This posable fashion doll is inspired by the beloved Disney movie character, Cinderella. The doll features a sparkling outfit, removable skirt, headband, and shoes, allowing for imaginative play. Please read this manual thoroughly before use and retain it for future reference.



Image 1: Mattel Disney Princess Cinderella Doll

2. What's in the Box

Your Mattel Disney Princess Cinderella Doll package includes the following items:

- 1 x Cinderella Doll
- 1 x Sparkling Fashion Outfit (bodice and skirt)
- 1 x Headband
- 1 x Pair of Shoes

3. Setup

The Cinderella doll comes pre-assembled and ready for play. No additional assembly is required.

1. **Unboxing:** Carefully remove the doll and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Accessory Attachment:** The doll's headband and shoes are removable. To attach, gently slide the headband onto the doll's head and the shoes onto her feet.



Image 2: Child interacting with the Cinderella doll.

4. Operating Instructions

The Cinderella doll is designed for imaginative play. Its posable features allow for various storytelling scenarios.

- **Posing the Doll:** The doll features articulated arms and legs, allowing for movement and posing. Gently move the limbs to position the doll as desired.
- **Changing Outfits:** The doll's skirt is removable. To remove, gently pull the skirt downwards. To re-dress, slide the skirt back up the doll's legs. The bodice is molded onto the doll and is not removable.
- **Hair Styling:** The doll features an elegant updo. Hair can be gently styled, but excessive brushing or harsh treatment may cause tangling.



New Look for 2025!

Image 3: Close-up of the doll's sparkling bodice and removable skirt.





Image 4: Detailed view of the doll's face and headband.



Image 5: Detailed view of the doll's shoes and skirt pattern.

5. Maintenance

- **Cleaning:** To clean the doll, wipe with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Allow to air dry completely.
- **Hair Care:** For best results, gently comb the doll's hair with a wide-tooth comb. Avoid excessive force to prevent tangling or damage.
- **Storage:** Store the doll and its accessories in a clean, dry place away from direct sunlight and extreme temperatures to prevent damage or discoloration.

6. Troubleshooting

- **Tangled Hair:** If the doll's hair becomes tangled, gently detangle it using a wide-tooth comb, starting from the ends and working your way up to the roots. A small amount of doll-safe conditioner or water can assist.
- **Loose Accessories:** If accessories become loose, ensure they are properly attached. Small parts can be easily misplaced, so keep them in a designated container when not in use.

7. Specifications

Feature	Detail
Brand	Mattel
Model Name	Disney Princess Cinderella Doll
Model Number	HLW06
UPC	194735120253
Item Dimensions (L x W x H)	3"L x 2"W x 11"H
Item Weight	0.33 Pounds
Material Type	Plastic
Manufacturer Minimum Age	36 Months
Additional Features	Posability

8. Safety Information

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

Always supervise young children during play to prevent accidental ingestion of small parts. Ensure all accessories are securely attached or stored away when not in use.

9. Warranty and Support

This product is sold without a manufacturer's warranty. For any product-related inquiries or support, please contact Mattel customer service directly.

10. Product Videos

Cinderella Doll Review

Your browser does not support the video tag.

Video 1: A review showcasing the Mattel Disney Princess Cinderella Doll, highlighting its features and appearance.

Disney Princess Royal Shimmer Cinderella Doll Review

Your browser does not support the video tag.

Video 2: An honest review of the Disney Princess Royal Shimmer Cinderella Doll, demonstrating its quality and playability.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question