

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Geek Smart](#) /

› [Geek Smart L-B400 Fingerprint Door Lock Instruction Manual](#)

Geek Smart 400

Geek Smart L-B400 Fingerprint Door Lock Instruction Manual

Model: L-B400

PRODUCT OVERVIEW

The Geek Smart L-B400 Fingerprint Door Lock offers advanced keyless entry solutions for enhanced home security and convenience. This smart door knob combines multiple unlocking methods including fingerprint recognition, passcode, RFID card, emergency key, and mobile application control. Designed for easy, wire-free installation, it integrates modern technology with a sleek design.



Image: Front view of the Geek Smart L-B400 Fingerprint Door Lock, showcasing its modern black and silver design.

SETUP AND INSTALLATION

The Geek Smart L-B400 is designed for quick and easy installation, typically within 15 minutes using only a screwdriver. Follow these steps to replace your existing lock with the smart lock.

1. Prepare Your Door

Ensure your door meets the required dimensions for installation. The lock is suitable for door thicknesses between 35mm and 54mm (1 1/8" to 2 1/8").

Easy Installed In One Cup Of Coffee

Easy DIY Install & Set-Up, Suitable For Most Doors.

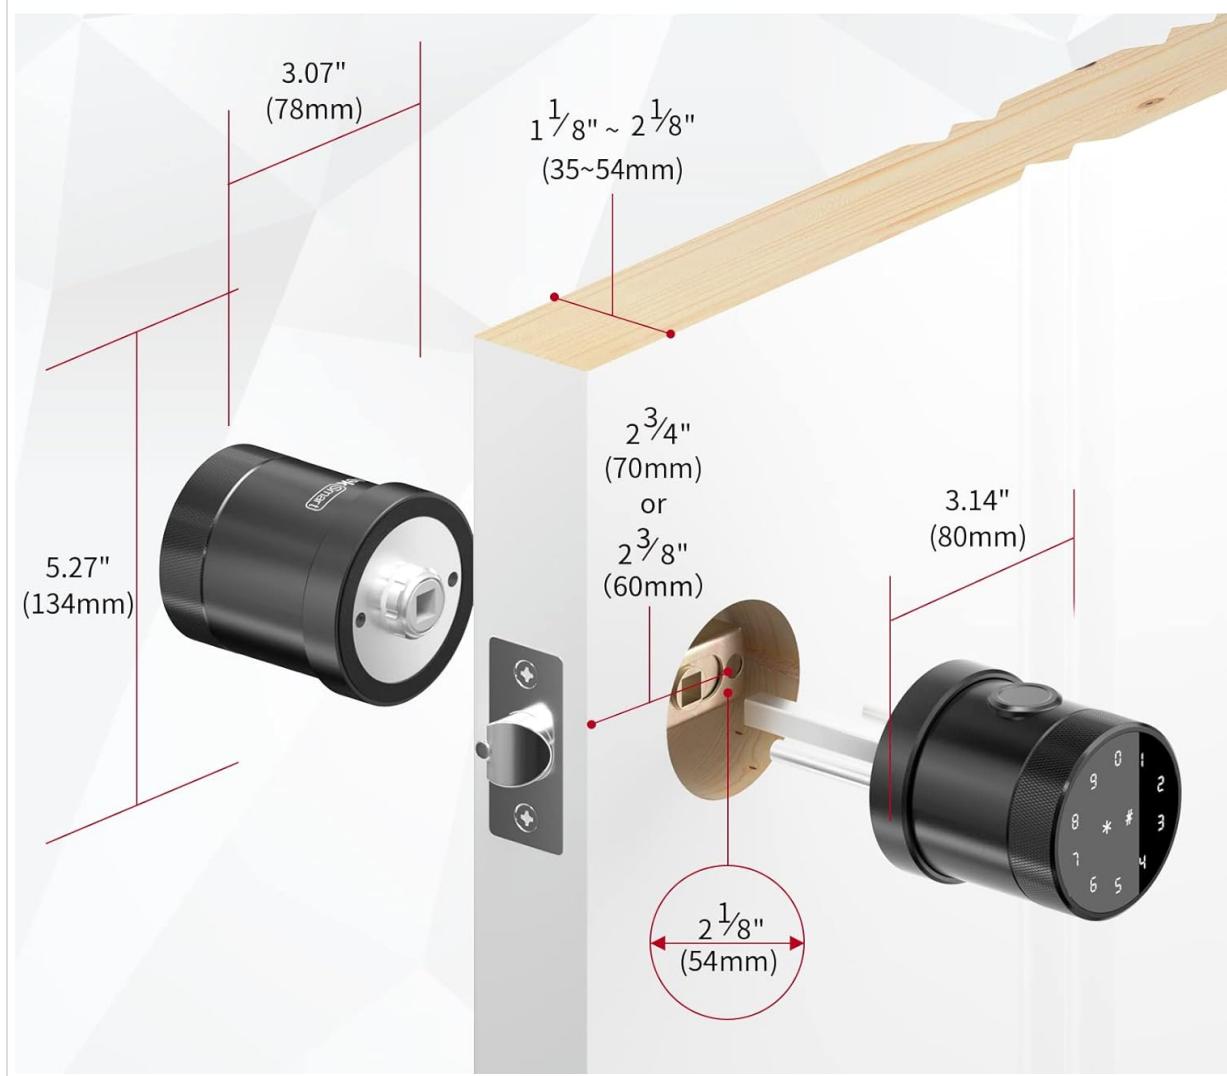


Image: Diagram showing door measurements required for installing the Geek Smart L-B400 lock, including thickness, backset, and bore hole diameter.

2. Install the Latch

Insert the deadlatch into the door edge. Ensure the latch direction matches your door's opening direction. Secure it with screws.

3. Assemble and Install the Exterior Panel

Connect the spindle and wiring to the exterior lock panel. Carefully feed the wiring through the door bore hole and align the spindle with the latch mechanism. Secure the exterior panel.

Your browser does not support the video tag.

Video: Official installation guide for the Geek Smart L-B400 door lock, demonstrating step-by-step assembly and mounting.

4. Install the Interior Panel

Connect the wiring from the exterior panel to the interior panel. Ensure the battery compartment is correctly oriented (button on top, socket at the bottom). Insert 4x AA batteries (not included) and secure the interior panel with screws.



GEEK SMART FINGERPRINT DOOR LOCK

Creating a Securer, Smarter and More Convenient Home Life



5-in-1 unlock ways



One-Time Passcode Sharing



Checking Unlock Records



App Control



Remote Control



Auto-Lock



Image: A person installing the Geek Smart L-B400 lock using a screwdriver, highlighting the ease of replacement for existing locks.

5. Initial Setup with Geek Smart App

Download the Geek Smart app from your mobile app store. Enable Bluetooth on your device. Open the app, tap "Add Device," select "Smart Lock," then choose "L-B400." Follow the on-screen prompts to register your lock and set up the administrator.

Your browser does not support the video tag.

Video: Tutorial on how to connect the Geek Smart L-B400 to the mobile application, guiding users through the device pairing process.

OPERATING INSTRUCTIONS

The Geek Smart L-B400 offers five convenient ways to unlock your door:

1. Fingerprint Unlock

Place your registered fingerprint on the sensor for instant access. The highly accurate sensor unlocks the door within 0.3 seconds and can store up to 120 unique fingerprints.

Keyless, Key Your Finger

Highly Sensitive Fingerprint Identification Sensor, One Touch Unlcok



Fingerprint Store
120Pcs



Read Speed
0.3S

Image: Robotic hand demonstrating the fingerprint unlock feature on the Geek Smart L-B400, highlighting its speed and capacity.

2. Passcode Unlock

Enter your personalized passcode on the intuitive LED touchscreen keypad. The anti-peep code feature allows you to enter random digits before or after your actual code to prevent password disclosure.

Secure Anti-peep Code

Random Digits Help Preventing Password Disclosure



Image: Close-up of the Geek Smart L-B400 keypad, illustrating the anti-peep code function with random digits surrounding the correct password.

3. RFID Card Unlock

Tap your registered RFID card on the lock's sensor for quick and secure entry.

4. Mobile Application Control

Use the Geek Smart app to unlock your door remotely, manage users, generate one-time passcodes for visitors, and view access logs. For remote control beyond Bluetooth range, a Geek Smart WiFi Gateway (sold separately) is required.

Smarter App Connect



Share your password with colleagues, family and nanny. View unlocking records.

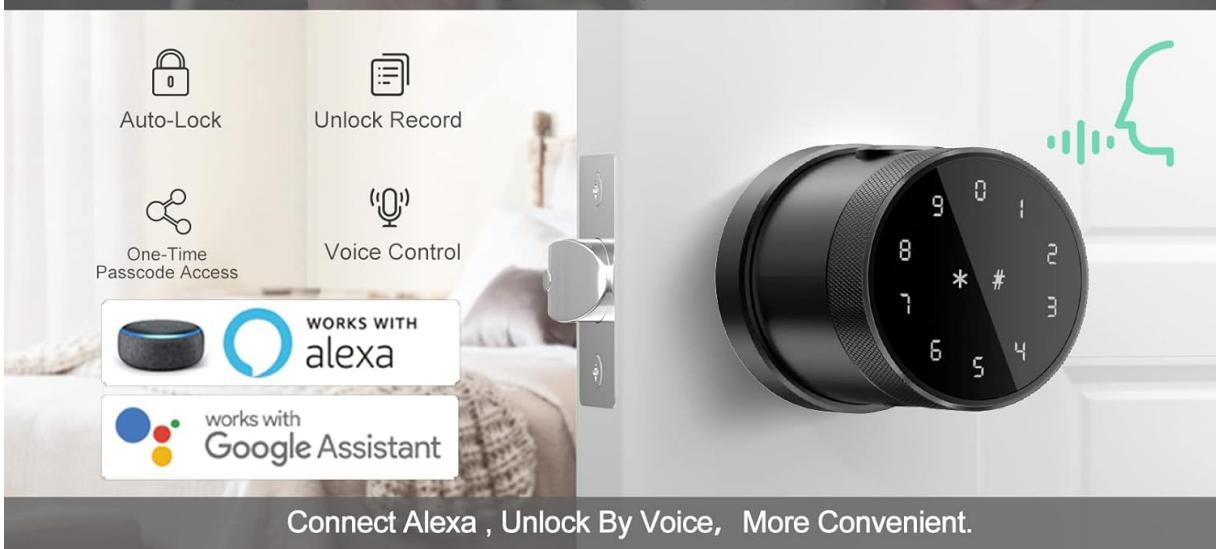


Image: A smartphone displaying the Geek Smart app interface, showing options for auto-lock, unlock record, one-time passcode access, and voice control integration with Alexa and Google Assistant.

5. Emergency Key Unlock

In case of battery depletion or electronic malfunction, use the provided mechanical emergency key to unlock the door. A micro-USB port is also available for emergency power supply.

Keyless Your Home

5-IN-1 UNLOCK WAYS, No Worry About Forgetting To Bring The Key



Image: Infographic illustrating the five-in-one unlock methods for the Geek Smart L-B400: Fingerprint, App Bluetooth, Password, Keys, and Smart IC Cards.

MAINTENANCE

To ensure optimal performance and longevity of your Geek Smart L-B400 door lock, regular maintenance is recommended:

- **Battery Replacement:** The lock uses 4x AA batteries. The app will provide low battery notifications. Replace batteries promptly to avoid being locked out.
- **Emergency Power:** In case of complete battery depletion, use a micro-USB power bank to temporarily power the lock and gain entry.
- **Cleaning:** Gently wipe the touchscreen keypad and fingerprint sensor with a soft, dry cloth to remove dust and smudges. Avoid abrasive cleaners.
- **Firmware Updates:** Check the Geek Smart app regularly for any available firmware updates to ensure your lock has the latest features and security enhancements.

TROUBLESHOOTING

If you encounter issues with your Geek Smart L-B400 lock, consider the following:

- **Lock Not Responding:** Check battery levels. If batteries are low or depleted, replace them or use emergency micro-USB power.
- **Fingerprint Not Recognized:** Ensure your finger is clean and dry. Try re-registering your fingerprint through the app.
- **Passcode Entry Issues:** Verify the correct passcode is being entered. Ensure the keypad is clean and responsive.
- **App Connectivity Problems:** Ensure Bluetooth is enabled on your phone and you are within range. If using remote unlock, verify your WiFi Gateway is properly connected and configured.
- **Lock Binding/Sticking:** Ensure the lock was installed correctly and is not overtightened, which can cause binding. Refer to the installation guide or contact customer support.

For further assistance, please refer to the "Warranty and Support" section.

SPECIFICATIONS

Feature	Detail
Brand	Geek Smart
Model	400
Special Feature	Anti Lock, Fingerprint, Smart Lock, Wi-Fi
Lock Type	Biometric, Keypad
Material	Aluminum
Color	Black
Connectivity Protocol	Wi-Fi (with optional gateway)
Power Source	4x AA Batteries (not included)
Item Weight	2.97 pounds
Door Thickness	1 1/8" ~ 2 1/8" (35-54mm)

WARRANTY AND SUPPORT

The Geek Smart L-B400 Fingerprint Door Lock comes with a **1-year warranty**. For any problems or inquiries, please feel free to contact Geek Smart customer service.

Email: aftersales@geektechnology.com

You can also scan the QR code on the "Geek Smart Care+ For Free" card included in your package for more information.