

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Disney Mickey Mouse Analog Watch MK1080 User Manual

Accutime MK1080

Accutime Disney Mickey Mouse Analog Watch MK1080 User Manual

Model: MK1080

1. INTRODUCTION

This manual provides instructions for the Accutime Disney Mickey Mouse Analog Fashion Watch, model MK1080. This watch features a classic analog display with Arabic numerals and a durable silicone strap, designed for everyday wear.

Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your watch.



Image 1: The Accutime Disney Mickey Mouse Watch packaging box. The box is black with a subtle pattern and the Disney logo in white on top.

2. SETUP

2.1 Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards until you feel a click. This is the time-setting position.
3. Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
4. Once the correct time is set, push the crown back into its original position against the watch case. The watch will begin to run.

Note: Ensure the crown is fully pushed in to maintain water resistance and prevent dust entry.

3. OPERATING THE WATCH

3.1 Wearing the Watch

The watch features a two-piece silicone strap with a buckle closure. Adjust the strap to fit comfortably around your wrist, ensuring it is not too tight or too loose. Secure the buckle by inserting the pin into the appropriate hole.



Image 2: The Accutime Disney Mickey Mouse Watch worn on a wrist. The watch has a silver-tone case, a white dial with Mickey Mouse, and a black silicone strap.

3.2 Reading the Time

The watch displays time using traditional hour and minute hands. The shorter hand indicates the hour, and the longer hand indicates the minute. The dial features Arabic numerals from 1 to 12 for easy readability.

4. MAINTENANCE

4.1 Cleaning

- Wipe the watch case and strap with a soft, dry cloth regularly to remove dust and dirt.
- For stubborn marks on the silicone strap, a slightly damp cloth with mild soap can be used, followed by thorough drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

4.2 Battery Replacement

The watch is powered by a product-specific battery (included). When the watch stops running or the time becomes inaccurate, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and functionality.

4.3 General Care

- Avoid exposing the watch to extreme temperatures (hot or cold).
- While the watch may have some resistance to splashes, it is not designed for swimming or showering. Avoid prolonged contact with water.
- Protect the watch from strong impacts or drops, which can damage the internal movement or crystal.
- Keep the watch away from strong magnetic fields, as these can affect the accuracy of the quartz movement.

5. TROUBLESHOOTING

- **Watch Not Running:**
 - Ensure the crown is fully pushed in against the watch case.
 - The battery may be depleted. Refer to Section 4.2 for battery replacement.
- **Time is Incorrect:**
 - Reset the time according to Section 2.1.
 - If the time continues to be inaccurate after resetting, the battery may be low or the movement may require servicing.

- **Condensation Under Crystal:**

- This indicates moisture has entered the watch. Avoid further contact with water and seek professional service immediately to prevent damage to the movement.

For issues not covered here, please contact Accutime customer support or a qualified watch repair service.

6. SPECIFICATIONS

Feature	Detail
Model Number	MK1080
Brand	Accutime
Movement Type	Quartz
Display Type	Analog
Case Material	Metal
Case Diameter	32 Millimetres
Case Thickness	9 Millimetres
Band Material	Silicone
Band Width	15 Millimetres
Band Length	8 Inches
Crystal Material	Glass
Closure Type	Buckle
Power Source	Battery Powered (1 Product Specific battery included)
Product Dimensions	7 x 7.6 x 7.6 cm; 145 g

7. WARRANTY INFORMATION

Specific warranty details for the Accutime Disney Mickey Mouse Analog Watch (MK1080) are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or contact Accutime directly.

8. CUSTOMER SUPPORT

If you require further assistance, have questions about your watch, or need to arrange for service, please contact Accutime customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

