

[Manuals.plus](#) /

> [tectake](#) /

> tectake Poly Rattan Garden Lounger with Wheels (Model 404585) - Instruction Manual

tectake 404585

tectake Poly Rattan Garden Lounger with Wheels

MODEL: 404585

Introduction

Thank you for choosing the tectake Poly Rattan Garden Lounger with Wheels. This manual provides essential information for the safe assembly, operation, and maintenance of your new garden lounger. Please read these instructions carefully before use and retain them for future reference.

This lounger is designed to provide comfort and relaxation in outdoor settings such as gardens, patios, and balconies. It features a durable poly rattan weave, a sturdy steel frame, and a 6-position adjustable backrest for personalized comfort. Integrated wheels allow for easy repositioning.

Safety Information

- **Maximum Load Capacity:** Do not exceed the maximum weight capacity of **120 kg (264 lbs)**. Exceeding this limit may cause damage to the lounger and lead to injury.
- Ensure the lounger is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the lounger during assembly to avoid injury from small parts.
- Do not stand on the lounger or use it as a step stool.
- Regularly check all bolts and connections to ensure they remain tight.
- Avoid exposing the lounger to extreme weather conditions for prolonged periods without protection to extend its lifespan.

Package Contents

Please verify that all components are present before beginning assembly:

- 1 x tectake Poly Rattan Garden Lounger frame

- 1 x Soft cushion
- 1 x Head pillow
- Assembly hardware (screws, washers, tools)
- 1 x Assembly instruction manual


Specifications

Feature	Detail
Model Number	404585 (also known as 800077)
Overall Dimensions (L x W x H)	200 cm x 70 cm x 33 cm (78.7 in x 27.6 in x 13 in)
Lying Surface Dimensions	198 cm x 54 cm (78 in x 21.3 in)
Armrest Height (from floor)	57 cm (22.4 in)
Cushion Thickness	5 cm (2 in)
Weight	15 kg (33 lbs)
Maximum Load Capacity	120 kg (264 lbs)
Materials	Powder-coated alloy steel frame, UV-resistant poly rattan weave, polyester cushion
Adjustable Positions	6 backrest positions
Special Features	Rubberized wheels, removable and washable cushion cover, easy to clean



tectake
garden




 **Comfortabele kussens**
en extra hoofdkussens voor
maximale ontspanning

 **Zeer mobiel**
dankzij de 2 rubberen en
soepel rollende wielen

 **Stevig stalen frame**
met roestvrije schroeven
van robuust staal

 **Flexibele rugleuning**
met 6 verstelbare hoeken
voor persoonlijk comfort

 **Hoogwaardig wicker**
zorgvuldig verwerkt en
extreem duurzaam


 **Enorme draagkracht**
met een draagvermogen
van maximaal 120 kg

Image: A diagram illustrating the key dimensions of the lounge: total length 200 cm, width 70 cm, height 33 cm, lying area 54 x 198 cm, cushion thickness 5 cm, armrest height 57 cm.

Assembly Instructions

Assembly is required for this product. Please follow the included assembly manual carefully. It is recommended to assemble the lounge with two people.

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Check against the package contents list.
- Assemble Frame:** Connect the main frame sections using the provided screws and tools. Do not fully tighten screws until all parts are loosely assembled.
- Attach Wheels:** Securely attach the rubberized wheels to the designated points on the frame.
- Install Backrest Mechanism:** Attach the adjustable backrest mechanism according to the diagrams in the separate assembly manual. Ensure it moves freely and locks into positions.
- Tighten All Screws:** Once all parts are in place, gradually tighten all screws evenly. Do not overtighten.
- Place Cushions:** Position the main cushion and head pillow onto the lounge.



Image: An illustration showing the lounger's frame, adjustable backrest, and wheels, indicative of the assembly process.


Operating Instructions

Your tectake Garden Lounger is designed for ease of use and comfort.

- **Adjusting the Backrest:** To adjust the backrest, gently lift the backrest section. It will click into one of the 6 available positions. To lower it, lift it to its highest point, then push it down to the desired lower position. Ensure it is securely locked before use.
- **Moving the Lounger:** The lounger is equipped with two rubberized wheels at the head end. To move the lounger, slightly lift the foot end and push or pull it using the wheels. The non-slip armrests can also assist in guiding the lounger.
- **Using the Cushions:** The soft polyester cushion and head pillow provide enhanced comfort. The head pillow is removable and can be adjusted for personal preference.

SLIM Design

De 6-voudig verstelbare rugleuning en het comfortabele, afneembare hoofdkussen bieden je hoog comfort voor pure ontspanning.

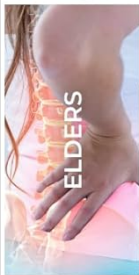

Bij ons:
fijne kussens

5 cm



Bij ons:
100 % roestvrij



Image: A visual representation of the lounge's backrest being adjusted, highlighting its 6 reclining positions.



De in 6 standen verstelbare rugleuning garandeert individuele ontspanning – zowel zittend als liggend.



Het fijn afgewerkte vlechtwerk van hoogwaardig wicker is uitermate duurzaam en slijtvast



De voeten met kunststof doppen en de 2 grote wielen maken de ligstoel zowel stabiel als mobiel.



De onderhoudsvriendelijke hoes is waterafstotend en dankzij de ritsen verwijderbaar en wasbaar.

Image: Close-up views of the lounge's features, including the durable poly rattan weave, the rubberized wheels for easy movement, and the waterproof cushion fabric.

Maintenance

Proper care will ensure the longevity and appearance of your garden lounge.

- **Cleaning the Frame and Rattan:** Wipe the poly rattan weave and steel frame with a damp cloth and mild soap. Rinse thoroughly with clean water and dry completely. Avoid using harsh chemicals or abrasive cleaners.
- **Cushion Care:** The polyester cushion cover is waterproof and can be easily removed using the zipper. It is machine washable at a low temperature (follow care label instructions). Air dry the cover; do not tumble dry.
- **Weather Protection:** Although the lounge is weather-resistant, prolonged exposure to harsh weather conditions (heavy rain, snow, strong UV radiation) can affect its lifespan. We recommend using a protective cover when not in use or storing it indoors during off-season.
- **Regular Inspection:** Periodically check all screws and connections for tightness and re-tighten if necessary.

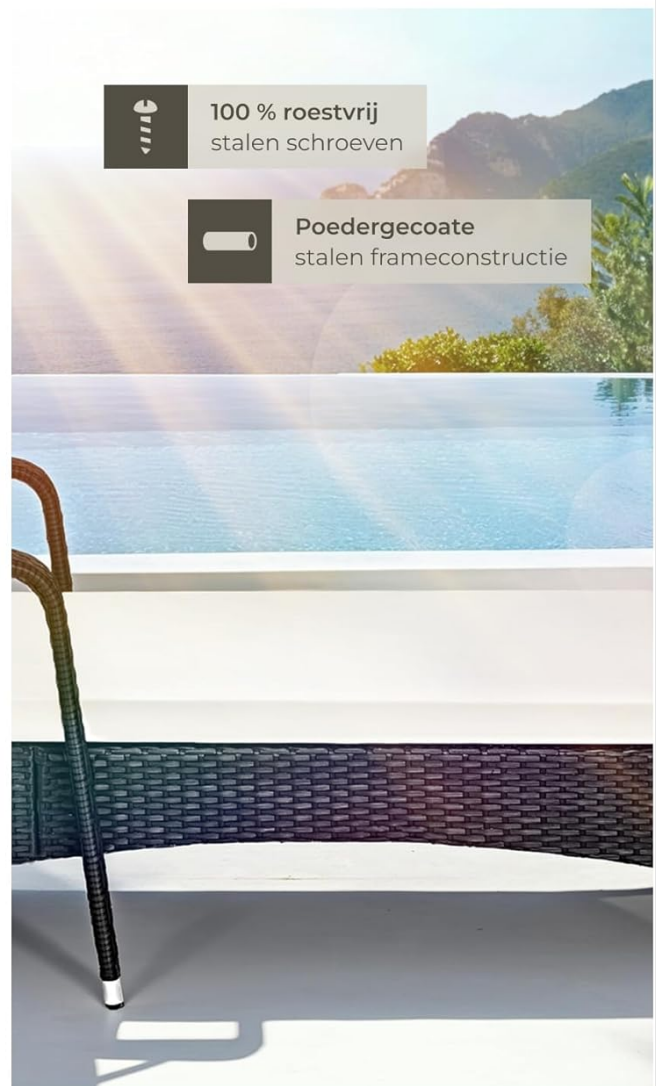


Image: A close-up of the waterproof cushion cover, showing the zipper for easy removal and cleaning.

WIND- & Weerbestendig



Waterafstotend



100 % roestvrij
stalen schroeven

Poedergecoate
stalen frameconstructie

Image: An illustration demonstrating the lounge's resistance to various weather conditions, including rain, wind, and sun, highlighting its durable construction.

Troubleshooting

- **Difficulty Adjusting Backrest:** Ensure no obstructions are present in the adjustment mechanism. Apply a small amount of silicone spray to moving parts if stiffness occurs.

- **Lounger Feels Unstable:** Check that all assembly screws are securely tightened. Ensure the lounger is on a flat, even surface.
- **Rattan Damage:** Small fraying can be carefully trimmed. For significant damage, contact customer support.

Warranty and Support

tectake products are manufactured with quality and durability in mind. For information regarding warranty coverage, please refer to the purchase documentation or contact tectake customer support directly. Our support team is available to assist with any questions or concerns you may have regarding your product.

For assistance, please visit the official tectake website or contact your retailer.

© 2024 tectake. All rights reserved.
For more information, visit www.tectake.de